

# Installation Instructions

for use by heating contractor



## Plate Heat Exchanger and Gasket Set

Part number: 7828746 Plate Heat Exchanger

Part number: 7828747 Gasket Set

for use with: Vitodens 100-W B1KA

### Safety and Installation Requirements

Please ensure that these instructions are read and understood before starting any service work. Failure to comply with these instructions may cause product/property damage, severe personal injury and/or loss of life.

#### Working on the equipment

The installation, adjustment, service and maintenance of this product must be performed by a licensed professional heating contractor who is qualified and experienced in the installation, service, and maintenance of hot water boilers. There are no user serviceable parts on the boiler, burner or control.

Ensure that main power to the equipment being serviced is off.

Ensure that the main fuel supply valve to the boiler is closed.


Take precautions to avoid accidental activation of power or fuel during service work.

Do not perform service work on any component part without ensuring safe operation of the heating system. When replacing parts, use original Viessmann or Viessmann approved replacement parts.



Refer to the Installation and Service Instructions applicable to this boiler.

### Removing the Front Panel

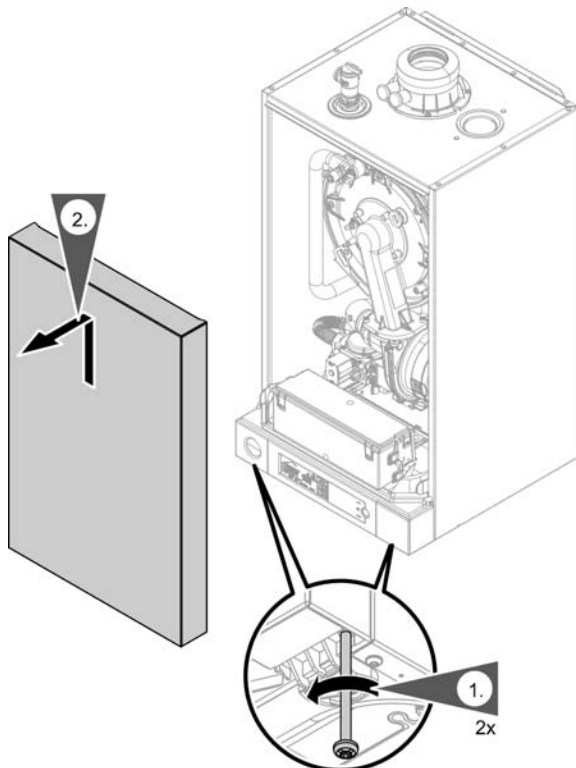

1. Loosen retaining screws (do not remove completely).
2. Remove front panel.


Printed on environmentally friendly (recycled and recyclable) paper.



Technical information subject to change without notice.

5792 848 - 01

## Replacing the Plate Heat Exchanger

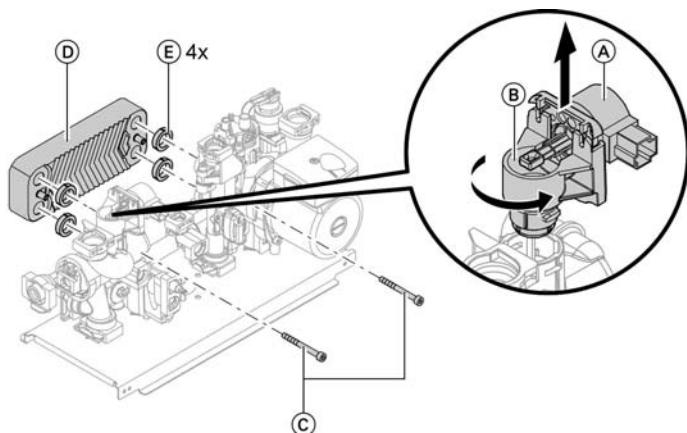

### IMPORTANT

**Residual water may leak out during disassembly.**


1. Isolate or drain water from the heat exchanger.
2. Press the retaining tabs and fold down the control.
3. Push the step motor (A) up slightly.
4. Twist the step motor with the adaptor one eighth turn counter clock wise and remove.
5. Remove 2 screws (C) from the plate heat exchanger (D) and remove with gaskets.
6. Install new gaskets (E) and/or plate heat exchanger (D) in reverse order.  
Torque screws to 48 lb.in (5.5 Nm).  
**Note:** During installation, ensure the orientation of the screw holes and proper seating of the gaskets.

### IMPORTANT

**Note the "top" marking on the plate heat exchanger.**

7. Reassemble boiler in reverse order.
8. Fill boiler with water, purge air and test for leaks.

## Reinstalling the Front Panel

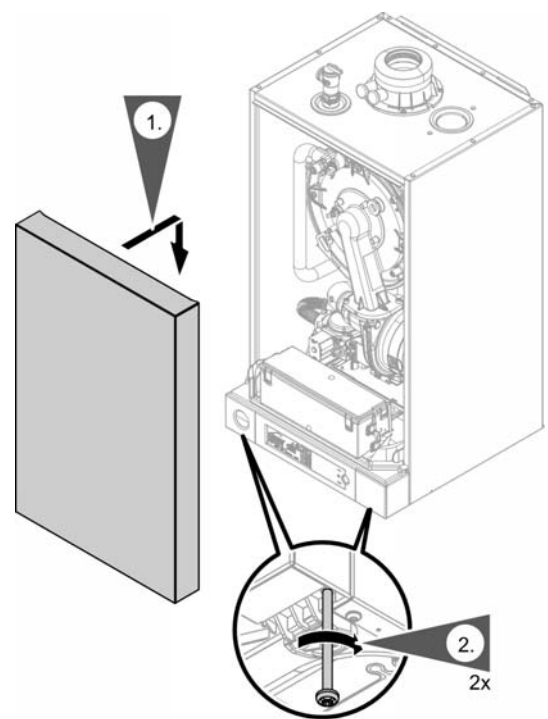

1. Install the front panel.
2. Tighten the screws at the bottom of the boiler.

Viessmann Manufacturing Company Inc.  
750 McMurray Road  
Waterloo, Ontario • N2V 2G5 • Canada  
TechInfo Line 1-888-484-8643  
1-800-387-7373 • Fax (519) 885-0887  
www.viessmann.ca • info@viessmann.ca

Viessmann Manufacturing Company (U.S.) Inc.  
45 Access Road  
Warwick, Rhode Island • 02886 • USA  
TechInfo Line 1-888-484-8643  
1-800-288-0667 • Fax (401) 732-0590  
www.viessmann-us.com • info@viessmann-us.com