

Vitodens 222-F

Type B2TF, 1.9 to 32 kW

Gas condensing storage combi boiler with 7 inch colour touchscreen


Natural gas and LPG version




VITODENS 222-F



Safety instructions


-  Please follow these safety instructions closely to prevent accidents and material losses.

Safety instructions explained

-  **Danger**
This symbol warns against the risk of injury.

Note

Details identified by the word "Note" contain additional information.

-  **Please note**
This symbol warns against the risk of material losses and environmental pollution.

Target group

These instructions are exclusively intended for qualified contractors.

- Work on gas installations may only be carried out by a registered gas fitter.
- Work on electrical equipment may only be carried out by a qualified electrician.
- The system must be commissioned by the system installer or a qualified person authorised by the installer.

Regulations to be observed

- National installation regulations
- Statutory regulations for the prevention of accidents
- Statutory regulations for environmental protection
- Codes of practice of the relevant trade associations
- Relevant country-specific safety regulations

Safety instructions for working on the system

Working on the system

- Where gas is used as the fuel, close the main gas shut-off valve and safeguard it against unintentional reopening.
- Isolate the system from the power supply, e.g. by removing the separate fuse or by means of a mains isolator, and check that it is no longer live.
- Safeguard the system against reconnection.
- Wear suitable personal protective equipment when carrying out any work.

Safety instructions (cont.)**Danger**

Hot surfaces and fluids can lead to burns or scalding.

- Before maintenance and service work, switch OFF the appliance and let it cool down.
- Never touch hot surfaces on the boiler, burner, flue system or pipe-work.

**Please note**

Electronic assemblies can be damaged by electrostatic discharge. Prior to commencing work, touch earthed objects such as heating or water pipes to discharge static loads.

Auxiliary components, spare and wearing parts**Please note**

Spare and wearing parts that have not been tested together with the system can compromise its function. Installing non-authorised components and making non-approved modifications or conversions can compromise safety and may invalidate our warranty. For replacements, use only original spare parts supplied or approved by Viessmann.

Repair work**Please note**

Repairing components that fulfil a safety function can compromise the safe operation of the system. Replace faulty components only with genuine Viessmann spare parts.

Safety instructions for operating the system

If you smell gas



Danger

Escaping gas can lead to explosions which may result in serious injury.

- Do not smoke. Prevent naked flames and sparks. Never switch lights or electrical appliances on or off.
- Close the gas shut-off valve.
- Open windows and doors.
- Evacuate any people from the danger zone.
- Notify your gas or electricity supply utility from outside the building.
- Have the power supply to the building shut off from a safe place (outside the building).

If you smell flue gas



Danger

Flue gas can lead to life threatening poisoning.

- Shut down the heating system.
- Ventilate the installation site.
- Close doors to living spaces to prevent flue gases from spreading.

What to do if water escapes from the appliance



Danger

If water escapes from the appliance there is a risk of electrocution. Switch OFF the heating system at the external isolator (e.g. fuse box, domestic distribution board).



Danger

If water escapes from the appliance there is a risk of scalding. Never touch hot heating water.

Condensate



Danger

Contact with condensate can be harmful to health.

Never let condensate touch your skin or eyes and do not swallow it.

Flue systems and combustion air

Ensure that flue systems are clear and cannot be sealed, for instance due to accumulation of condensate or other external causes.

Ensure an adequate supply of combustion air.

Inform system users that subsequent modifications to the building characteristics are not permissible (e.g. cable/pipe-work routing, cladding or partitions).



Danger

Leaking or blocked flue systems, or an inadequate supply of combustion air can cause life threatening poisoning from carbon monoxide in the flue gas.

Ensure the flue system is in good working order. Vents for supplying combustion air must be non-sealable.

Extractors

Operating appliances that exhaust air to the outside (extractor hoods, extractors, air conditioning units, etc.) can create negative pressure. If the boiler is operated at the same time, this can lead to a reverse flow of flue gas.

Safety instructions (cont.)**Danger**

The simultaneous operation of the boiler and appliances that exhausts air to the outside can result in life threatening poisoning due to a reverse flow of flue gas.

Fit an interlock circuit or take suitable steps to ensure an adequate supply of combustion air.

1. Information	Disposal of packaging	8
	Symbols	8
	Intended use	8
	Product information	9
	■ Vitodens 222-F, type B2TF	9
	System examples	9
	Spare parts lists	9
2. Preparing for installation	Handling	10
	Siting in recesses	10
	Relocating the ON/OFF switch and electrical connections (if necessary)	10
	Preparing for boiler installation	11
	■ Safety assembly to DIN 1988 and EN 806	14
3. Installation sequence	Siting the boiler	15
	■ Type plate	15
	Removing the front panel	16
	Connections on the heating water and DHW sides	17
	■ DHW circulation connection (potable water)	17
	Filling the trap with water	17
	Flue gas connection	18
	Gas connection	19
	Electrical connections	20
	■ Opening the HMU wiring chamber	20
	■ On-site connections to the HMU heat management unit	21
	■ Outside temperature sensor 1	21
	■ Connecting the low loss header sensor 9	21
	■ Connecting the circulation pump to P2	22
	■ Floating switching contact connection	22
	■ Checking the CAN bus terminator switch setting	22
	■ Power supply for accessories at plug 96 / 156 (230 V ~)	23
	■ Power supply 40	25
	■ WiFi operational reliability and system requirements	25
	■ Routing connecting cables/leads	26
	Closing the wiring chamber	26
	Fitting the front panel and programming unit	27
4. Commissioning, inspection, maintenance	Steps - commissioning, inspection and maintenance	28
5. System configuration (parameters)	Calling up parameters	59
	General	59
	Boiler	61
	DHW	64
	Heating circuit 1, Heating circuit 2, Heating circuit 3, Heating circuit 4 ..	65
	Subscriber numbers of connected extensions	70
6. Diagnosis and service checks	Service menu	72
	■ Service menu	72
	Changing the service password	72
	Resetting all passwords to delivered condition	73
	Diagnosis	73
	■ Checking operating data	73
	Calling up messages (message history)	73
	Checking outputs (actuator test)	74
7. Troubleshooting	Fault display on the programming unit	77
	Overview of electronics modules	78
	Fault messages	79










Index (cont.)

	Further messages	95
	■ Service messages	95
	■ Status messages	95
	■ Warning messages	95
	■ Information	96
	Repairs	96
	■ Shutting down the boiler	96
	■ Draining the boiler on the heating water side	97
	■ Checking the temperature sensors	98
	■ Information on replacing the HMU heat management unit and BCU burner control unit	100
	■ Checking the plate heat exchanger	101
	■ Removing the hydraulic unit and return pipe	102
	■ Replacing the power cable	103
	■ Checking the fuse	104
8. Function description	Control functions	105
	■ Heating mode	105
	■ Venting program	105
	■ Filling program	105
	■ Heating curve	105
	■ Screed drying	107
	■ Raising the reduced room temperature	109
	DHW heating	110
	■ Heating the DHW loading cylinder from cold	110
	■ Reheating when DHW is drawn off	110
	■ Increased DHW hygiene	111
	External heating circuit hook-up (if installed)	111
9. Connection and wiring diagram	HMU heat management unit	112
	BCU burner control unit	114
10. Commissioning/service reports	115
11. Specification	Specification	116
	Flue system types	119
	■ Gas categories	119
	Electronic combustion control unit	120
12. Disposal	Final decommissioning and disposal	121
13. Certificates	Declaration of conformity	122
	Manufacturer's certificate according to the 1st BImSchV [Germany]	122
14. Keyword index	123







Disposal of packaging

Please dispose of packaging waste in line with statutory regulations.

Symbols

Symbol	Meaning
	Reference to other document containing further information
	Step in a diagram: The numbers correspond to the order in which the steps are carried out.
	Warning of material losses and environmental pollution
	Live electrical area
	Pay particular attention.
	<ul style="list-style-type: none"> Component must audibly click into place. or Acoustic signal
	<ul style="list-style-type: none"> Fit new component. or In conjunction with a tool: Clean the surface.
	Dispose of component correctly.
	Dispose of component at a suitable collection point. Do not dispose of component in domestic waste.

The steps in connection with commissioning, inspection and maintenance are found in the "Commissioning, inspection and maintenance" section and identified as follows:

Symbol	Meaning
	Steps required during commissioning
	Not required during commissioning
	Steps required during inspection
	Not required during inspection
	Steps required during maintenance
	Not required during maintenance

Intended use

The appliance is intended solely for installation and operation in sealed unvented heating systems that comply with EN 12828, with due attention paid to the associated installation, service and operating instructions. It is only designed for heating up heating water that is of potable water quality.

Intended use presupposes that a fixed installation in conjunction with permissible, system-specific components has been carried out.

Commercial or industrial usage for a purpose other than heating the building or DHW shall be deemed inappropriate.

Any usage beyond this must be approved by the manufacturer in each individual case.

Intended use (cont.)

Incorrect usage or operation of the appliance (e.g. the appliance being opened by the system user) is prohibited and will result in an exclusion of liability. Incorrect usage also occurs if the components in the heating system are modified from their intended use (e.g. if the flue gas and ventilation air paths are sealed).

Product information

Vitodens 222-F, type B2TF

Gas condensing storage combi boiler with Inox-Radial heat exchanger and the following integrated components:

- Modulating MatriX Plus burner for natural gas and LPG
- DHW loading cylinder, 100 l capacity
- Hydraulics with 3-way diverter valve and variable speed high efficiency circulation pump
- Weather-compensated control unit
- Diaphragm expansion vessel (18 l capacity)

The selected gas category in the delivered condition and the associated nominal gas pressure are given on the boiler type plate. The type plate also shows the other gas types and pressures with which the boiler can be operated. A conversion within the stated natural gas groups is not required. For conversion to LPG (without conversion kit), see "Commissioning, inspection and maintenance".

The Vitodens 222-F can only be delivered to the countries specified on the type plate. For deliveries to other countries, approved contractors must arrange individual approval on their own initiative and in accordance with the law of the country in question.

System examples

System examples with hydraulic and electrical connection diagrams and function descriptions are available to help setting up the heating system.

Detailed information on system examples can be found at: **www.viessmann-schemes.com**

Spare parts lists

Information about spare parts can be found at **www.viessmann.com/etapp** or in the Viessmann spare part app.



Handling

- ! Please note**
Prevent damage to the appliance during handling.
Never set the appliance down on its front or sides, or apply any load to these surfaces. If possible, leave the boiler on the pallet during handling.

Siting in recesses

In the delivered condition, the ON/OFF switch and the electrical connections are located on the left-hand side of the appliance. The condensate drain can be routed out of either the right-hand or left-hand side of the appliance.

When installing in recesses, ensure that accessibility is guaranteed (recommended wall clearance 100 mm). Otherwise relocate the ON/OFF switch and electrical connections. The ON/OFF switch can be relocated to the right-hand side or the top. The electrical connections can be relocated to the right-hand side.

Relocating the ON/OFF switch and electrical connections (if necessary)

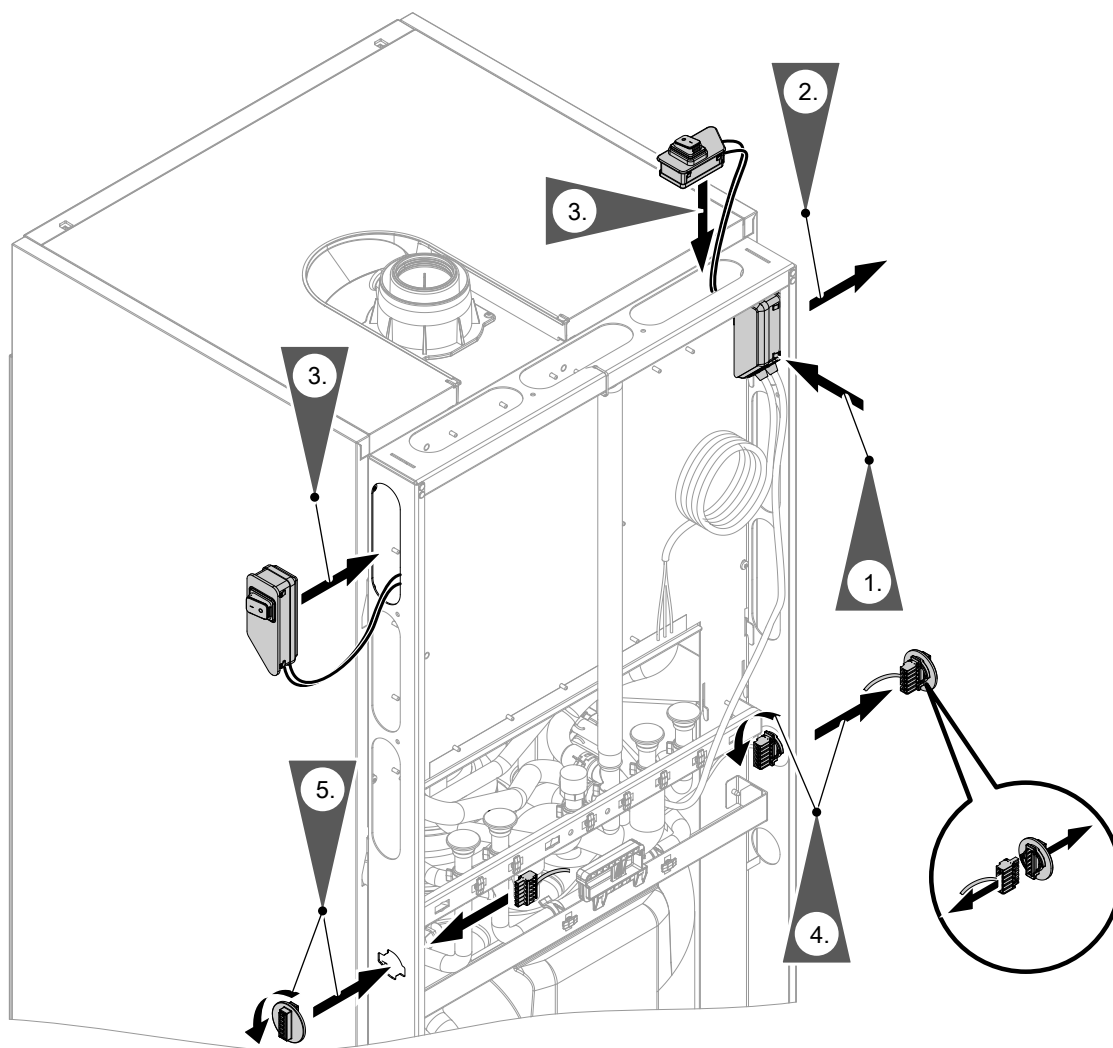


Fig. 1

Relocating the ON/OFF switch and electrical... (cont.)

Open the electrical wiring chamber of the HMU. Disconnect the cable of the ON/OFF switch and remove. See electrical connections.

1. Unclip the ON/OFF switch from the frame
2. Remove the ON/OFF switch and its cable.
3. Clip the ON/OFF switch into the corresponding opening at the top or on the right-hand side. Reconnect the cable in the HMU wiring chamber and relieve strain.
4. Release plug of electrical connections by turning it a quarter turn.
5. Insert plug into the opening on the right-hand side and secure in place by turning it a quarter turn.

Preparing for boiler installation

Use a connection set – available as an accessory – to make the connections on the gas and water sides. The following overview shows sample connection sets for surface mounting, with connection to the top or side.

Attaching accessories

Before final siting, attach all of the accessories that are to be mounted from the back of the boiler (e.g. connection set). First fit the connection set for the DHW circulation pump.



Please note

To prevent appliance damage, connect all pipework free of load and torque stress.

Preparing connections on site:



Connection set installation instructions

Note

Fit safety equipment in accordance with the national regulations.

Preparing for boiler installation (cont.)

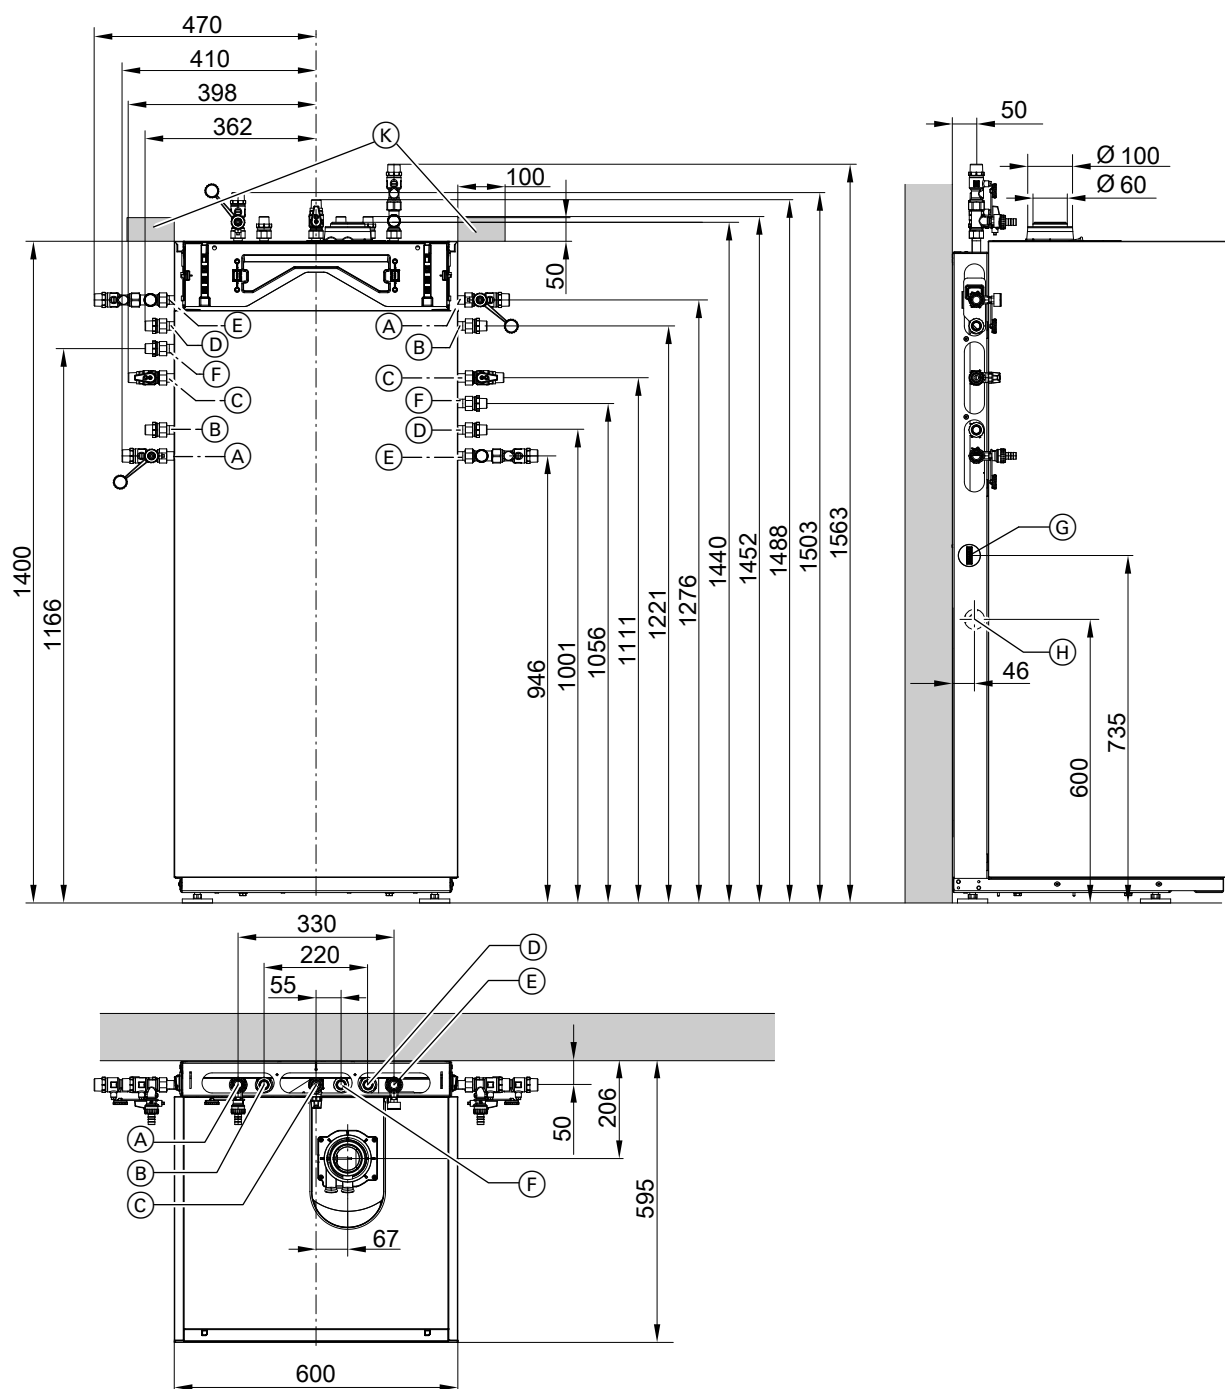


Fig. 2

- (A) Heating flow R $\frac{3}{4}$
- (B) DHW R $\frac{1}{2}$
- (C) Gas connection R $\frac{3}{4}$
- (D) Cold water R $\frac{1}{2}$
- (E) Heating return R $\frac{3}{4}$
- (F) DHW circulation R $\frac{1}{2}$ (separate accessories)
- (G) External plug

- (H) Condensate drain to the side
- (K) Area for electrical cables (on-site junction box)

Note

All height dimensions have a tolerance of +15 mm on account of the adjustable feet.

Preparing for boiler installation (cont.)

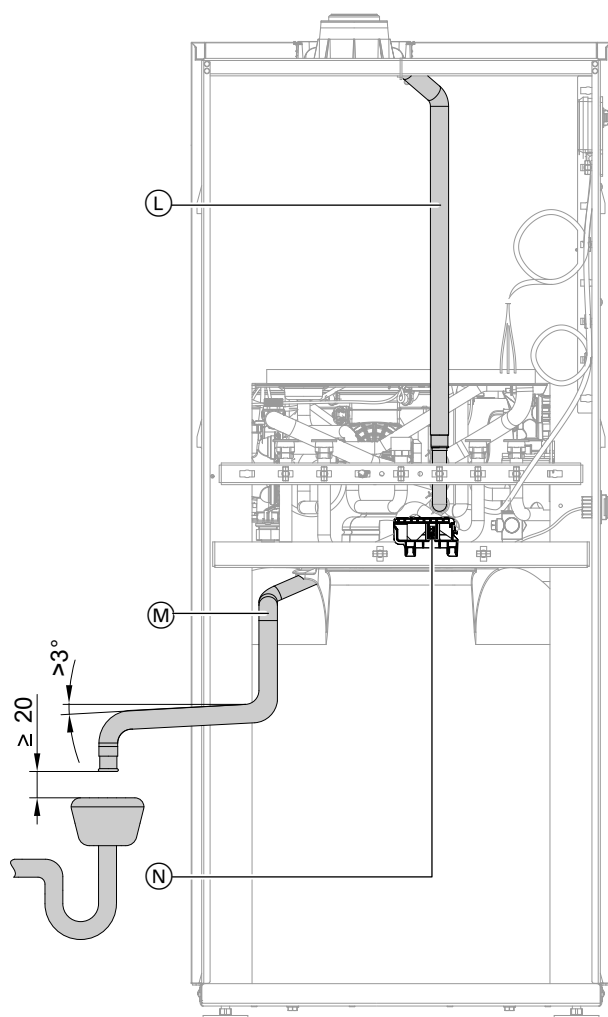


Fig. 3

1. Prepare the connections on the heating water side. Thoroughly flush the heating system.

Note

Should an additional expansion vessel be required on site, connect this vessel in the heating return.

2. Prepare the connections on the DHW side. Install the safety assembly (accessories or on-site provision) in accordance with EN 806 [or local regulations] in the cold water supply. See the following chapter.

Recommendation:

Install the safety valve above the DHW cylinder to protect it against contamination, scaling and high temperatures.

Ⓢ: According to W3 "Principles for creating potable water installations", safety valves must be drained directly via a visible unrestricted drain or via a short outlet line to the drain network.

Note

Do **not** connect the DHW cylinder safety valve to hose L. Do **not** change the position of hose L (used for ventilation).

3. Route condensate hose M to side opening H (see diagram on page 12). Connect condensate hose with a fall to the on-site waste water pipe or trap.

Note

- The on-site waste water pipe must have min. Ø 40 mm to allow inflow with no risk of backing up.
- Keep the drainage route from the appliance as short as possible.
- Do not connect the drain hose directly to the on-site waste water pipe. To prevent bacterial contamination from the drain network, observe a minimum clearance of 20 mm (see diagram).

**Please note**

The drain hose is used to route away any hot water discharged from the safety valve. Lay and secure the drain hose in a way that prevents any risk of scalding.

Note

Route the onward drain line inside the building as far as possible.

If the onward drain line is routed outside the building:

- Use a min. Ø 30 mm line.
- Protect the line from frost.
- Keep the line as short as possible.

Preparing for boiler installation (cont.)

4. Prepare gas connection to TRGI [or local regulations].
5. Prepare the electrical connections.
 - The appliance is delivered fitted with a power cable (approx. 1.5 m long).
 - Power supply: 230 V, 50 Hz, fuse rating max. 16 A

Note

Connect the power cable to the electricity supply using a fixed connection.

- Accessory cables: 0.75 mm² flexible PVC cable with required number of cores for external connections.

Note

Route external pipes through guide (N).

Safety assembly to DIN 1988 and EN 806

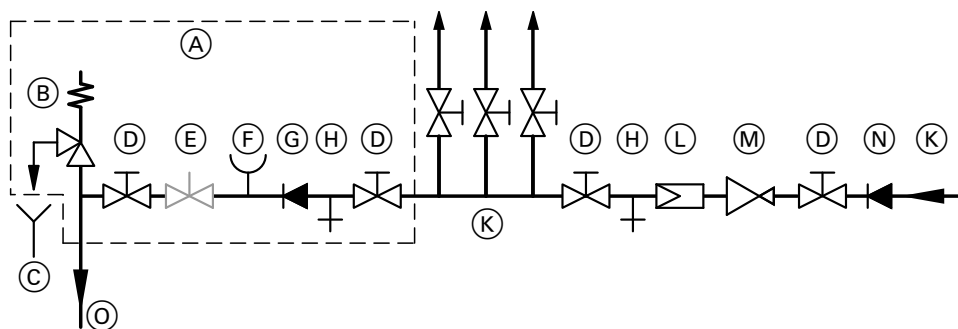


Fig. 4

- | | |
|---|---|
| (A) Safety assembly to DIN 1988 and EN 806 (accessories for connection sets for flush mounting) | (H) Drain outlet |
| (B) Safety valve | (K) Cold water |
| (C) Visible discharge pipe outlet point | (L) Drinking water filter |
| (D) Shut-off valve | (M) Pressure reducer to DIN 1988-2, Dec. 1988 issue |
| (E) Flow regulating valve (installation recommended) | (N) Non-return valve/pipe separator |
| (F) Pressure gauge connector | (O) Cold water connection at connection set (accessories) |
| (G) Non-return valve | |

Siting the boiler

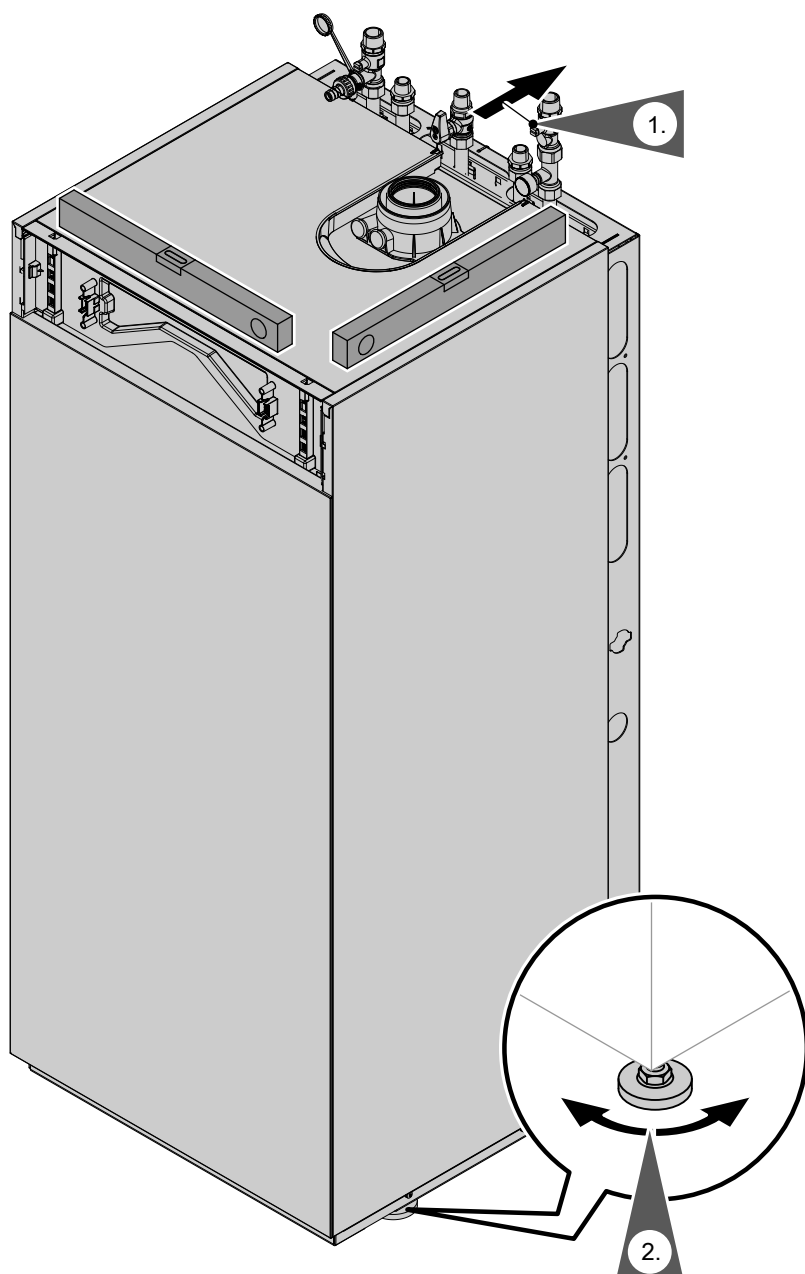


Fig. 5

Type plate

Note

The type plate is attached to cover panel (A) in the appliance. See page 39.

Additional type plate with access code (QR code) marked with "i"

The type plate of the heat generator contains extensive product information and an appliance-specific QR code marked with "i" for direct access to product-specific information and product registration on the internet.

The QR code contains the credentials for the registration and product information portal, and the 16-digit serial number.

Attaching the additional type plate

1. Take the additional type plate from the documentation supplied with the boiler.

Note

The documentation with the additional type plate and QR code marked with "i" can be found on top of the appliance.

Siting the boiler (cont.)

2. In consultation with the system user, affix the additional type plate to the outside of the appliance. The additional type plate must be visible to the flue gas inspector. Affix another QR code to the installation and service instructions.

Removing the front panel

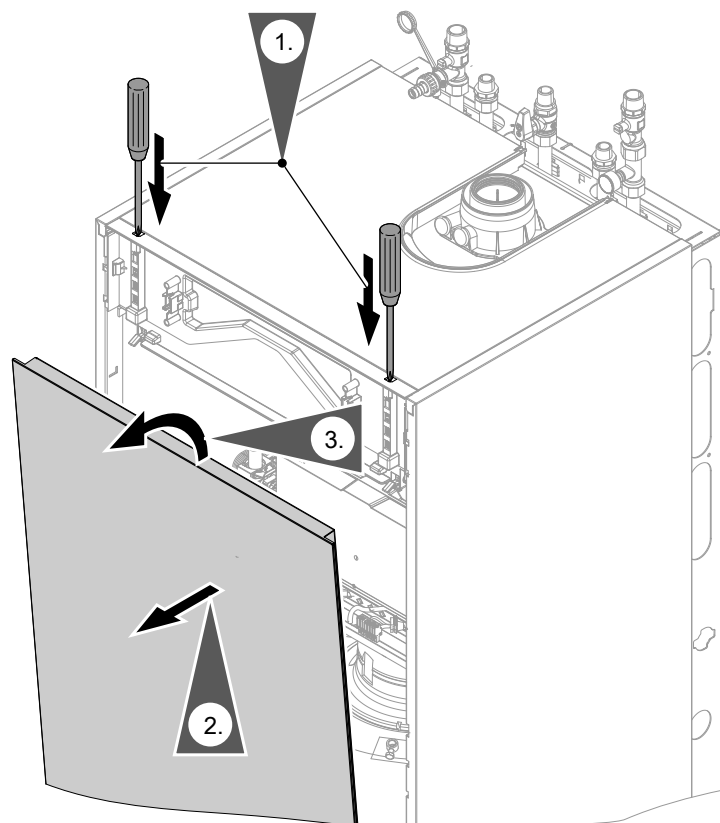


Fig. 6

Connections on the heating water and DHW sides

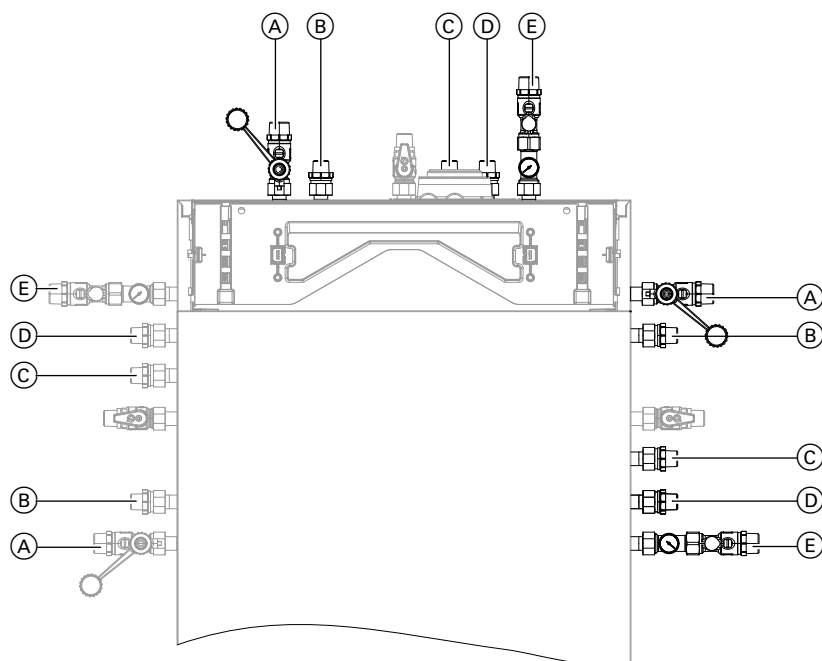


Fig. 7 Shown with connection sets for surface mounting (accessories)

- | | |
|--|------------------------------------|
| (A) Heating flow R $\frac{3}{4}$ | (D) Cold water R $\frac{1}{2}$ |
| (B) DHW R $\frac{1}{2}$ | (E) Heating return R $\frac{3}{4}$ |
| (C) DHW circulation R $\frac{1}{2}$ (separate accessories) | |

DHW circulation connection (potable water)

DHW circulation connection with DHW circulation pump connection set (accessories)




Separate installation instructions

Filling the trap with water

Note

If there is a risk of frost, only fill the trap just before commissioning.

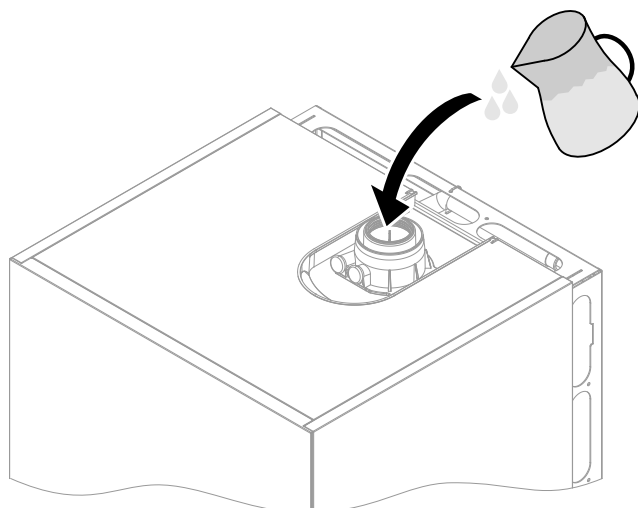

Pour at least 0.3 l of water into the flue gas connection.



Danger

During commissioning, flue gas may escape from the condensate drain. Always fill the trap with water before commissioning.

Fig. 8

Flue gas connection

Connect the flue gas/ventilation air pipe.



Flue system installation instructions

Connecting several Vitodens to a shared flue system

If several Vitodens are connected to a common flue system: Install a back draught safety device (accessories) in the flue gas connection and in the mixing shaft of the burner on each boiler.

Installing the back draught safety devices:

Do not carry out **commissioning** until the following conditions are met:

- Free passage through the flue gas pipes.
- Flue system with positive pressure is gas-tight.
- Inspection port covers checked for secure and tight seating.
- Apertures for ensuring sufficient combustion air supply are open and cannot be closed off.
- Applicable regulations on installing and commissioning flue systems have been followed.

Note

The "System certification" and "Skoberne GmbH flue system" labels enclosed with the technical documentation may only be used in conjunction with the Viessmann flue system made by Skoberne.



Installation instructions for back draught safety device

Converting the control unit for use with a shared flue system:

- In the commissioning assistant, select the "**Multiple connections**" setting under "**Flue system type**".



Danger

Leaking or blocked flue systems or an insufficient supply of combustion air cause life threatening poisoning due to carbon monoxide in the flue gas.

Ensure the flue system functions correctly. Apertures for combustion air supply must not be able to be closed off.

Prevent condensate drainage via a wind protector.

Gas connection

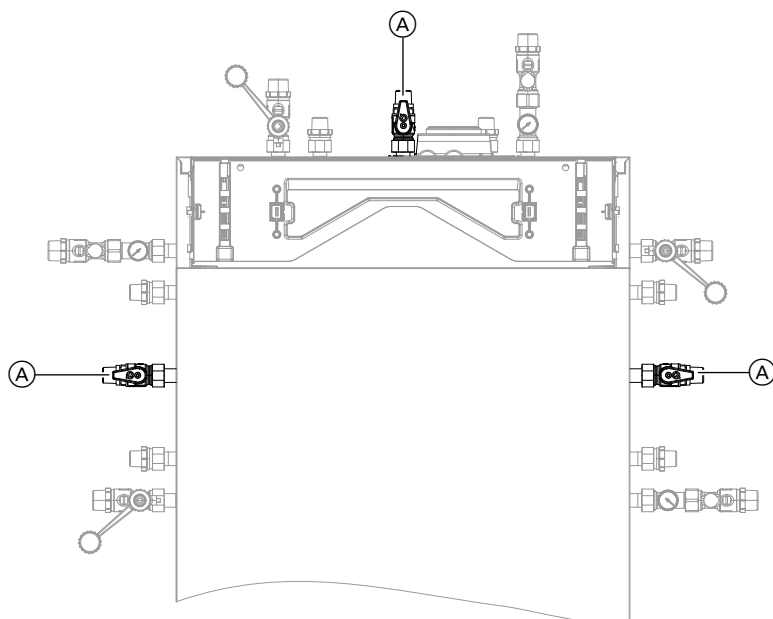


Fig. 9

1. If the gas connection has not been fitted previously, seal gas shut-off valve (A) to the gas connection.
3. Purge the gas line.

When carrying out any work on gas connection fittings, counterhold with a suitable tool. Never transfer any forces to the internal components.

Information on operation with LPG

Install an external safety solenoid valve if the boiler is installed below ground level.

An EM-EA1 extension (accessories) is required to connect the safety solenoid valve.

2. Check for leaks.



Danger

Escaping gas leads to a risk of explosion. Check all connections on the gas side (also inside the appliance) for tightness.

Note

Only use suitable and approved leak detection agents (EN 14291) and devices for the tightness test. Leak detection agents with unsuitable constituents (e.g. nitrides, sulphides) can cause material damage.

Remove residues of the leak detection agent after testing.



Please note

Excessive test pressure will damage the boiler and the gas train.

Max. test pressure 150 mbar (15 kPa).

Where higher pressure is required for tightness tests, disconnect the boiler and the gas train from the main supply pipe (undo the fitting).

Electrical connections

Opening the HMU wiring chamber

- ! Please note**
Electronic assemblies can be damaged by electrostatic discharge.
Prior to commencing any work, touch earthed objects, such as heating or water pipes to discharge static loads.

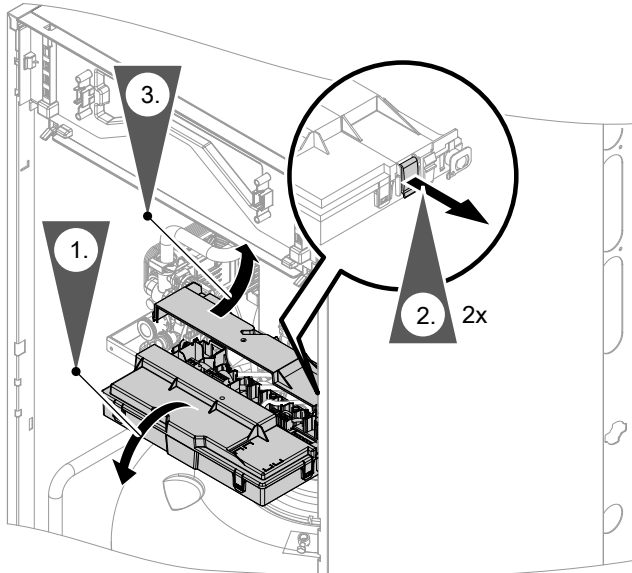


Fig. 10

Note
For further information on the connections, see the following chapters.

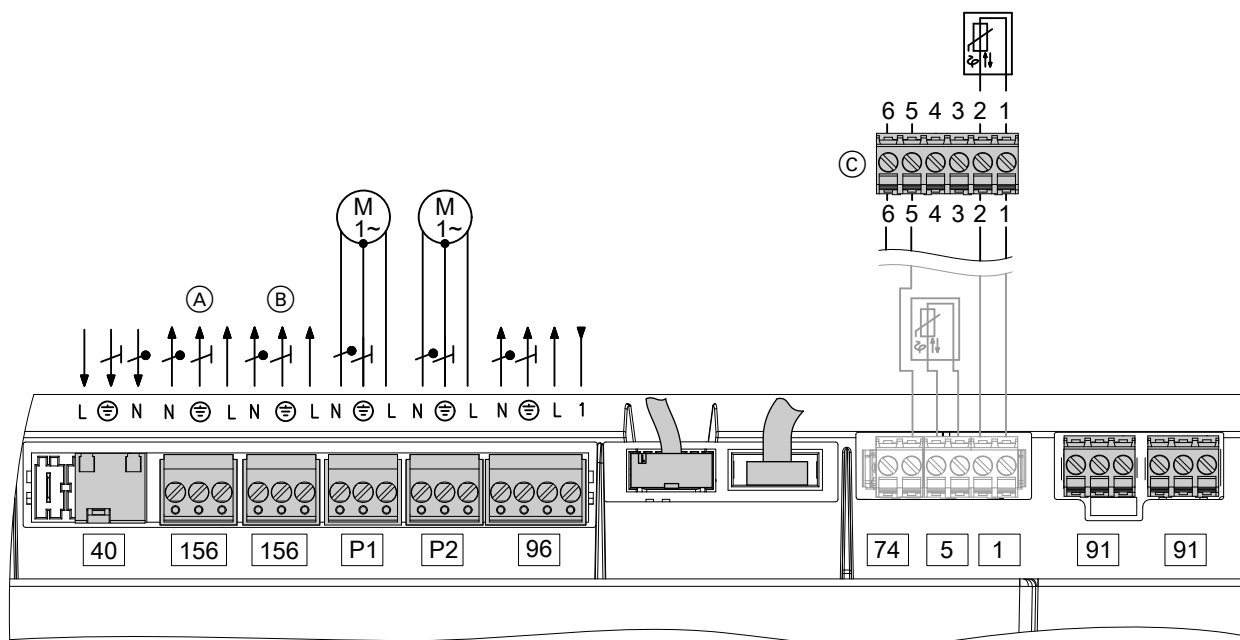


Fig. 11

Connections to 230 V~ plugs

- 40** Power supply
- 96** 230 V input, floating
230 V output
- 156** Switched power outlet

P1 Cylinder loading pump (connected in the delivered condition)

Electrical connections (cont.)

- P2 230 V parametrisable output:
DHW circulation pump or heating circuit pump for heating circuit without mixer (in systems with low loss header)
- Ⓐ BCU burner control unit power supply (connected in the delivered condition)
 - Ⓑ Power supply for accessories
 - Ⓒ Plug located externally on the right or left-hand side of the appliance (see also following diagram)

- 74 PlusBus
Terminals 5 and 6 on external plug Ⓒ
- 91 CAN bus

**Note on connecting accessories**

When connecting accessories observe the separate installation instructions provided with them.

Connections to extra low voltage (ELV) plugs

- 1 Outside temperature sensor
Terminals 1 and 2 on external plug Ⓒ
- 5 Cylinder temperature sensor (connected in the delivered condition)

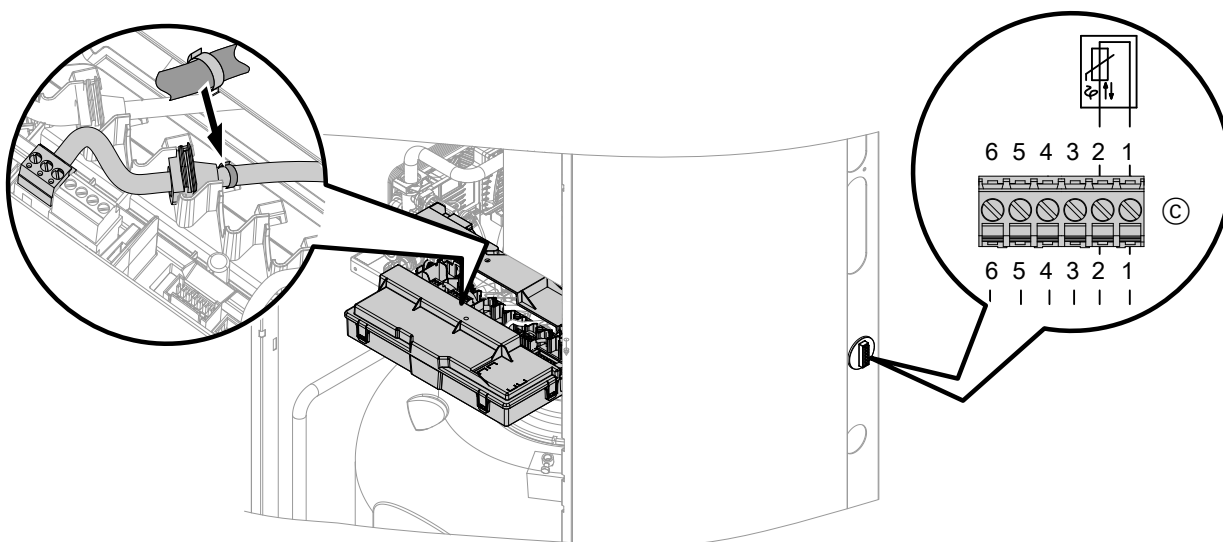
On-site connections to the HMU heat management unit

Fig. 12

- Ⓒ Plug located externally on the right or left-hand side of the appliance (supplied separately)

Required plugs are supplied in separate packaging.

Provide strain relief for cables in the wiring chamber of the HMU heat management unit using cable ties.

Outside temperature sensor 1**Fitting location for outside temperature sensor**

- North or north-westerly wall, 2 to 2.5 m above ground level; in multi storey buildings, in the upper half of the second floor
- Not above windows, doors or vents

- Not immediately below balconies or gutters
- Never render over

Outside temperature sensor connection

2-core lead, length up to 35 m with a cross-section of 1.5 mm²

Connecting the low loss header sensor 9

The sensor of the low loss header is connected to the accessory extension EM-P1 or EM-M1/MX (ADIO electronics module) respectively.



See installation instructions for extension EM-P1 or EM-M1/MX

Connecting the circulation pump to P2




Fig. 13

- Ⓐ Circulation pump
- Ⓑ Plug P2 on HMU heat management unit

Possible functions:

- Heating circuit pump for heating circuit without mixer A1 in connection with low loss header and heating circuits with mixer
- DHW circulation pump
Connect DHW circulation pumps with standalone functions directly to the 230 V~ supply.

Information on priority of connection options:

- If heating circuit pump for heating circuit without mixer A1 is installed:
Connect heating circuit pump to output P2.
Then connect DHW circulation pump to an EM-P1 extension (accessories).
- If **no** heating circuit pump for heating circuit without mixer A1 is connected:
Connect DHW circulation pump to output P2.

The function is selected in the commissioning assistant by selecting the connected component.

Specification

Rated current	1 A
Rated voltage	230 V ~

Floating switching contact connection

Connection at plug 96

One of the following functions can be connected:

- External demand
- External blocking
- DHW circulation pump external demand (pushbutton function, pump runs for 5 min). Not for Vitodens 222-W.
- Room temperature controller (room thermostat)
In conjunction with operating mode Continuous operation with room temperature controller (not for Vitodens 3xx)
- External heating circuit hook-up (if installed), see page 111
Not for Vitodens 3xx.

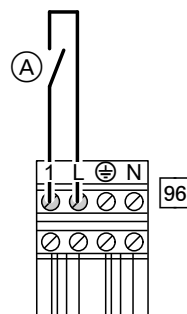


Fig. 14

- Ⓐ Floating contact

Assigning functions in the commissioning assistant

See commissioning assistant in "Commissioning".

Checking the CAN bus terminator switch setting

The CAN bus resistor is switched using switch Ⓐ in the wiring chamber.

Electrical connections (cont.)

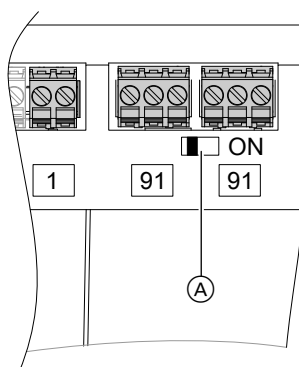


Fig. 15

- If the device is **not** integrated into a CAN bus system:
Switch (A) must **not** be set to "ON".
- If the device is integrated into a CAN bus system and is located at the beginning or end of this system (not in the middle) of the CAN bus system (connected to only one plug 91): Set switch (A) to "ON".

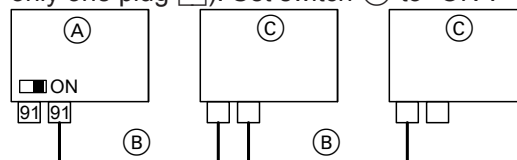


Fig. 16

- (A) Heat generator / HMU heat management unit
- (B) CAN bus cable
- (C) CAN bus other subscribers

- If the device is integrated into a CAN bus system and is **not** located at the beginning or end of the CAN bus system (both plugs 91 connected): Do **not** set switch (A) to "ON".

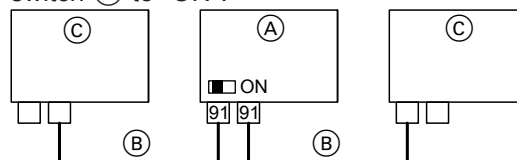


Fig. 17

Power supply for accessories at plug 96/156 (230 V ~)

When positioned in wet rooms, accessories outside the wet area must not be connected to the power supply at the HMU heat management unit. If the boiler is not sited in a wet room, the power supply for accessories can be connected directly to the HMU heat management unit. This connection is switched directly with the ON/OFF switch of the appliance.

If the total system current exceeds 6 A, connect one or more extensions directly to the mains supply via an ON/OFF switch (see next chapter).

Electrical connections (cont.)**Power supply and PlusBus connection of accessories**

Power supply of all accessories at the HMU heat management unit

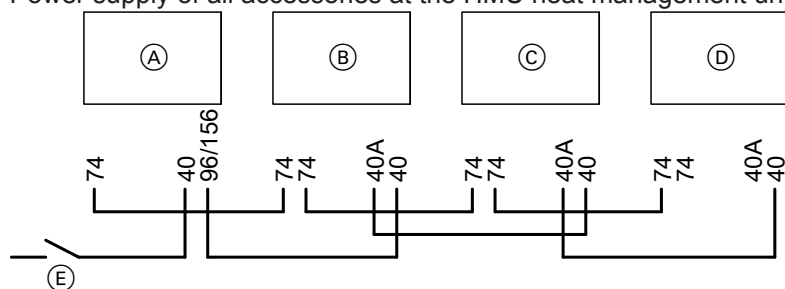


Fig. 18

Some accessories with direct power supply

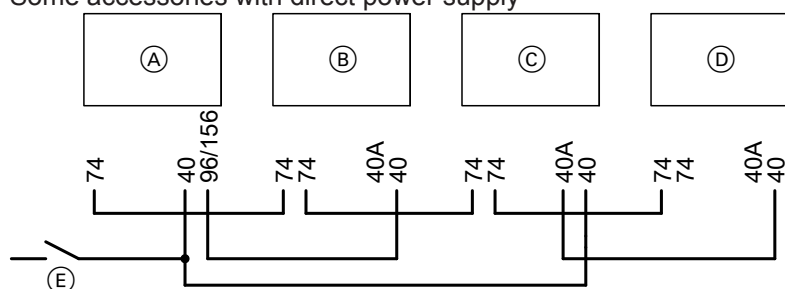


Fig. 19

- (A) HMU heat management unit, heat generator
- (B) Mixer extension kit (ADIO electronics module)
- (C) Mixer extension kit (ADIO electronics module)
- (D) EM-EA1 extension (DIO electronics module) and/or EM-S1 extension (ADIO or SDIO/ SM1A electronics module)

- (E) ON/OFF switch
- 40 Mains input
- 40 A Power outlet
- 74 PlusBus
- 96/156 Power outlet on HMU heat management unit

PlusBus system length max. 50 m for 0.34 mm² cable cross-section and unshielded cable.

If the current flowing to the connected working parts (e.g. circulation pumps) is higher than the fuse rating of the relevant accessory, only use the output concerned to control an on-site relay.

Accessories	Internal fuse protection
EM-M1, EM-MX mixer extension kit	2 A
EM-EA1 extension	2 A
EM-S1 extension (not for Vitodens 222-F, 222-W and 333-F)	2 A

**Danger**

Incorrect wiring can lead to serious injury from electrical current and result in appliance damage.

- Route extra low voltage (ELV) leads < 42 V separately from cables > 42 V/230 V~.
- Only strip the minimum of insulation from cables as close as possible to the terminals and bundle tightly to the corresponding terminals.
- Secure cables with cable ties.

Electrical connections (cont.)

Power supply 40



Danger

Incorrectly executed electrical installations can result in injuries from electrical current and damage to the appliance.

Connect the power supply and implement all safety measures (e.g. RCD circuit) in accordance with the following regulations:

- IEC 60364-4-41
- VDE regulations
- Connection conditions of the local grid operator

- Install an isolator in the power cable to provide omnipolar separation from the mains for all active conductors, corresponding to overvoltage category III (3 mm) for complete isolation. The isolator must be fitted in the permanent electrical installation, in line with installation requirements.

We also recommend installing a pulse current-sensitive RCD (RCD class A).

- Connect the power cable to the electricity supply using a fixed connection.

- If the power supply to the appliance is connected with a flexible power cable, ensure that the live conductors are pulled taut before the earth conductor in the event of strain relief failure. The length of the earth conductor wire will depend on the design.
- Max. fuse rating 16 A.



Danger

The absence of system component earthing can lead to serious injury from electric current if an electrical fault occurs.

The appliance and pipework must be connected to the equipotential bonding of the building.

WiFi operational reliability and system requirements

WiFi router system requirement

- WiFi router with activated WiFi:
The WiFi router must be protected by a sufficiently secure WPA2 password.
The WiFi router must always have the latest firmware update.
Do not use unencrypted connections between the heat generator and the WiFi router.
- Internet connection with high availability:
Flat rate (flat rate tariff **without** restriction on time or data volume)
- Dynamic IP addressing (DHCP, delivered condition) in the network (WiFi):
Have this checked on site, and if required set up, by an IT expert **prior to** commissioning.
- Set routing and security parameters in the IP network (LAN):
Enable port 80, port 123, port 443 and port 8883 for direct outward connections.
Have this checked and, if necessary, set up on site by an IT expert **before** commissioning.

Wireless signal range of WiFi connection

The range of wireless signals may be reduced by walls, ceilings and interior fixtures. These weaken the wireless signal, causing poor reception due to the following circumstances.

- On their way between transmitter and receiver, wireless signals are **damped**, e.g. by air or when penetrating walls.
- Wireless signals are **reflected** by metallic objects e.g. reinforcements embedded in walls, metal foil of thermal insulation and thermal glazing with metalised thermal vapour deposit.
- Wireless signals are **isolated** by service ducts and lift shafts.
- Wireless signals are **disrupted** by devices that also operate with high frequency signals. Maintain a distance of **at least 2 m** from these devices:
 - Computers
 - Audio and video systems
 - Devices with active WiFi connection
 - Electronic transformers
 - Pre-ballasts

Install the heat generator as close as possible to the WiFi router to ensure a good WiFi connection. The signal strength can be displayed on the heat generator (see the operating instructions).

Note

The WiFi signal strength can be increased with commercially available WiFi repeaters.

Angle of penetration

The reception quality remains best if radio signals hit the walls vertically.

Installation sequence

Electrical connections (cont.)

Depending on the angle of penetration, the effective wall thickness changes and so does the extent to which the electromagnetic waves are damped.

Flat (unfavourable) angle of penetration

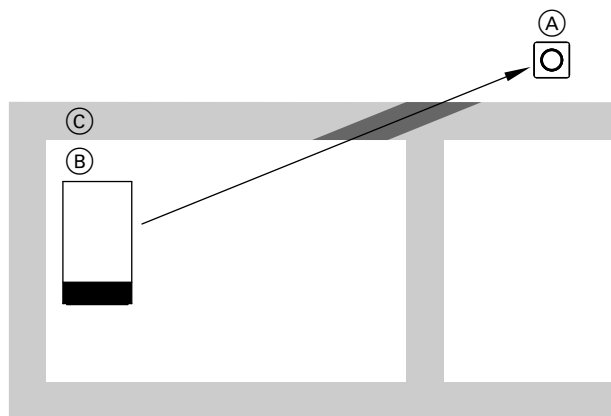


Fig. 20

- Ⓐ WiFi router
- Ⓑ Heat generator
- Ⓒ Wall

Ideal angle of penetration

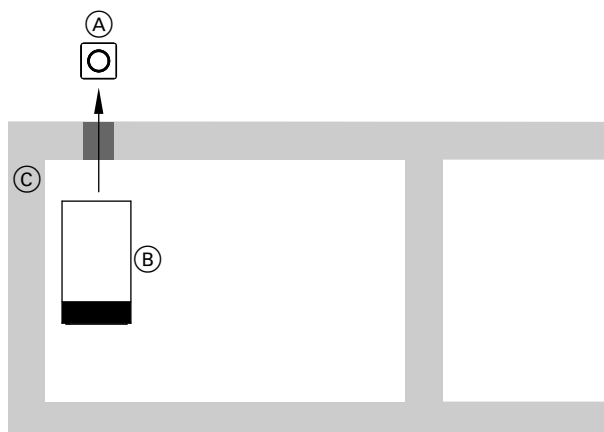


Fig. 21

- Ⓐ WiFi router
- Ⓑ Heat generator
- Ⓒ Wall

Routing connecting cables/leads



Please note

If connecting cables/leads come into contact with hot components, they will be damaged. When routing and securing cables/leads on site, ensure that the maximum permissible temperatures for these cables/leads are not exceeded.

Closing the wiring chamber

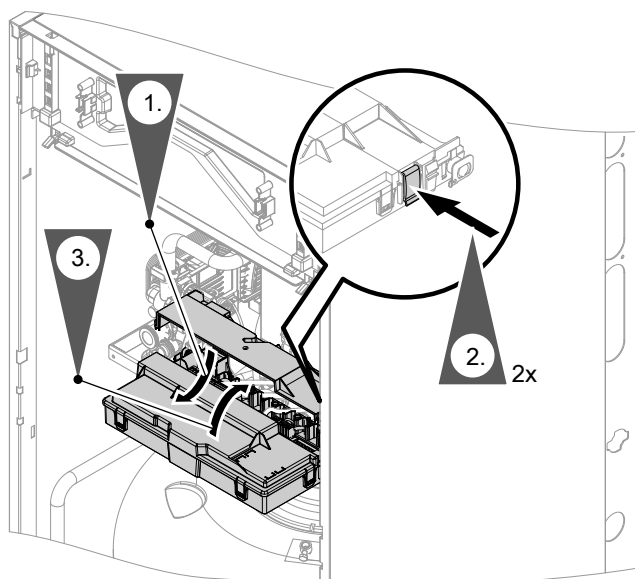
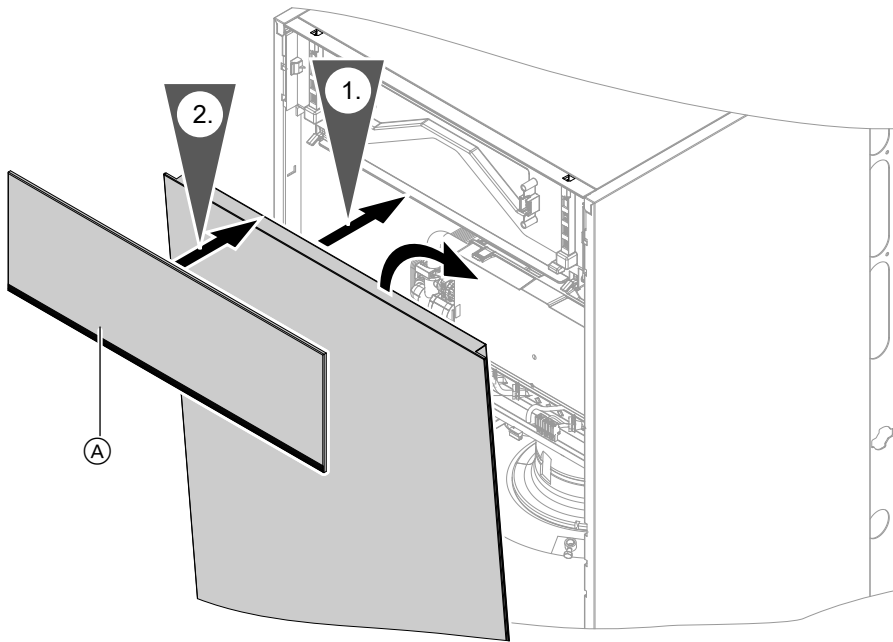
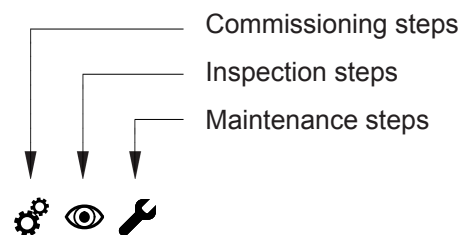


Fig. 22

Fitting the front panel and programming unit

*Fig. 23*

Lightguide ① at the bottom

6151778



Steps - commissioning, inspection and... (cont.)

			Commissioning steps	
			Inspection steps	
			Maintenance steps	Page
•			40. Matching the control unit to the heating system.....	57
•			41. Adjusting the heating curves.....	57
		•	42. Calling up and resetting the maintenance display.....	57
•	•	•	43. Fitting the front panel.....	58
•			44. Instructing the system user.....	58





Removing the front panels

See page 16, steps 1 to 5



Moving the programming unit to the maintenance position

To carry out various maintenance jobs, move the programming unit downwards.

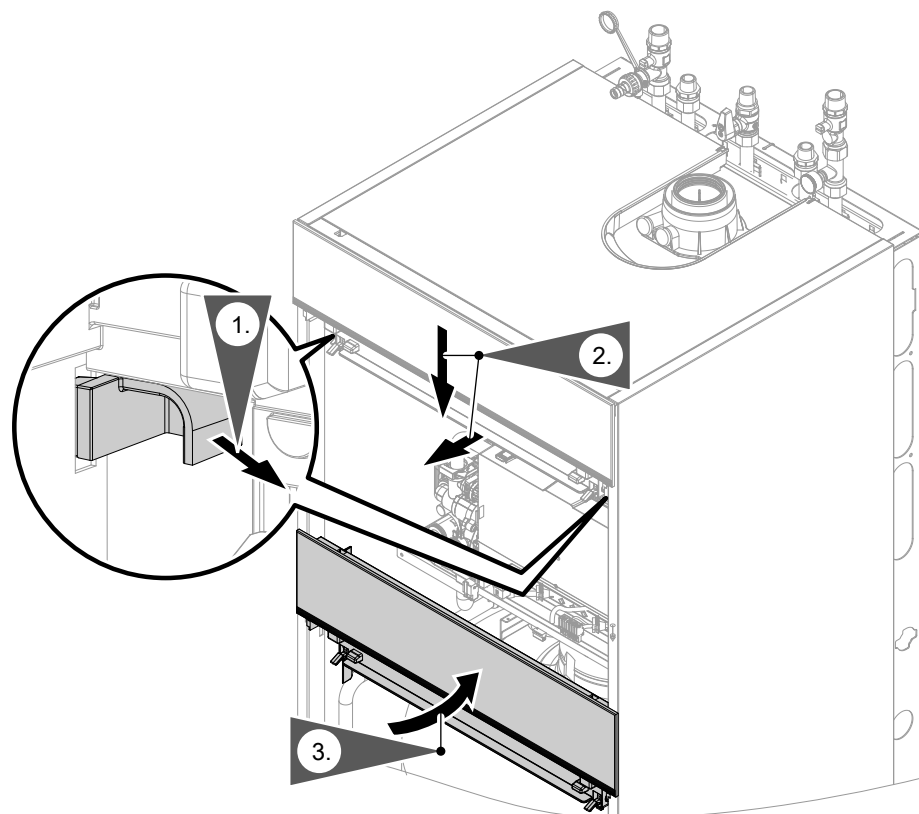


Fig. 24



Commissioning the system

Commissioning assistant

1. Open the gas shut-off valve.
2.
 - If the appliance has not been switched on yet: Turn on the ON/OFF switch. The commissioning assistant starts automatically.
 - If the appliance has already been switched on: See chapter "Calling up the commissioning assistant at a later point", page 34.
3. Commission the heat generator and follow the commissioning assistant. See the overview below.

Note



Depending on the type of heat generator, the accessories connected and other settings, not all menu points will be displayed.

Note

After the commissioning assistant has finished, check that the actuators are connected and operating correctly. Start the actuator test.




Commissioning the system (cont.)

Commissioning assistant sequence	Explanations and references
Commissioning	
Language	
With programming unit	If commissioning is to be carried out at the programming unit of the heat generator.
With software tool	<p>The appliance automatically switches on the WiFi access point. Further commissioning steps according to the instructions of the software tool used (e.g. "ViStart app")</p> <p>Note Apps for commissioning and service are available for iOS and Android devices.</p> <div style="display: flex; justify-content: center; gap: 10px;">   </div>
Trade fair mode	Only for demonstration purposes. Do not select for normal heating operation.
Units of measurement	
Date and time	
Operating mode (only Vitodens 2xx)	<ul style="list-style-type: none"> ▪ Weather-compensated operation The outside temperature sensor must be connected. ▪ Continuous operation Operation with constant flow temperature ▪ Room temperature-dependent operation A room temperature controller/room thermostat (accessories) must be connected to plug 96. Only one heating circuit without mixer in the system.
Building type	<ul style="list-style-type: none"> ▪ Detached house One shared holiday program and time program for DHW heating ▪ Apartment building A separate holiday program can be set for each heating circuit
Gas type	If operating with LPG, switch to "LPG"
Flue system type (only Vitodens 2xx)	<ul style="list-style-type: none"> ▪ Single connection Only one heat generator is connected to the flue system (factory setting). ▪ Multiple connections Several heat generators are connected to the flue system.
Filling and venting System pressure:	<p>Select the set system pressure, e.g. 1.5 bar.</p> <ul style="list-style-type: none"> ▪ Set value ▪ Range <p>Select the range within which the system pressure can fluctuate around the set value, e.g. +/-0.5 bar.</p> <p>If the value falls below the set range for a certain period of time (set value [1.5 bar] - range [0.5 bar] = 1.0 bar), a fault message/warning message A.11 is displayed.</p> <p>Filling: See chapters "Filling the heating system" and "Venting the heating system".</p>
After confirmation with ✓, an automatic test of the flue gas temperature sensor is carried out. See the following chapter.	
If no further settings are to be performed, the commissioning assistant can now be closed.	
System scheme	
Heating circuit 1	Heating circuit without mixer or heating circuit without mixer with external hook-up (if installed)





Commissioning assistant sequence	Explanations and references
Heating circuit 2, 3 ...	Heating circuits with mixer or heating circuits with mixer with external hook-up (if installed)
DHW <ul style="list-style-type: none"> ▪ Not available ▪ Cylinder with one sensor ▪ Cylinder with one sensor and DHW circulation pump ▪ Loading cylinder with two sensors ▪ Loading cylinder with two sensors and DHW circulation pump 	Settings for DHW heating according to the system components System without DHW heating System with DHW cylinder with 1 cylinder temperature sensor System with DHW cylinder with 1 DHW cylinder temperature sensor and DHW circulation pump Gas condensing storage combi boiler or gas/solar condensing storage combi boiler with integral loading cylinder Gas condensing storage combi boiler or gas/solar condensing storage combi boiler with integral loading cylinder with DHW circulation pump
Low loss header/buffer cylinder <ul style="list-style-type: none"> ▪ Not available ▪ Low loss header, heating only ▪ DHW heating upstream of low loss header ▪ DHW heating downstream of low loss header ▪ Buffer cylinder, heating only ▪ DHW heating upstream of buffer cylinder ▪ DHW heating downstream of buffer cylinder 	Settings for the consumer circuits according to the system components There is no low loss header or heating water buffer cylinder in the system. System with low loss header, without DHW heating DHW heating with e.g. separate DHW cylinder connected upstream of the low loss header DHW heating with e.g. separate DHW cylinder connected downstream of the low loss header System with heating water buffer cylinder, without DHW heating DHW heating with e.g. separate DHW cylinder connected upstream of the heating water buffer cylinder DHW heating with e.g. separate DHW cylinder connected downstream of the heating water buffer cylinder
Solar (if installed) <ul style="list-style-type: none"> ▪ No solar function ▪ Solar function DHW heating ▪ Solar function for central heating backup ▪ Solar function with pre-heating, 2nd cylinder ▪ Solar function with thermostat function ▪ Solar function with cyclical heating 	Solar thermal system connected to heat generator via EM-S1 extension (ADIO, SDIO/SM1A electronics module) Setting subject to the design of the solar thermal system  EM-S1 extension installation and service instructions Only adjustable on SDIO/SM1A electronics module Only adjustable on SDIO/SM1A electronics module Only adjustable on SDIO/SM1A electronics module Only adjustable on SDIO/SM1A electronics module



Commissioning the system (cont.)

Commissioning assistant sequence	Explanations and references
Floating contact: Function selection plug 96	If a contact has been connected to plug 96 of the HMU heat management unit.
<ul style="list-style-type: none"> ▪ No function ▪ External demand, DHW circulation pump ▪ External demand ▪ External blocking 	<p>Pushbutton function, DHW circulation pump runs for 5 min.</p> <p>Heat generator demand with adjustable set flow temperature (parameter 528.0) and set primary pump speed (parameter 1100.2)</p>
EM-EA1 (DIO): Function selection	If an EM-EA1 extension (DIO electronics module) is connected as a function extension.
Functions	Selection of the connected function according to the table in the EM-EA1 extension installation instructions.
Remote control units	
	Set the type of remote control and subscriber no. as assignment to the respective heating circuit. Up to 3 heating circuits can be assigned to one remote control unit. It is not possible for several remote controls to act on one heating circuit.
Maintenance	
Interval in burner hours run until next maintenance	Interval adjustable in steps of 100 h.
Interval until next maintenance	Interval adjustable to 3, 6, 12, 18 or 24 months.

Automatic flue gas temperature sensor check

The display shows: **"Testing, flue gas temperature sensor"** and **"Enabled"**.

If the flue gas temperature sensor is not positioned correctly, fault message F.416 appears.

For further details regarding the flue gas temperature sensor test, see "Repairs".

Note

If fault message F.416 continues to be displayed although the flue gas temperature sensor is correctly positioned: Initial commissioning may result in burner faults e.g. caused by air in the gas line. Eliminate the fault and reset the appliance.

Note

The burner remains locked out until the test has been passed.

When the fault has been remedied, turn the ON/OFF switch off and back on again.

Confirm the commissioning assistant with ✓.

Switching WiFi ON/OFF

The appliance is equipped with an integrated WiFi communication module with extended type plate.

The internal communication module supports commissioning of the heat generator with the "ViStart app", connectivity with the "ViCare app" and the connection to the digital service centre "Vitoguide".

The access details required for establishing a connection are recorded in the form of an access code with **"WiFi symbol"**. Three copies of this code are located on the rear of the programming unit.

Before installing the programming unit, remove the access code labels from the rear. For commissioning, affix one label to the space marked out on the type plate.

Switch on the WiFi connection and establish a connection to the router; see also page 25.

Activating the internet connection:



Operating instructions

Affix a further credentials label here, so it can be found for subsequent use:



Commissioning the system (cont.)



Fig. 25

Affix a label in the operating instructions.

Calling up the commissioning assistant at a later point

If you need to continue commissioning later, the commissioning assistant can be reactivated at any time.

Tap the following buttons:

- 1.
- 2. "Service"
- 3. Enter password "viservice".
- 4. Confirm with .
- 5. "Commissioning"



Filling the heating system

Fill water

According to EN 1717 with DIN 1988-100, as a heat transfer medium for DHW heating, the heating water must meet fluid category ≤ 3 . This requirement is met if water of potable quality is used as heating water. For example, if additives are used, the additive manufacturer must specify which category the treated heating water comes under.



Please note

Unsuitable fill water increases the level of deposits and corrosion and may lead to appliance damage.

- Flush the heating system thoroughly before filling.
- Only use fill water of potable water quality.
- Special antifreeze suitable for heating systems can be added to the fill water. The antifreeze manufacturer must verify its suitability.
- Fill and top-up water with a water hardness in excess of the following values must be softened, e.g. with a small softening system for heating water.

Total permissible hardness of the fill and top-up water

Total heating output	Specific system volume		
	< 20 l/kW	≥ 20 l/kW to < 50 l/kW	≥ 50 l/kW
kW			
≤ 50	≤ 3.0 mol/m ³ (16.8 °dH)	≤ 2.0 mol/m ³ (11.2 °dH)	< 0.02 mol/m ³ (0.11 °dH)
> 50 to ≤ 200	≤ 2.0 mol/m ³ (11.2 °dH)	≤ 1.5 mol/m ³ (8.4 °dH)	< 0.02 mol/m ³ (0.11 °dH)
> 200 to ≤ 600	≤ 1.5 mol/m ³ (8.4 °dH)	≤ 0.02 mol/m ³ (0.11 °dH)	< 0.02 mol/m ³ (0.11 °dH)
> 600	< 0.02 mol/m ³ (0.11 °dH)	< 0.02 mol/m ³ (0.11 °dH)	< 0.02 mol/m ³ (0.11 °dH)



Filling the heating system (cont.)

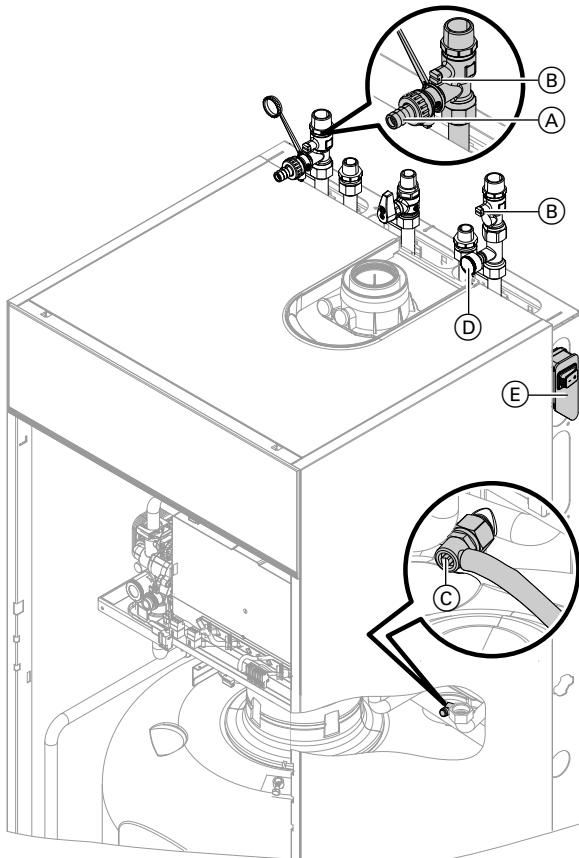


Fig. 26 Shown with the connections at the top

1. Check the pre-charge pressure of the expansion vessel.
2. Close the gas shut-off valve.
3. Connect the fill hose to boiler drain & fill valve (A) in the heating flow. Either on the side or top of the boiler depending on the connection set.
4. Open shut-off valves (B) on the heating water side.
5. Fit hose to air vent valve (C). Route the hose into a suitable container or drain outlet.
6. Activate the filling function (see commissioning assistant or following chapter).
7. Fill the heating system via boiler drain & fill valve (A). Minimum system pressure > 1.0 bar (0.1 MPa). Check the system pressure at pressure gauge (D). Indicator must be in the green band.
8. Close boiler drain & fill valve (A).

Note

Close air vent valve (C) and adjust system pressure at boiler drain & fill valve (A).

Activating the filling function

Tap the following buttons:

- 1.
2. "Service"
3. Enter password "viservice".
4. Use to confirm.
5. "Service functions"
6. "Filling"
7. Activate the filling function with . The display shows the system pressure. The filling function ends automatically after 20 min or when you tap .



Venting the boiler

! Please note
To prevent appliance damage,
Do not vent the boiler via the safety valve on the
heating water side.

1. Close shut-off valves (B) on the heating water side.
2. Open air vent valve (C) and fill valve (A) in the heating flow. Vent (flush) under mains pressure until no more air noise is audible.

3. Close air vent valve (C) and fill valve (A). At the same time, adjust operating pressure > 1.0 bar (0.1 MPa).

Note

Call up the pressure indicator in the **"System overview"** menu point. See operating instructions.

4. Open shut-off valves (B) on the heating water side.
5. Remove drain hose from air vent valve (C) and keep safe.



Venting the heating system

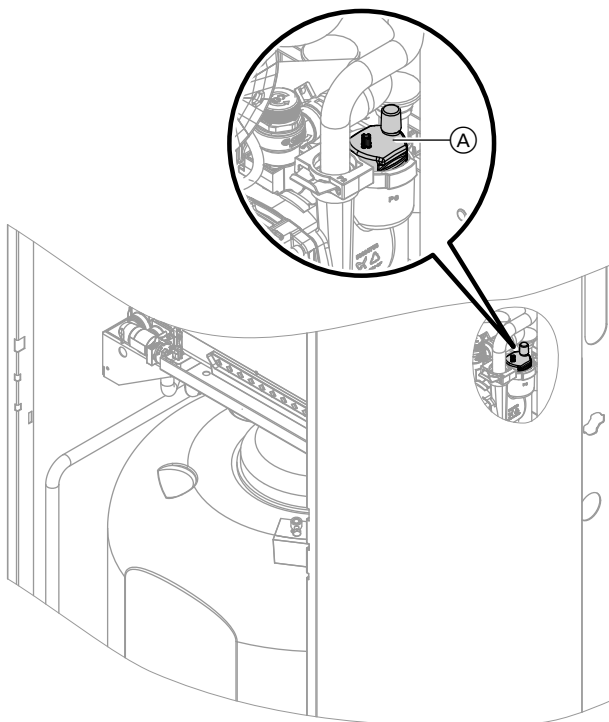


Fig. 27

1. Check whether the air vent screw in quick-action air vent valve (A) of the heating circuit pump is open.
2. Close the gas shut-off valve. Switch the appliance on.
3. Activate venting function (see following steps).
4. Call up the pressure display with **"System overview"**. Check the system pressure.

Activating the venting function

Tap the following buttons:

- 1.
2. **"Service"**
3. Enter password **"viservice"**.
4. Use to confirm.
5. **"Service functions"**
6. **"Air vent valve"**




Venting the heating system (cont.)

7. Activate the venting function with ✓.
The display shows the system pressure.
The venting function ends automatically after 20 min or when you tap ✓.



Filling the DHW cylinder on the DHW side

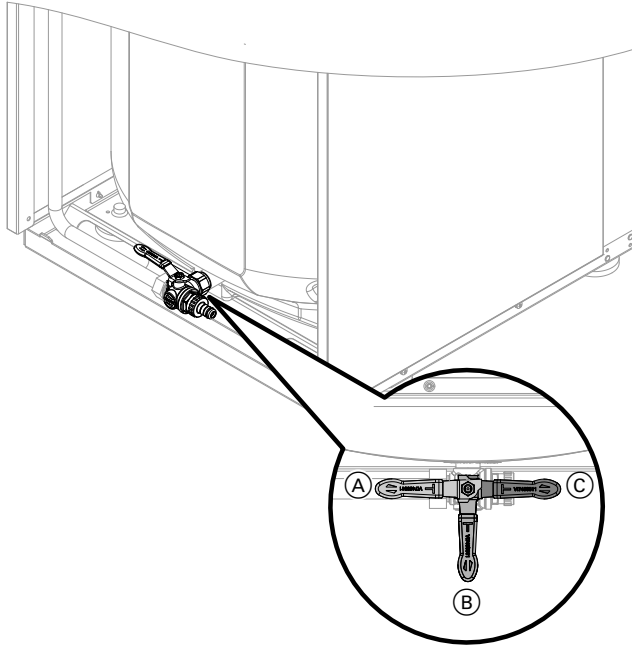

1. The lever on the valve must be in position ①.
2. Open the on-site DHW supply and a DHW draw-off point.
3. Once air stops coming out of the DHW draw-off point, the DHW cylinder is completely filled.

Fig. 28



Checking the connections on the heating water and DHW sides



Danger

Risk of electric shock from escaping heating water or DHW.
When commissioning and after carrying out maintenance work, check all water side connections for leaks.



Naming the heating circuits

In the delivered condition, the heating circuits are designated "Heating circuit 1", "Heating circuit 2", "Heating circuit 3" and "Heating circuit 4" (if installed).
If the system user prefers, the heating circuits can be renamed to suit the specific system.

To enter names for heating circuits:



Operating instructions



Entering contact details of heating contractor

The system operator can call up contact details when required and notify the heating contractor.

2. Select **"Information"**.
3. Select **"Service contact details"**.

1. ≡



Entering contact details of heating contractor (cont.)

4. Fill in the fields and confirm each with ✓.



Checking the gas type

The boiler is equipped with an electronic combustion controller that adjusts the burner for optimum combustion in accordance with the prevailing gas quality.

- For operation with natural gas, no adjustment is therefore required across the entire Wobbe index range. The boiler can be operated within the Wobbe index range 9.5 to 15.2 kWh/m³ (34.2 to 54.7 MJ/m³).
- For operation with LPG, the gas type needs to be changed on the control unit (see following chapter).

1. Determine the gas type and Wobbe index by asking your local gas supply utility or LPG supplier.
2. Record the gas type in the service report.



Converting the gas type (only for operation with LPG)

1. To change the gas type on the control unit, see "Commissioning the system with the commissioning assistant"

2. Affix label "G31" (supplied with the technical documentation) adjacent to the type plate on the outside of the appliance.

Note

No mechanical adjustments are made to the gas solenoid valve.



Checking the static pressure and supply pressure

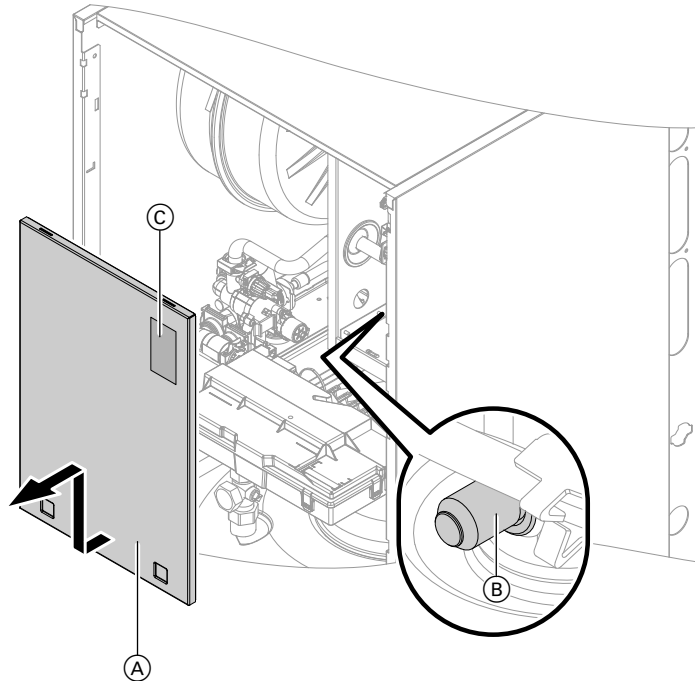


Fig. 29

- (A) Cover panel
- (B) Test connector
- (C) Type plate



Danger

CO formation as a result of incorrect burner adjustment can have serious health implications. Carry out a CO test before and after work on gas appliances.

Operation with LPG

Purge the LPG tank twice on commissioning/replacement. Vent the tank and gas connection line thoroughly after purging.

1. Close the gas shut-off valve.
2. Undo clips and remove cover panel (A).
3. Undo screw in test connector (B) on the gas train, but do not remove it. Connect the pressure gauge.
4. Open the gas shut-off valve.
5. Test the static pressure and record it in the report. Set value: Max. 57.5 mbar (5.75 kPa).
6. Start the boiler.

Note

During commissioning, the appliance can enter a fault state if there are airlocks in the gas line. Reset the appliance after approx. 5 s (see operating instructions).

7. Check the supply (flow) pressure. For set values, see the following table.

Note

Use a suitable measuring device with a resolution of at least 0.1 mbar (0.01 kPa) to check the supply pressure.

8. Record the actual value in the report. Implement measures as indicated in the table below.
9. Shut down the boiler. Close the gas shut-off valve.
10. Remove the pressure gauge. Tighten the screw in test connector (B).
11. Open the gas shut-off valve and start the appliance.



Danger

Gas escaping from the test connector leads to a risk of explosion. Check gas tightness at test connector (B).

12. Fit cover panel (A).




Checking the static pressure and supply pressure (cont.)

Supply pressure (flow pressure)		Measures
For natural gas	For LPG	
< 20 mbar (2.0 kPa)	< 50 mbar (5.0 kPa)	Do not start the boiler. Notify the gas supply utility or LPG supplier.
20 - 25 mbar (2.0 - 2.5 kPa)	50 - 57.5 mbar (5.0 - 5.75 kPa)	Start the boiler.
> 25 mbar (2.5 kPa)	> 57.5 mbar (5.75 kPa)	Install a separate gas pressure governor upstream of the system. Set the pre-charge pressure to 20 mbar (2.0 kPa) for natural gas and 50 mbar (5.0 kPa) for LPG. Notify the gas supply utility or LPG supplier.




Function sequence and possible faults

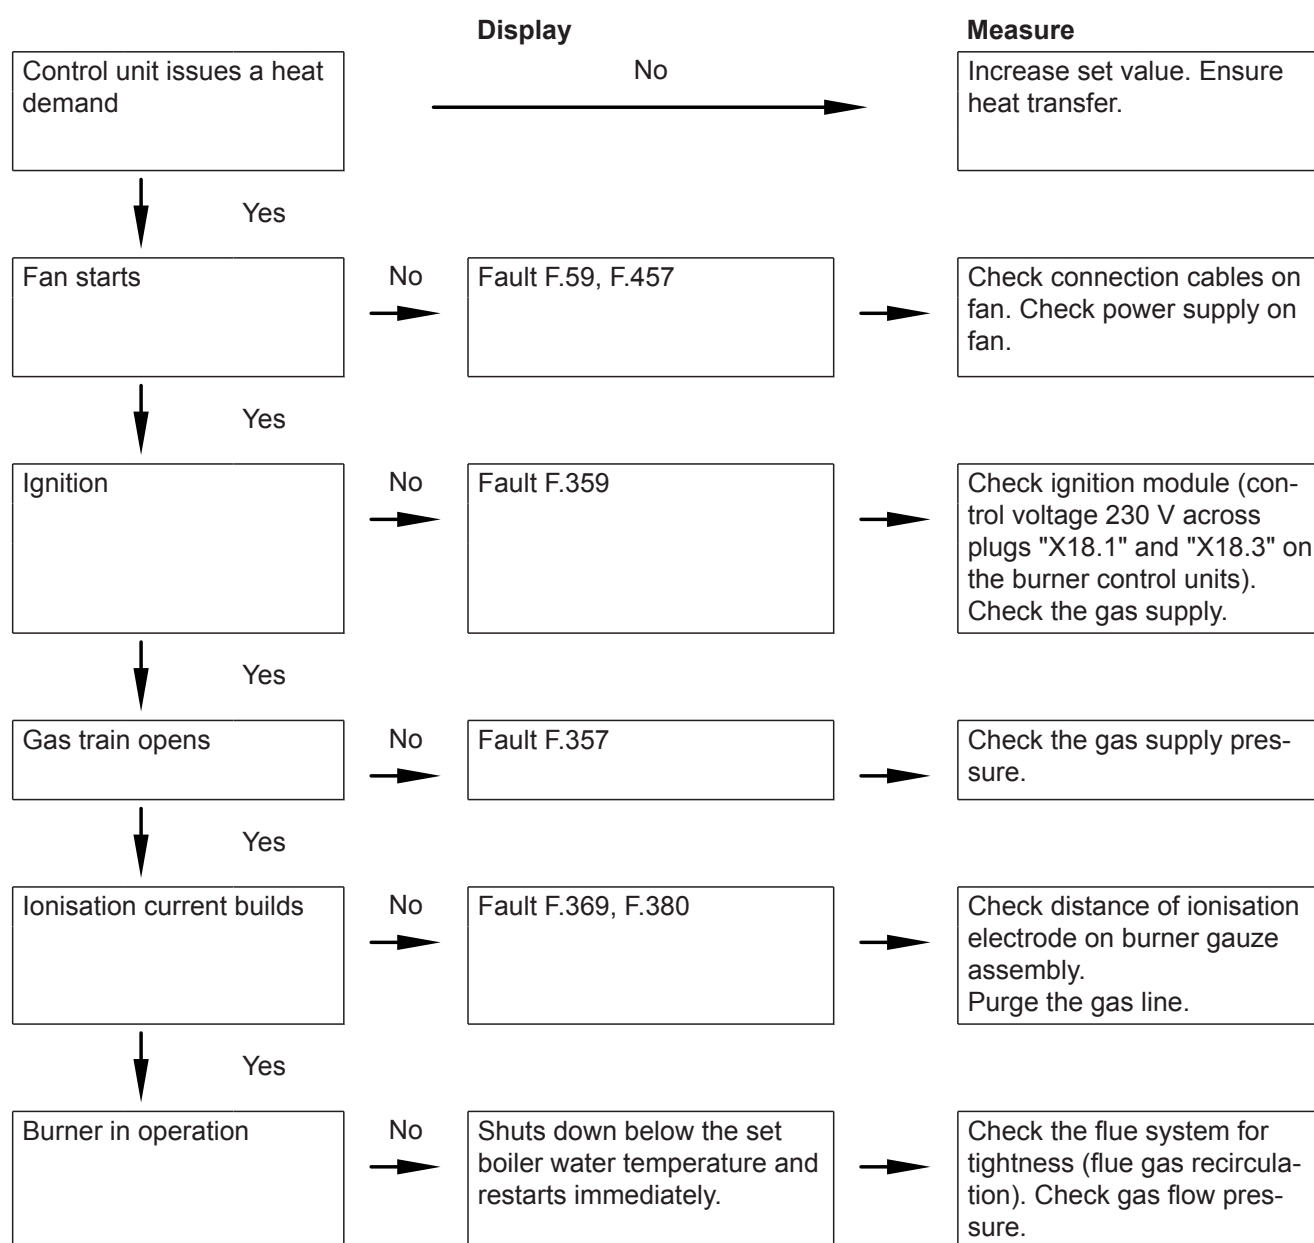



Function sequence and possible faults (cont.)

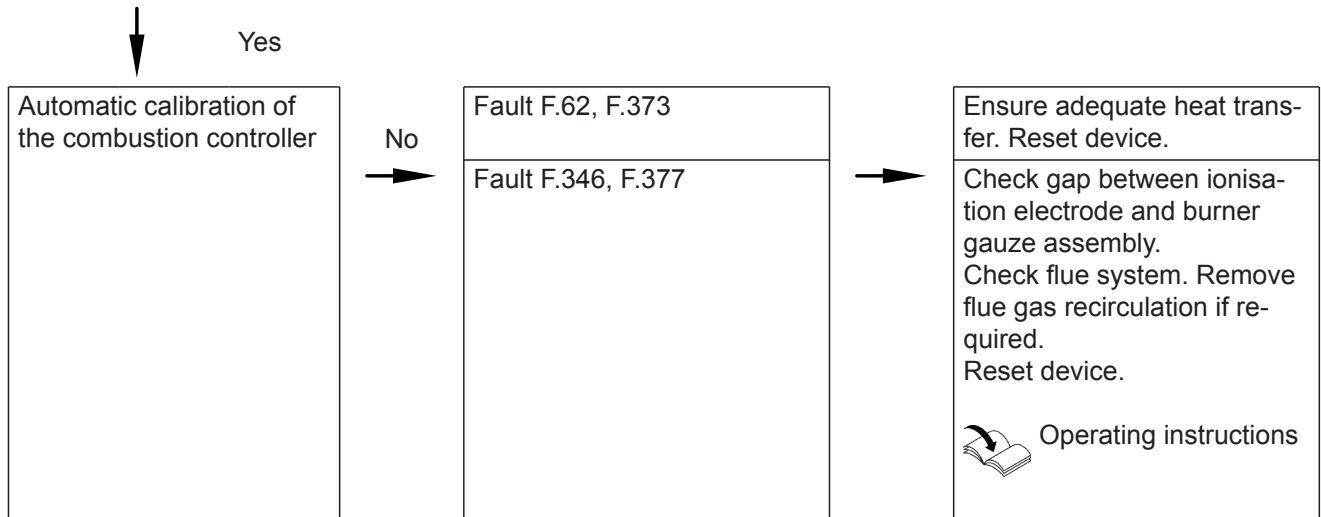

For further details regarding faults, see "Troubleshooting".








Setting the max. heating output

A limit can be set on the maximum heating output for **heating mode**. The limit is set via the modulation range.

Note

The flow rate must be checked before the max. heating output can be adjusted. Ensure adequate heat transfer.

1. Tap .
2. Select "**Service**".
3. Enter password "**viservice**".
4. Use  to confirm.
5. Select "**System configuration**".
6. Select "**Boiler**".
7. Parameter **596.0 "Maximum heating output"**
8. Check that a sufficient flow rate is ensured. If necessary, increase the heat transfer. Confirm the message with .
9. .
10. Set required value as a % of the rated heating output and confirm with . Factory setting 100 %.
11. End service functions.



Activating screed drying

Screed drying

6 different temperature profiles can be set for screed drying:

Preset temperature profiles can be adjusted via parameter **897.0 "Screed drying"** in the General group.

For further details, see "Function description".

Note

Screed drying applies to all connected heating circuits simultaneously. DHW heating is not possible during screed drying.



Adjusting pump rate of integral circulation pump

The pump speed and consequently the pump rate are regulated subject to the outside temperature and the switching times for heating mode or reduced mode. The minimum and maximum speeds for heating mode can be matched to the existing heating system at the control unit.

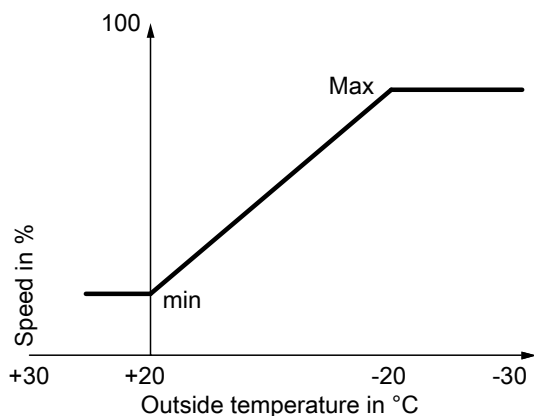


Fig. 30

Setting (%) in the heating circuit 1 group:

- Min. speed: Parameter 1102.0
 - Max. speed: Parameter 1102.1
 - In the delivered condition, the minimum pump rate and the maximum pump rate are set to the following values:
- | Rated heating output in kW | Speed settings in the delivered condition in % | |
|----------------------------|--|----------------|
| | Min. pump rate | Max. pump rate |
| 11 | 60 | 60 |
| 19 | 60 | 70 |
| 25 | 60 | 85 |
| 32 | 60 | 100 |
- In conjunction with a low loss header, heating water buffer cylinder and heating circuits with mixer, the internal circulation pump runs at a constant speed. Speed setting (%): Parameter 1100.2 in the Boiler group

Residual head of integral circulation pump

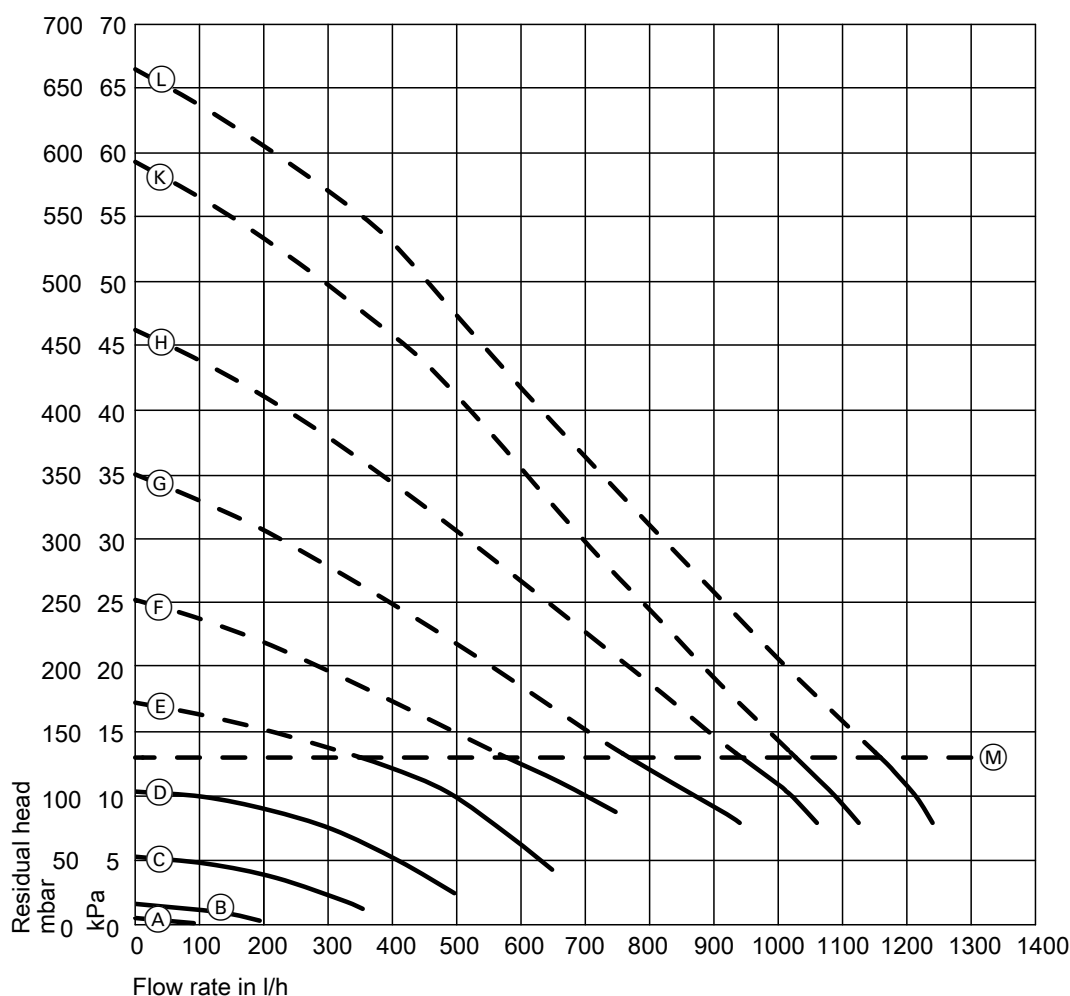


Fig. 31

Ⓜ Operating range upper limit



Adjusting pump rate of integral circulation pump (cont.)

Curve	Pump rate, circulation pump
(A)	10 %
(B)	20 %
(C)	30 %
(D)	40 %
(E)	50 %
(F)	60 %
(G)	70 %
(H)	80 %
(K)	90 %
(L)	100 %



Checking the balanced flue system for leaks (annular gap check)

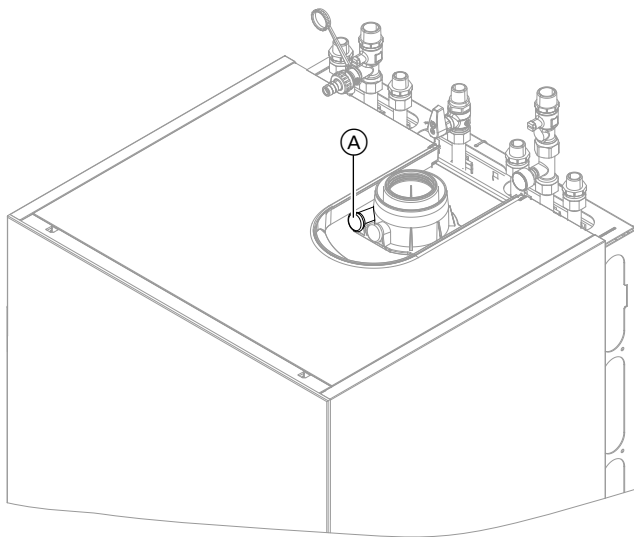


Fig. 32

(A) Combustion air aperture (ventilation air)

For balanced flue systems tested together with the heat generator, there is no requirement for a tightness test (overpressure test) during commissioning by the flue gas inspector.

In this case, we recommend that a simple tightness test is carried out during system commissioning. For this, check the CO₂ or O₂ concentration in the combustion air at the annular gap of the balanced flue pipe. If the CO₂ concentration is less than 0.2 % or the O₂ concentration is greater than 20.6 %, the flue pipe is deemed to be sufficiently gas-tight.

If actual CO₂ values are greater or O₂ values are lower, then pressure test the flue pipe with a static pressure of 200 Pa.



Please note

If the test port is not sealed, combustion air is drawn in from the room.

After the tightness test, re-seal the test port with the plug.



Removing the burner

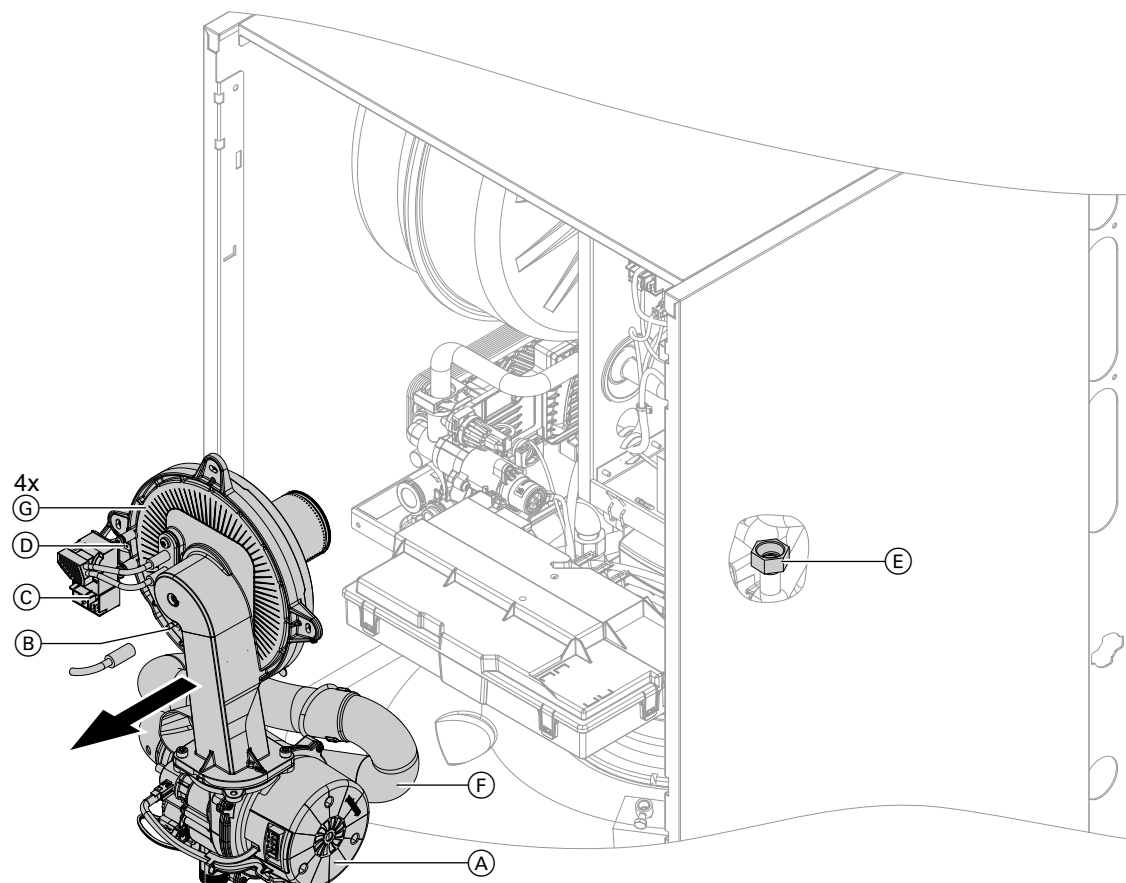


Fig. 33

1. Turn off the ON/OFF switch.
2. Close the gas shut-off valve and safeguard against reopening.
3. Release the clips and remove the cover panel.
4. Disconnect cables and leads from:
 - Fan motor (A)
Adaptor, CAN bus fan
 - Ionisation electrode (B)
 - Ignition unit (C)
 - Earth (D)
5. Undo gas supply pipe fitting (E).
6. Detach Venturi extension (F) from fan unit.
7. Undo 4 screws (G) and remove the burner.

Note

Cover gas connection (E) so that no small parts can fall into it.



Checking the burner gasket and burner gauze assembly

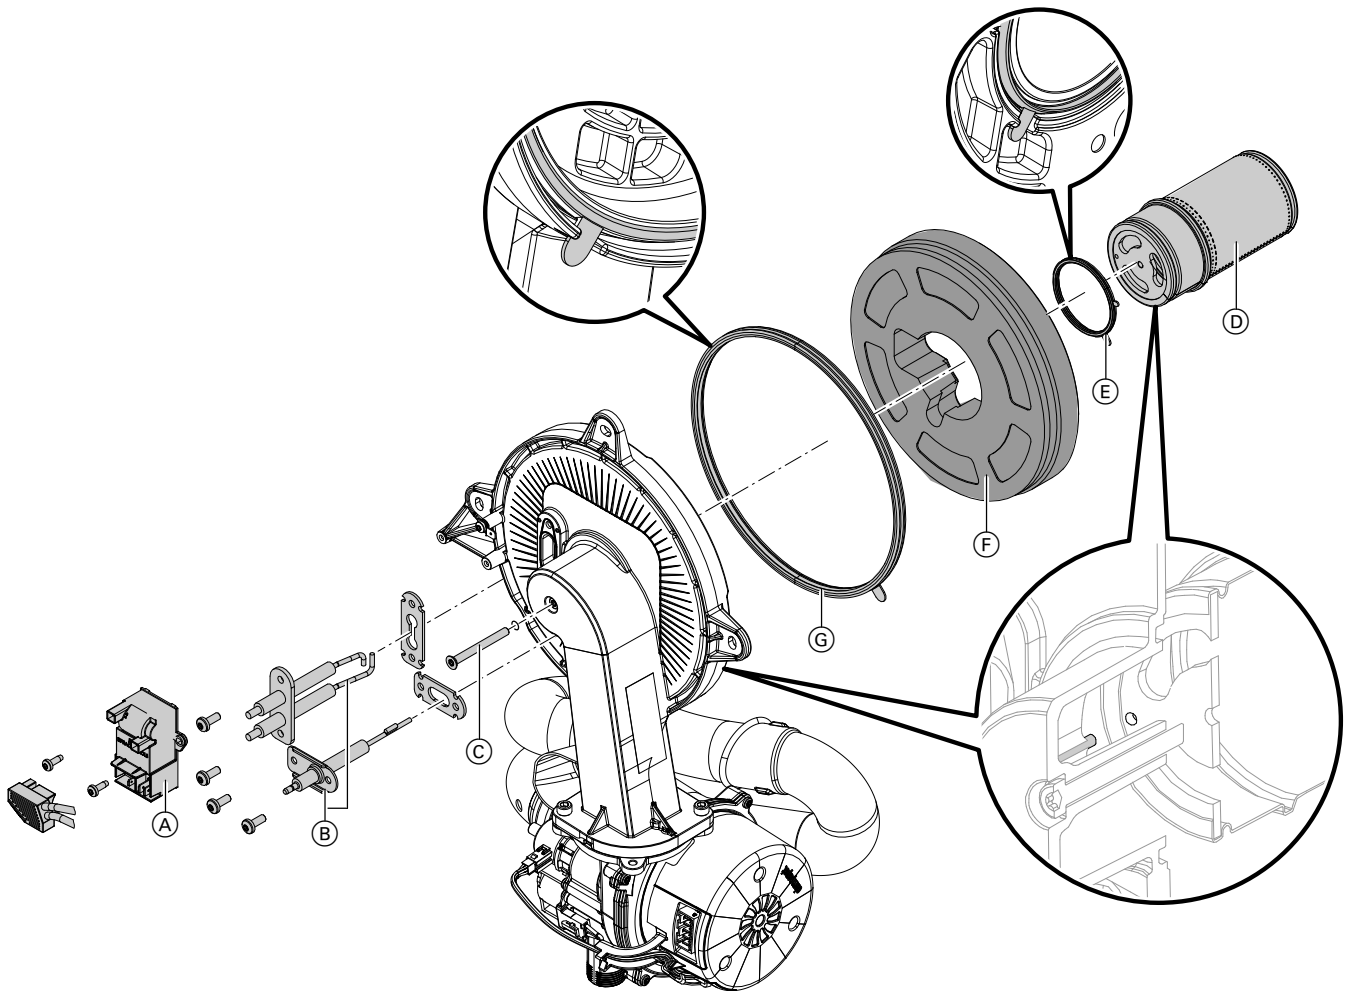


Fig. 34

Check burner gauze assembly (D), electrodes (B) and gasket (G) for damage. Only remove and replace components if they are damaged or worn.

Note

If replacing the burner gauze assembly, also replace the gauze assembly gasket and the fixing screw.

1. Disconnect plug with ignition electrode leads from ignition unit (A).
2. Remove electrodes (B).
3. Undo Torx screw (C). Hold onto burner gauze assembly (D) when undoing the screw.
4. Remove burner gauze assembly (D) with gasket (E) and thermal insulation ring (F). Check components for damage.
5. Install new burner gasket (G). Observe correct installation position. Align the tab as per the diagram.
6. Insert thermal insulation ring (F) and burner gauze assembly (D) with gasket (E). Observe correct installation position. Align the tab as per the diagram.
7. Align the hole in burner gauze assembly (D) with the burner door pin. Secure burner gauze assembly (D) and gasket (E) with Torx screw (C). Torque: 3.0 Nm.
8. Check thermal insulation ring (F) for firm seating.
9. Fit electrodes (B). Check clearances, see following chapter. Torque: 4.5 Nm.



Checking and adjusting the ignition and ionisation electrodes

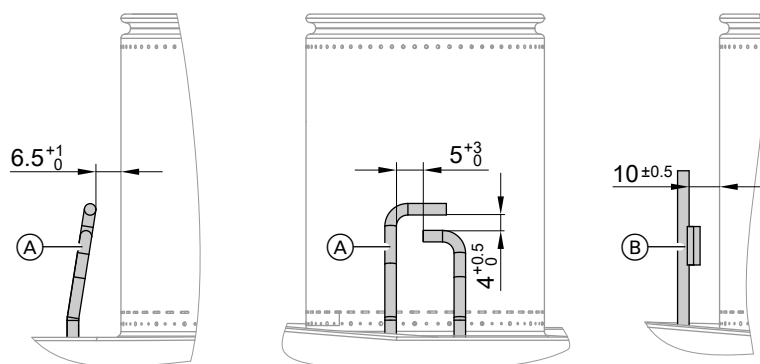


Fig. 35

- (A) Ignition electrodes
- (B) Ionisation electrode

1. Check the electrodes for wear and contamination.
2. Clean the electrodes with a small brush (not a wire brush) or sandpaper.
3. Check the electrode gaps. If the gaps are not as specified or the electrodes are damaged, replace the electrodes and gaskets and adjust them as required. Tighten the electrode fixing screws to a torque of 4.5 Nm.



Checking the back draught safety devices

Only for multiple connections to a flue system or multi boiler systems with a flue gas cascade.

Back draught safety device in the mixing shaft of the burner

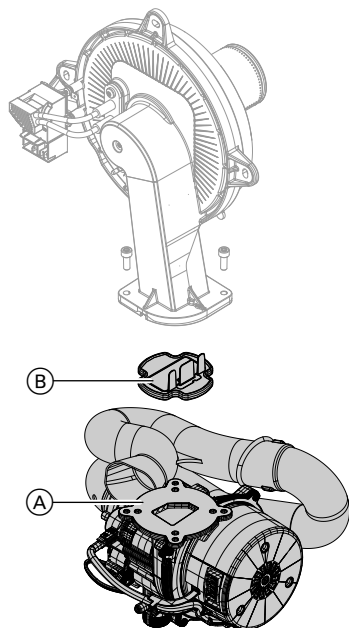


Fig. 36

1. Undo 2 screws and remove fan (A).
2. Remove back draught safety device (B).

3. Check the damper and gasket for dirt and damage. Replace if necessary.
4. Refit back draught safety device (B).

Note

Observe correct installation position.

5. Refit fan (A) and secure with 2 screws. Torque: 4.0 Nm

Back draught safety device in the flue gas connection

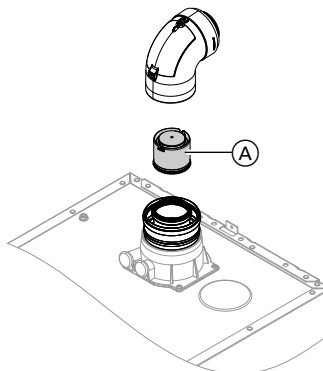


Fig. 37



Checking the back draught safety devices (cont.)

1. Remove the balanced flue system.

Note

If the balanced flue system cannot be removed, clean and check the back draught safety device via the inspection cover.

2. Check back draught safety device (A) for dirt, ease of movement and function.

3. Refit the balanced flue system.

4. Pour a small amount of water through the inspection port to ensure the back draught safety device is working.



Cleaning the heating surfaces



Please note

Scratches to the surfaces of the heat exchanger that come into contact with hot gas can result in corrosion damage. Brushing can cause deposits to become lodged in the gaps between the coils. **Never use brushes to clean the heating surfaces.**



Please note

Prevent damage due to cleaning water. Cover electronic components with suitable watertight material.

Note

Discolouration on the heat exchanger surface is a normal sign of use. It has no bearing on the function and service life of the heat exchanger.

The use of chemical cleaning agents is not required.

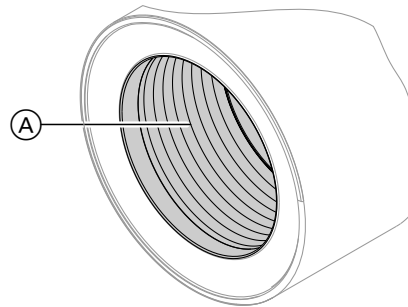


Fig. 38

1. Use a vacuum cleaner to remove combustion residues from heating surface (A) of the heat exchanger.
2. Flush heating surface (A) with water.
3. Check condensate drain. Clean the trap: See the following chapter.



Checking the condensate drain and cleaning the trap



Please note

Prevent damage due to condensate. Cover electronic components with suitable watertight material.

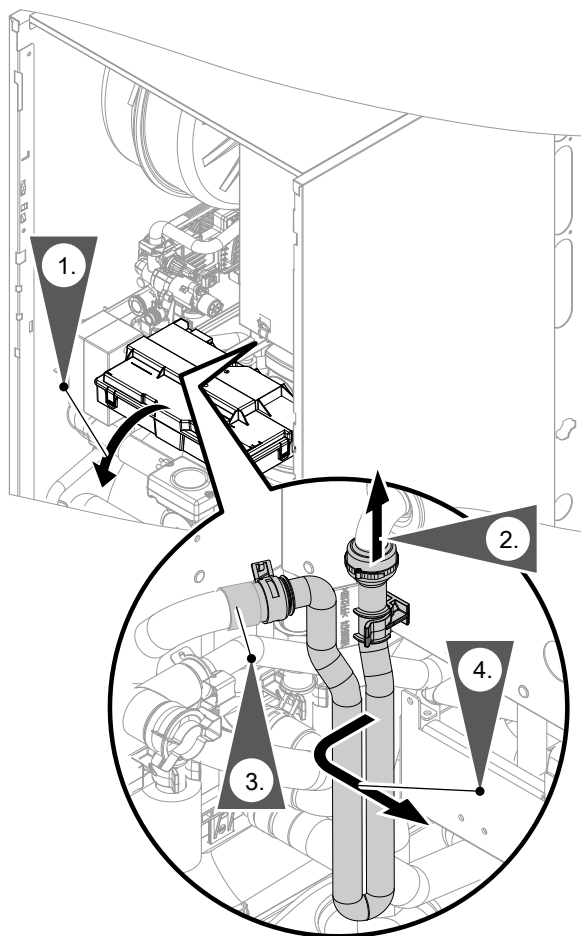


Fig. 39

1. Pivot the HMU heat management unit forwards.
2. Undo the hose retainer. Remove the supply hose.



Please note

Do not undo using a sharp object. This can damage the condensate hose.
The hose retainer is detachable.

3. Undo hose clip and pull off drain hose.
4. Release trap from retaining clip.
Hold trap as straight as possible and remove.
Ensure that no condensate runs out.
5. Clean the trap.
6. Refit the trap.
7. Refit the hoses. Secure the drain hose with the hose clip and attach the supply hose with the retainer.

8. Check that connections on the trap and the heat exchanger are seated correctly.

Note

Route the drain hose without any bends and with a constant fall.

9. Flush the heating surface again with min. 0.3 l of water. This will also fill the trap with water.



Please note

If the trap is not filled with water, flue gas can escape.
Only start the appliance when the trap has been filled.



Danger

Risk of electric shock from escaping condensate and risk of poisoning from escaping flue gas.
Check the connections for leaks and check that the trap is seated correctly.



Installing the burner

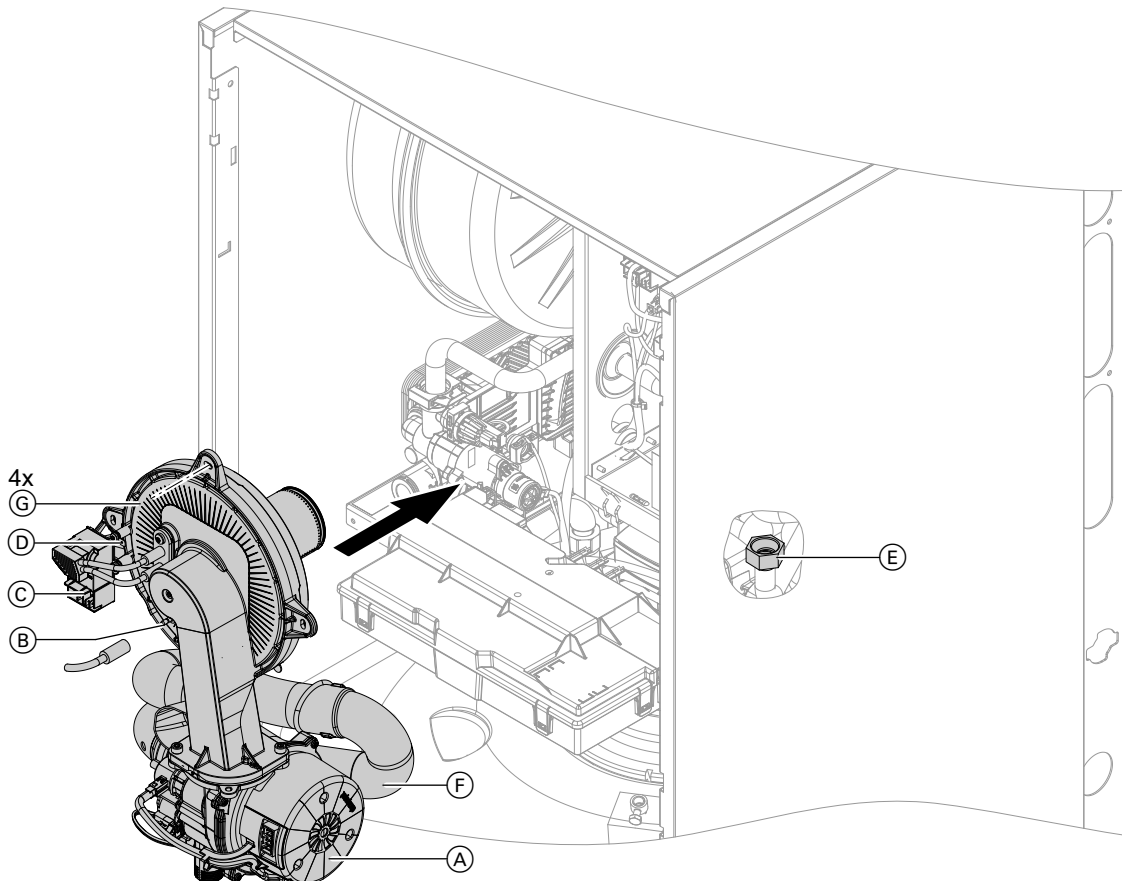


Fig. 40

1. If necessary, move the programming unit.
2. Insert the burner and tighten screws (G) diagonally.
Torque: **6.5 Nm**
3. Attach Venturi extension (F) to fan unit.
4. Fit gas supply pipe (E) with a new gasket.
Torque: 30 Nm
5. Check the gas connections for leaks.
6. Connect the cables/leads:
 - Fan motor (A)
Connect CAN bus fan to adaptor.
 - Ionisation electrode (B)
 - Ignition unit (C)
 - Earth (D)
7. Fit cover panel.



Danger

Escaping gas leads to a risk of explosion.
Check the fitting for gas tightness.



Checking the neutralising system (if installed)



Checking anode connection and anode earth current with anode tester

Check that the earth cable is connected to the protective magnesium anode.

Note

We recommend checking the function of the protective magnesium anode annually. This function test can be carried out without interrupting operation, by measuring the earth current with an anode tester.

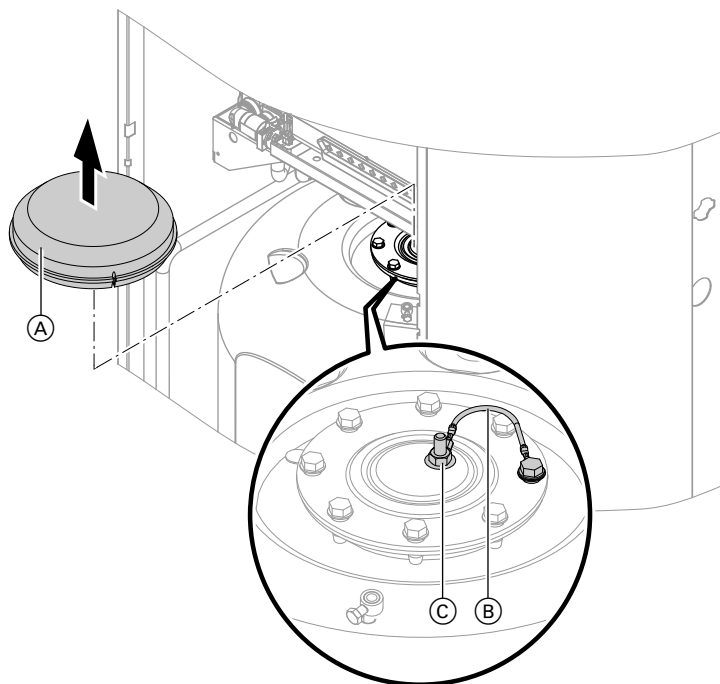


Fig. 41

1. Remove cover (A) (two-part design up to 26 kW).
2. Remove earth cable (B) from tab (C).
3. Connect tester (up to 5 mA) in series between tab (C) and earth cable (B).
 - If the current measures > 0.3 mA the protective magnesium anode is OK.
 - If the current measures < 0.3 mA or if there is no current at all, inspect the protective magnesium anode visually (see page 52).



Draining the boiler on the DHW side

1. Shut off the DHW supply upstream of the appliance.



Draining the boiler on the DHW side (cont.)

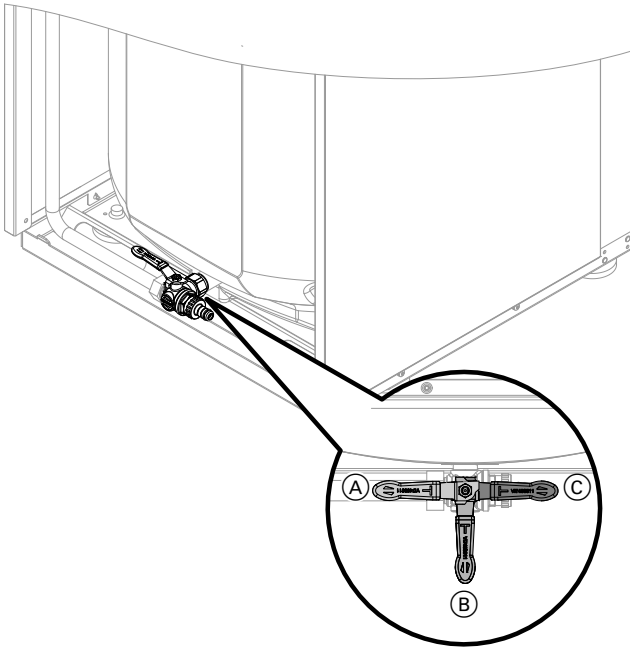


Fig. 42

2. Connect the hose to the drain valve and route it into a suitable container or drain outlet.

Note

Ensure adequate ventilation in the DHW pipework.

3. Turn the drain valve from lever position (A) (operational) to lever position (B) or (C) as required.
 - Lever position (B): The DHW circuit in the appliance **excluding** the DHW cylinder is drained via the cold water connection.
 - Lever position (C): The DHW circuit in the appliance **and** the DHW cylinder are drained via the hot water connection. The cold water connection remains filled.



Cleaning the loading cylinder

Note

According to EN 806, a visual inspection and (if necessary) cleaning must be carried out no later than 2 years after commissioning, and as required thereafter.



Cleaning the loading cylinder (cont.)

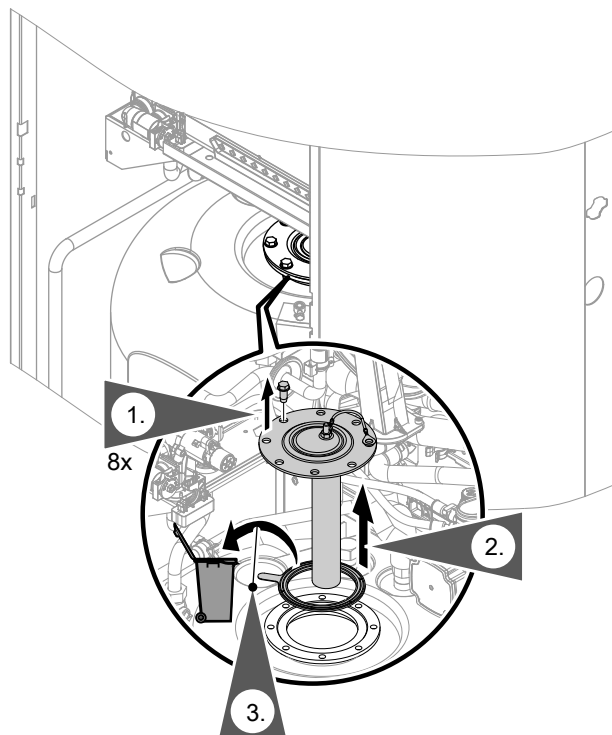


Fig. 43

1. Drain the loading cylinder.
2. Remove flange cover (A).
3. Disconnect the loading cylinder from the pipework to prevent contamination from entering the pipework.
4. Remove loose deposits with a pressure cleaner. Use a chemical cleaning agent to remove hard deposits that cannot be removed with a pressure cleaner.
5. Thoroughly flush the loading cylinder after cleaning.



Please note

Do not damage the cylinder:

- Only use plastic cleaning equipment to clean the inside.
- Never use cleaning agents containing hydrochloric acid.



Checking and replacing the protective magnesium anode (if necessary)

Visual inspection of protective magnesium anode. If the anode has degraded to between 10 and 15 mm Ø, we recommend replacing the magnesium protective anode.



Re-assembling and filling the loading cylinder

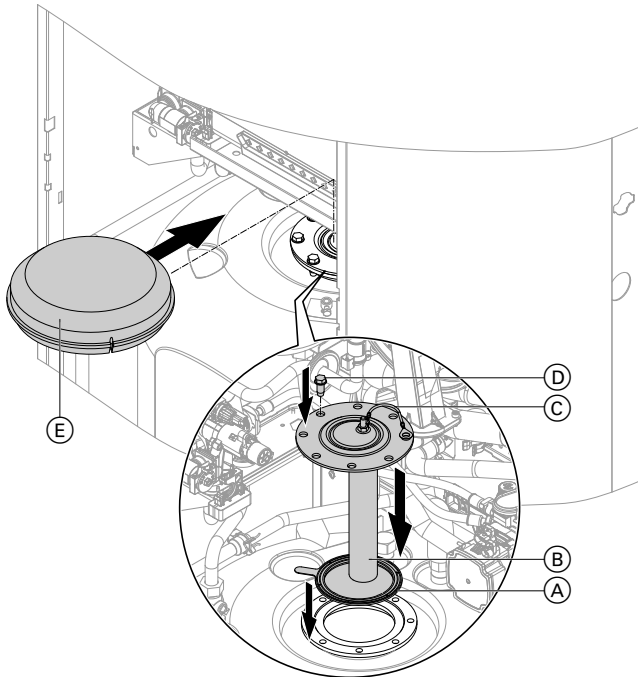


Fig. 44

1. Reconnect the loading cylinder to the pipework.
2. Insert new gasket (A) underneath flange cover (B).
3. Fit flange cover (B) and tighten 8 screws (D) with a maximum torque of 25 Nm.
4. Push earth cable (C) onto the tab.
5. Fit cover (E) (two-part design up to 26 kW).
6. Fill the loading cylinder with potable water.



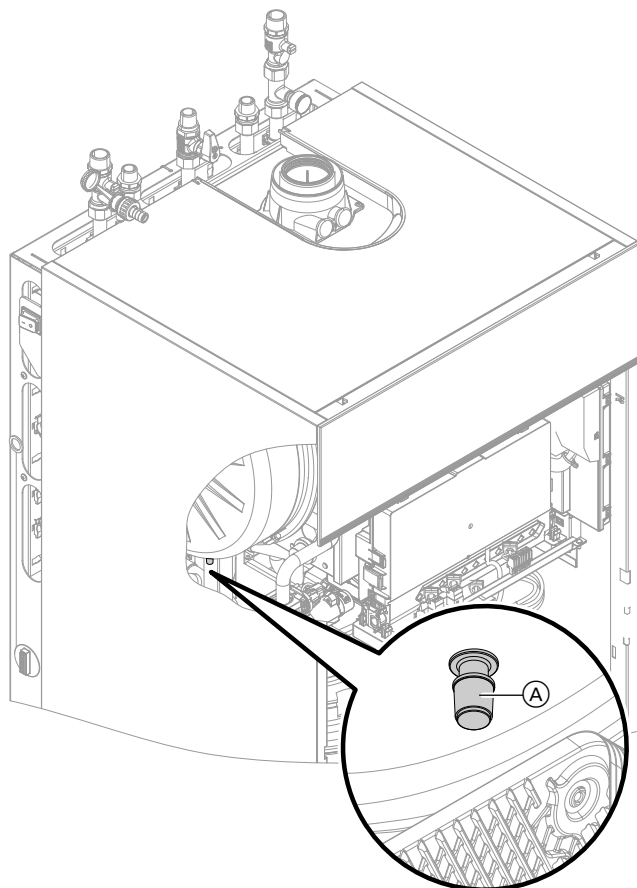


Fig. 45

Ⓐ Diaphragm expansion vessel valve

Note

The expansion vessel can lose some of its charge pressure over time. When the boiler heats up, the pressure rises to 2 or 3 bar (0.2 or 0.3 MPa). The safety valve may also respond and discharge the excess pressure.

Therefore check the expansion vessel pre-charge pressure annually.

Check whether the installed expansion vessel is adequate for the system water volume.
Carry out this test on a cold system.

1. Drain the system until "0" is shown on the pressure indicator.
2. If the pre-charge pressure of the expansion vessel is lower than the static system pressure: Top up with nitrogen at the valve of the diaphragm expansion vessel until the pre-charge pressure is 0.1 to 0.2 bar (10 to 20 kPa) higher than the static system pressure.

3. Top up with water until the charge pressure of the cooled system is at least 1.0 bar (0.1 MPa), and is 0.1 to 0.2 bar (10 to 20 kPa) higher than the pre-charge pressure of the expansion vessel.
Permiss. operating pressure: 3 bar (0.3 MPa)

Note

The expansion vessel is supplied from the factory with a pre-charge pressure of 0.7 bar.

Do not allow the pre-charge pressure to fall below this value (boiling noises). This also applies to single floor heating systems or attic heating centres (no static pressure).

Top up with water until the charge pressure is 0.1 to 0.2 bar above the pre-charge pressure.



Checking pre-charge pressure and DHW expansion vessel (if installed)

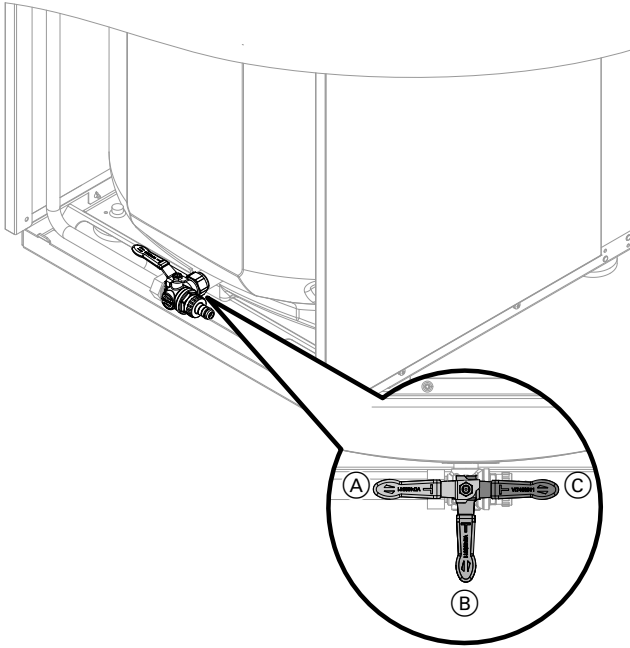


Fig. 46

1. Check the static pressure of the DHW line downstream of the pressure reducer and adjust if required. Set value: Max. 3.0 bar (0.3 MPa)
2. Close the on-site shut-off valve in the cold water line.
Relieve the water pressure.
3. Turn lever on valve to position (B).
4. Check the pre-charge pressure of the DHW expansion vessel and adjust if required. Set value: Static pressure minus 0.2 bar (20 kPa).
5. Turn lever on valve back to position (A). Open the on-site shut-off valve in the cold water line.



Checking the safety valve function



Checking the electrical connections for firm seating



Checking gas equipment for leaks at operating pressure



Danger

Escaping gas leads to a risk of explosion.
Check gas equipment (including inside the appliance) for gas leaks.

Note

Only use suitable and approved leak detection agents (EN 14291) and devices for the leak test. Leak detection agents with unsuitable constituents (e.g. nitrides, sulphides) can cause material damage.
Remove residues of the leak detection agent after testing.



Checking the combustion quality

The electronic combustion controller automatically ensures optimum combustion quality. During commissioning/maintenance, only the combustion values need to be checked. For this, measure the CO content and the CO₂ or O₂ content.

Note

To prevent operating faults and damage, operate the appliance with uncontaminated combustion air.

Permissible CO content

The CO content must be < 1000 ppm for all gas types.



Permissible CO₂ or O₂ content

Operation with natural gas

Rated heating output (kW)	CO ₂ content (%)		O ₂ content (%)	
	Upper heating output	Lower heating output	Upper heating output	Lower heating output
11	7.3 - 10.5	7.5 - 10.5	2.1 - 7.9	2.1 - 7.6
19	7.5 - 10.5	7.5 - 10.5	2.1 - 7.6	2.1 - 7.6
25	7.5 - 10.5	7.5 - 10.5	2.1 - 7.6	2.1 - 7.6
32	7.3 - 10.0	7.5 - 10.5	3.1 - 7.9	2.1 - 7.6

Operation with LPG

- CO₂ content: 8.4 - 11.8 %
- O₂ content: 3.1 - 8.1 %

If the actual CO₂ or O₂ values lie outside their respective ranges, proceed as follows:

- Check the balanced flue system for leaks; see page 43.
- Check ionisation electrode and connecting cable.

Note

During commissioning, the combustion controller carries out an automatic calibration. Only measure the emissions approx. 50 s after the burner has started.

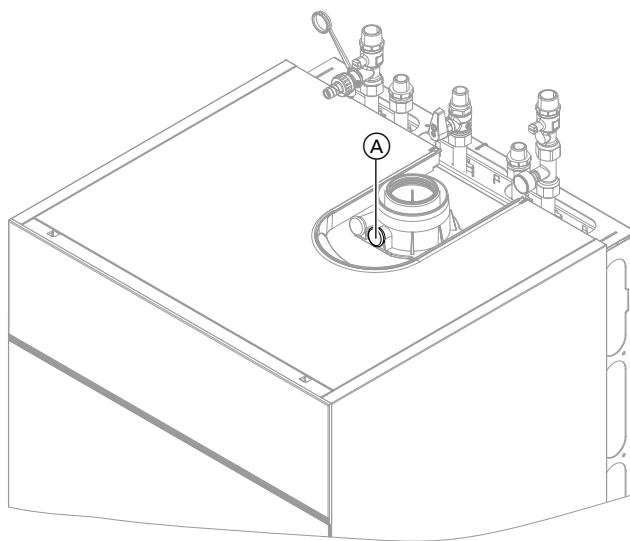


Fig. 47

1. Connect a flue gas analyser at flue gas port (A) on the boiler flue connection.
2. Open the gas shut-off valve. Start the boiler. Create a heat demand.
3. Adjust the lower heating output. See the following chapter.
4. Check the CO₂ content. If the actual value deviates from the permissible ranges, implement steps listed above.
5. Enter the actual value into the report.
6. Adjust the upper heating output. See the following chapter.
7. Check the CO₂ content. If the actual value deviates from the permissible ranges by more than 1 %, implement steps listed above.
8. Enter the actual value into the report.
9. Re-seal test port (A).



Danger

Escaping flue gas can damage your health. Check test port (A) for leaks.

Selecting the upper/lower heating output

Note

Ensure adequate heat transfer.

Tap the following buttons:

1. ≡

2. "Service"

3. Enter password "viservice".

4. Use ✓ to confirm.

5. "Actuator test"

6. Use ✓ to confirm.



Checking the combustion quality (cont.)

7. " "Select **"Primary circuit pump, set speed"** and adjust the set value to the maximum value.
8. " "Select **"Burner modulation, set value"**.
9. Set the lower heating output:
Select **"Minimum heating output"**.
The burner now operates at the lower heating output.
10. Set the upper heating output:
Select **"Maximum heating output"**.
The burner now operates at the upper heating output.
11. End output selection:
↩ or ↗



Checking the flue system for unrestricted flow and leaks



Checking the external LPG safety valve (if installed)



Matching the control unit to the heating system

The control unit must be matched to the system equipment level.

Set the parameters according to the accessories fitted:



Accessories installation and service instructions




Adjusting the heating curves

Tap the following buttons:

1. ≡
2. "Heating"
3. Select **"Heating circuit 1"** or **"Heating circuit ..."** for the required heating circuit.
4. "Heating curve"
5. Set the heating curve according to the requirements of the system using **"Slope" +/-** or **"Level" +/-**.
6. ✓ to confirm



Calling up and resetting the maintenance display

In the following cases,  will be displayed (red indicator flashes):

- The specified limits have been reached.
- There is cause for a warning.

Checking service messages

1. ≡
2. For **"Message lists"**
3. For **"Service"**

Acknowledging a service

1. ↗ to acknowledge the maintenance messages

2. ✓ to confirm

Note

An acknowledged service message that was not reset reappears the following Monday.

After a service has been carried out (resetting service indicator)

1. "≡"
2. "Service"
3. Enter password **"viservice"**.
4. Use ✓ to confirm.



Calling up and resetting the maintenance display (cont.)

5. "System configuration"

6. "Boiler"

7. Select parameter **1411.0 "Clear maintenance messages"** and **"ON"**.

Note

The selected service parameters for hours run and time intervals restart at 0.



Fitting the front panel

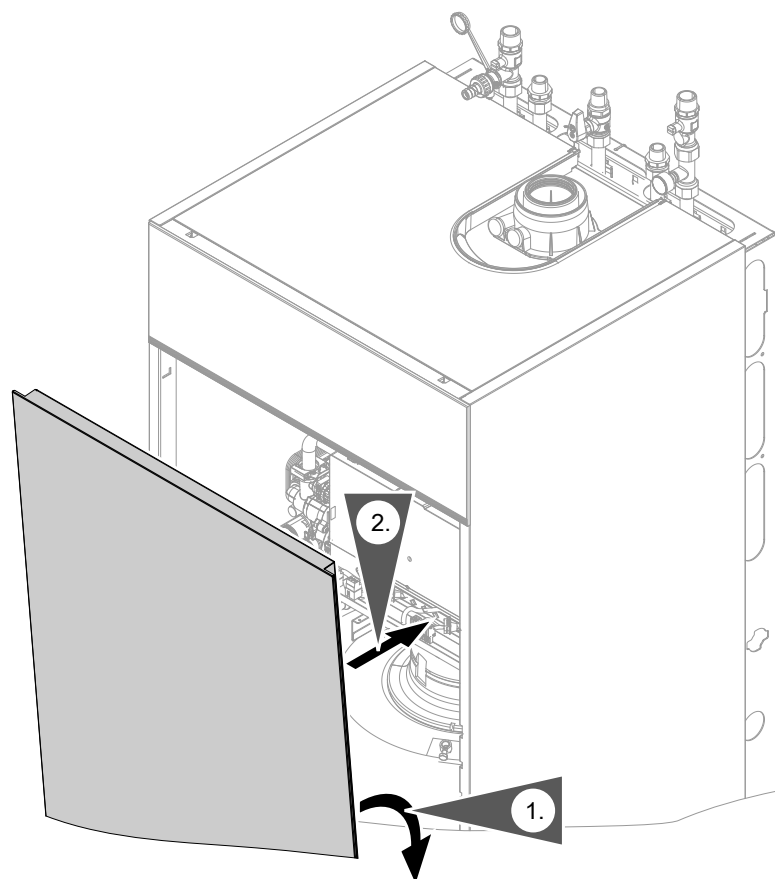


Fig. 48



Instructing the system user

The system installer should hand the operating instructions to the system user and explain to the user how to operate the system.

DHW hygiene

For optimum DHW hygiene, avoid DHW temperatures that are $< 50\text{ }^{\circ}\text{C}$. For larger systems and systems with low water exchange, the temperature should not drop below $< 60\text{ }^{\circ}\text{C}$.

To activate the function, see the operating instructions. Inform the system user what DHW temperatures should be set and the risks associated with having a raised outlet temperature at the draw-off points.

Hygiene function

The DHW can be heated to a specified (higher) set DHW temperature for a period of one hour.

Calling up parameters






- Parameters are split into the following groups:
 - "General"
 - "Boiler"
 - "DHW"
 - "Heating circuit 1/2/3/4"
- Heating systems with one heating circuit without mixer and one or two heating circuits with mixer: Below, the heating circuit without mixer is designated "Heating circuit 1" and the heating circuits with mixer as "Heating circuit 2", "Heating circuit 3" or "Heating circuit 4".
If the heating circuits have been given individual names, the chosen name appears.

Note

The display and setting of some parameters is dependent on:

- Heat generator
- Connected accessories and the functions associated with them

Tap the following buttons:

1. 
2. "Service"
3. Enter password "**viservice**".
4. "System configuration"
5. Select group.
6.  to select parameters.
7. 
8.  for the required value according to the following tables.
9.  to accept the set value.

General

Note

Parameter values in **bold** are factory settings.

508.0 "UTC time zone"

Setting	Explanations
2 –24 to +24	Setting of the UTC time zone in which the appliance is located. The factory setting is UTC +1 h Time difference adjustable from –12 h to +12 h in increments of 0.5 h

528.0 "Set flow temperature for external demand"

Setting	Explanations
70 20 to 82	Set flow temperature for external demand Set flow temperature in the delivered condition 70 °C Set flow temperature adjustable from 20 to 82 °C in 1 °C increments

896.0 "Display correction for outside temperature"

Setting	Explanations
0 –10 to + 10	Correction of measured outside temperature Correction in the delivered condition 0 K Correction adjustable from –10 to + 10 K in 1 K increments

General (cont.)**897.0 "Screed drying"**

Setting		Explanations
Not active	0	Screed drying can be set in accordance with selectable temperature/time profiles. For individual profile curves, see chapter "Function description".
Diagram 1	2	
Diagram 2	3	
Diagram 3	4	
Diagram 4	5	
Diagram 5	6	
Diagram 6	7	

912.0 "Automatic summer/wintertime changeover"

Setting		Explanations
No	0	Automatic changeover disabled
Yes	1	Automatic changeover enabled

912.1 "Earliest day of changeover from winter to summertime"

Setting		Explanations
	25	Changeover from 02:00 h to 03:00 h occurs on the Sunday after or on this set date.
	1 to 31	Day of changeover adjustable from 1st to 31st of the month

912.2 "Month of changeover from winter to summertime"

Setting		Explanations
	3	Month of changeover: March
	1 to 12	Month of changeover adjustable from January to December

912.3 "Earliest day of changeover from summer to wintertime"

Setting		Explanations
	25	Changeover from 03:00 h to 02:00 h occurs on the Sunday after or on this set date.
	1 to 31	Day of changeover adjustable from 1st to 31st of the month

912.4 "Month of changeover from summer to wintertime"

Setting		Explanations
	10	Month of changeover: October
	1 to 12	Month of changeover adjustable from January to December

1098.4 "Gas volume correction factor"

Setting		Explanations
	1.0000	Value is provided on the gas supplier's bill. Used for gas consumption data.
	0.7000 to 1.0000	Gas volume correction factor adjustable from 0.7000 to 1.0000 in increments of 0.0001.

General (cont.)**1098.5 "Calorific value"**

Setting		Explanations
	10.0000 5.0000 to 40.0000	Value is provided on the gas supplier's bill. Used for gas consumption data. Calorific value adjustable from 5.0000 to 40.0000 kWh/m ³ in increments of 0.0001

1139.0 "Outside temperature limit for cancelling reduced set room temperature"

Setting		Explanations
	-5 -61 to +10	Temperature limit for cancelling reduced set room temperature Temperature limit in the delivered condition - 5 °C Temperature limit adjustable from - 61 to + 10 °C in 1°C increments

1139.1 "Outside temperature limit for raising the reduced set room temperature to the standard set room temperature"

Setting		Explanations
	-14 -60 to +10	Temperature limit for raising the reduced set room temperature (see function description) Temperature limit in the delivered condition - 14 °C Temperature limit adjustable from - 60 to + 10 °C in 1 °C increments

1504.0 "Source for date and time"

Setting		Explanations
Local	0 1	Selection of source for date and time The setting depends on the heat generator and accessories. Factory setting: The date and time are adopted from the control unit. Internet protocol (see parameter "508.0")

Boiler**Note**

Parameter values in **bold** are factory settings.

521.0 "Time interval in burner hours until the next service"

Setting		Explanations
	0 0 to 25500	Number of burner hours to run until next service Burner hours until next service adjustable from 0 to 25500

Boiler (cont.)**522.3 "Interval until the next service"**

Setting		Explanations
	0	Interval until the next service No interval selected
	1	3 months
	2	6 months
	3	12 months
	4	18 months
	5	24 months

596.0 "Maximum heating output"

Setting		Explanations
	100	A limit can be set on the maximum heating output for heating mode.
	0 to 100	Heating output in the delivered condition 100 % Adjustable from 0 to 100 %

597.0 "Limit, max. heating output for DHW heating"

Setting		Explanations
	100	A limit can be set on the maximum heating output for DHW heating.
	0 to 100	Heating output in the delivered condition 100 % Adjustable from 0 to 100 %

1100.2 "Set speed of the primary circuit pump in heating mode"

Setting		Explanations
	...	Set speed of internal circulation pump <ul style="list-style-type: none"> ▪ In heating mode ▪ With external demand ▪ With demand in conjunction with a low loss header Delivered condition specified by settings specific to the appliance
	20 to 100	Set speed adjustable from 20 to 100 %

1240.0 "Operating mode of primary circuit pump"

Setting		Explanations
	1	"Automatic" Switched on regardless of current temperature level
	7	Shutdown in reduced mode (in conjunction with continuous operation or when no demand via room thermostat)

1411.0 "Clear maintenance messages"

Setting		Explanations
No	0	Clear maintenance messages once maintenance has been performed.
Yes	1	Maintenance messages are active (if present). Clear maintenance messages once.

Boiler (cont.)**1432.1 "Residual head control of primary circuit pump"**

Setting		Explanations
	0	Residual head limit value for reducing pump speed of the internal circulation pump, in mbar Internal circulation pump is controlled in line with the outside temperature
	1 to 255	Internal circulation pump is operated with constant residual head. Recommended setting: 120 mbar 1 step \pm 1 mbar

1432.2 "Operating mode of primary circuit pump"

Setting		Explanations
	0	Internal circulation pump is operated with constant differential pressure.
	1 to 20	Internal circulation pump is operated with rising differential pressure. Adjustable from 1 to 20 mbar

1503.0 "Minimum heating output"

Setting		Explanations
	...	A limit can be set on the minimum heating output for heating mode. Delivered condition specified by settings specific to the appliance
	5 to 100	Adjustable from 5 to 100 %

1606.0 "Minimum burner pause time"

Setting		Explanations
	0	The minimum burner pause time can be set subject to boiler load. Fixed setting for minimum burner pause time
	1	Delivered condition, integral method (see parameter 1606.4)

1606.4 "Integral threshold for burner switch-off"

Setting		Explanations
	50	Only effective if parameter 1606.0 has been set to 1. Factory setting 50 K x min
	5 to 255	Adjustable from 5 to 255 K x min The higher the value, the later the burner switches off.


DHW**Note**

Parameter values in **bold** are factory settings.

497.0 "Operating mode of DHW circulation pump"

Setting		Explanations
	0	DHW circulation pump: Time program
	4	Selected cycle (see parameter 497.3)


497.1 "DHW circulation pump for auxiliary function DHW heating"

Setting		Explanations
OFF	0	DHW circulation pump: In accordance with the selected time program
ON	1	ON during hygiene function  Danger Risk of injury due to increased DHW temperature. Inform the system user of the risk from the higher outlet temperature at the taps.

497.2 "DHW circulation pump for DHW heating"

Setting		Explanations
Off	0	DHW circulation pump: In accordance with the selected time program
On	1	ON during DHW heating to standard set value

503.0 "Scald protection"

Setting		Explanations
OFF	0	The adjustable water temperature is limited to a maximum value. Scald protection OFF  Danger Risk of injury due to increased DHW temperature. Inform the system user of the risk from the higher outlet temperature at the taps.
ON	1	Scald protection ON (maximum DHW temperature 60 °C) Note <i>Even with the scald protection switched on, higher outlet temperatures may occur at the draw-off points in the following cases:</i> <ul style="list-style-type: none"> ▪ With active hygiene function ▪ While the appliance is being calibrated

DHW (cont.)**1101.2 "Set speed of the primary circuit pump for DHW heating"**

Setting		Explanations
	...	Set speed of the internal circulation pump when operated as a circulation pump for cylinder heating
		Delivered condition specified by settings specific to the appliance
	20 to 100	Set speed adjustable from 20 to 100 %

1394.0 "DHW set temperature for reheating suppression"

Setting		Explanations
40 °C	40	DHW set temperature for reheating suppression. Above the selected set temperature reheating suppression is active.
	0 to 95	DHW set temperature adjustable from 0 to 95 °C

Heating circuit 1, Heating circuit 2, Heating circuit 3, Heating circuit 4**Note**

Parameter values in **bold** are factory settings.

424.3 "Set flow temperature increased when switching from operation with reduced room temperature to operation with standard/comfort room temperature, heating circuit 1"

Setting		Explanations
		Set flow temperature increased when changing from operation at reduced room temperature to operation at standard room temperature or comfort room temperature.
		See also chapter "Function description"
0 K	0	Delivered condition increase 0 K
	0 to 20	Temperature rise adjustable from 0 to 20 K

424.4 "Duration for set flow temperature increase, heating circuit 1"

Setting		Explanations
		Duration for set flow temperature increase
		See also chapter "Function description"
60 min	60	Delivered condition 60 min
	0 to 120	Temperature rise adjustable from 0 to 120 min

426.3 "Set flow temperature increased when switching from operation with reduced room temperature to operation with standard/comfort room temperature, heating circuit 2"

Setting		Explanations
		Set flow temperature increased when changing from operation at reduced room temperature to operation at standard room temperature or comfort room temperature.
		See also chapter "Function description"
0 K	0	Delivered condition increase 0 K
	0 to 20	Temperature rise adjustable from 0 to 20 K

Heating circuit 1, Heating circuit 2, Heating... (cont.)**426.4 "Duration for set flow temperature increase, heating circuit 2"**

Setting		Explanations
60 min	60 0 to 120	Duration for set flow temperature increase See also chapter "Function description" Delivered condition 60 min Temperature rise adjustable from 0 to 120 min

428.3 "Set flow temperature increased when switching from operation with reduced room temperature to operation with standard/comfort room temperature, heating circuit 3"

Setting		Explanations
0 K	0 0 to 20	Set flow temperature increased when changing from operation at reduced room temperature to operation at standard room temperature or comfort room temperature. See also chapter "Function description" Delivered condition increase 0 K Temperature rise adjustable from 0 to 20 K

428.4 "Duration for set flow temperature increase, heating circuit 3"

Setting		Explanations
60 min	60 0 to 120	Duration for set flow temperature increase See also chapter "Function description" Delivered condition 60 min Temperature rise adjustable from 0 to 120 min

933.3 "Priority, DHW heating, heating circuit 1"

Setting		Explanations
		Priority of DHW heating over the heating circuit
Off	0	Without DHW heating priority
DHW	1	With DHW heating priority

933.6 "Operating mode of heating circuit 1"

Setting		Explanations
Weather-compensated without room temperature hook-up	4	Only adjust for systems with one heating circuit. Heating mode: Weather-compensated without room temperature influence
Weather-compensated with room temperature hook-up	7	Weather-compensated with room temperature influence (see also parameter 933.7)

Heating circuit 1, Heating circuit 2, Heating... (cont.)

933.7 "Room influence factor, heating circuit 1"

Setting		Explanations
		The higher the value, the greater the influence of the room temperature on the set flow temperature of the heating circuit (heating curve). Operation with room temperature hook-up must be set for the heating circuit (parameter 933.6). Only change the value for systems with one heating circuit. For a sample calculation, see chapter "Heating curve" in the "Function description"
	8	Room influence factor
	0 to 64	Room influence adjustable from 0 to 64

934.3 "Priority, DHW heating, heating circuit 2"

Setting		Explanations
		Priority of DHW heating over heating circuit pump and mixer
OFF	0	Without DHW heating priority
DHW	1	With DHW heating priority

934.5 "Differential temperature, heating circuit 2"

Setting		Explanations
		The flow temperature of the heat generator is higher than the flow temperature of the heating circuit with mixer by an adjustable differential temperature. See also chapter "Function description".
8 K	8	Differential temperature in delivered condition 8 K
	0 to 20	Differential temperature adjustable from 0 to 20 K

934.6 "Operating mode of heating circuit 2"

Setting		Explanations
		Heating mode:
Weather-compensated without room temperature hook-up	4	Weather-compensated without room temperature influence
Weather-compensated with room temperature hook-up	7	Weather-compensated with room temperature influence See also parameter 934.7

934.7 "Room influence factor, heating circuit 2"

Setting		Explanations
		The higher the value, the greater the influence of the room temperature on the set flow temperature of the heating circuit (heating curve). Operation with room temperature hook-up must be set for the heating circuit (parameter 934.6). Change value for heating circuit with mixer only. For a sample calculation, see chapter "Heating curve" in the "Function description"
	8	Room influence factor
	0 to 64	Room influence adjustable from 0 to 64

Heating circuit 1, Heating circuit 2, Heating... (cont.)**935.3 "Priority, DHW heating, heating circuit 3"**

Setting		Explanations
OFF	0	Priority of DHW heating over heating circuit pump and mixer Without DHW heating priority
DHW	1	With DHW heating priority

935.5 "Differential temperature, heating circuit 3"

Setting		Explanations
8 K	8 0 to 20	The flow temperature of the heat generator is higher than the flow temperature of the heating circuit with mixer by an adjustable differential temperature. See also chapter "Function description". Differential temperature in delivered condition 8 K Differential temperature adjustable from 0 to 20 K

935.6 "Operating mode of heating circuit 3"

Setting		Explanations
Weather-compensated without room temperature hook-up	4	Heating mode: Weather-compensated without room temperature influence
Weather-compensated with room temperature hook-up	7	Weather-compensated with room temperature influence See also parameter 935.7

935.7 "Room influence factor, heating circuit 3"

Setting		Explanations
	8 0 to 64	The higher the value, the greater the influence of the room temperature on the set flow temperature of the heating circuit (heating curve). Operation with room temperature hook-up must be set for the heating circuit (parameter 935.6). Change value for heating circuit with mixer only. For a sample calculation, see chapter "Heating curve" in the "Function description" Room influence factor Room influence adjustable from 0 to 64

1102.0 "Min. speed of speed-controlled primary/heating circuit pump in standard mode, heating circuit 1"

Setting		Explanations
	...	Minimum speed of the internal circulation pump in heating mode with standard room temperature Delivered condition specified by settings specific to the heat generator
	0 to 100	Minimum speed adjustable from 0 to 100 %

1102.1 "Max. speed of speed-controlled primary/heating circuit pump in standard mode, heating circuit 1"

Setting		Explanations
	...	Maximum speed of the internal circulation pump in heating mode with standard room temperature Delivered condition specified by settings specific to the heat generator
	0 to 100	Maximum speed adjustable from 0 to 100 %

Heating circuit 1, Heating circuit 2, Heating... (cont.)**1192.0 "Minimum flow temperature limit, heating circuit 1"**

Setting		Explanations
20 °C	20 1 to 90	Minimum flow temperature limit for the heating circuit Minimum limit in the delivered condition 20 °C Setting range limited by heat generator-specific parameters

1192.1 "Maximum flow temperature limit, heating circuit 1"

Setting		Explanations
74 °C	74 10 to 100	Maximum flow temperature limit for the heating circuit Maximum limit in the delivered condition 74 °C Setting range limited by heat generator-specific parameters

1193.0 "Minimum flow temperature limit, heating circuit 2"

Setting		Explanations
20 °C	20 1 to 90	Minimum flow temperature limit for the heating circuit Minimum limit in the delivered condition 20 °C Setting range limited by heat generator-specific parameters

1193.1 "Maximum flow temperature limit, heating circuit 2"

Setting		Explanations
74 °C	74 10 to 100	Maximum flow temperature limit for the heating circuit Maximum limit in the delivered condition 74 °C Setting range limited by heat generator-specific parameters

1194.0 "Minimum flow temperature limit, heating circuit 3"

Setting		Explanations
20 °C	20 1 to 90	Minimum flow temperature limit for the heating circuit Minimum limit in the delivered condition 20 °C Setting range limited by heat generator-specific parameters

1194.1 "Maximum flow temperature limit, heating circuit 3"

Setting		Explanations
74 °C	74 10 to 100	Maximum flow temperature limit for the heating circuit Maximum limit in the delivered condition 74 °C Setting range limited by heat generator-specific parameters

Heating circuit 1, Heating circuit 2, Heating... (cont.)**1395.1 "Heating limit: Economy function, outside temperature, heating circuit 1"**

Setting		Explanations
25 °C	25 10 to 35	Heating circuit pump logic function (summer economy control): Heating circuit pump switches off when outside temperature 1 K above selected value. Heating circuit pump switches back on when outside temperature 1 K below selected value. Delivered condition: Heating limit at outside temperature 25 °C Heating limit adjustable from 10 to 35 °C in 1 °C increments

1396.1 "Heating limit: Economy function, outside temperature, heating circuit 2"

Setting		Explanations
25 °C	25 10 to 35	Heating circuit pump logic function (summer economy control): Heating circuit pump switches off when outside temperature 1 K above selected value. Heating circuit pump switches back on when outside temperature 1 K below selected value. Delivered condition: Heating limit at outside temperature 25 °C Heating limit adjustable from 10 to 35 °C in 1 °C increments

1397.1 "Heating limit: Economy function, outside temperature, heating circuit 3"

Setting		Explanations
25 °C	25 10 to 35	Heating circuit pump logic function (summer economy control): Heating circuit pump switches off when outside temperature 1 K above selected value. Heating circuit pump switches back on when outside temperature 1 K below selected value. Delivered condition: Heating limit at outside temperature 25 °C Heating limit adjustable from 10 to 35 °C in 1 °C increments

Subscriber numbers of connected extensions

All extensions connected to the heat generator (except the SDIO/SM1A electronics module) must have a subscriber number. The subscriber number is set on rotary switch S1 at each extension.

Subscriber numbers of connected extensions (cont.)

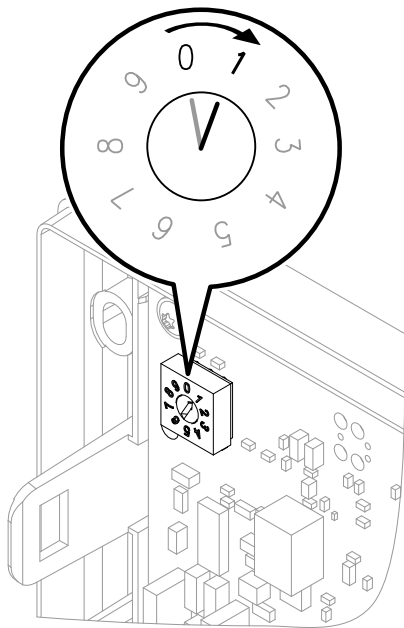


Fig. 49

Rotary switch S1 settings:

- EM-S1 extension (system with solar collectors): **0**
- EM-EA1 extension (max. 3 extensions in one system)
Consecutive no. (any sequence): **1 up to 3**

- EM-P1 extension
 - If no heating circuits with mixer are available in the system: **1**
 - If heating circuits with mixer (EM-M1 or EM-MX extensions) are present in the system: Always set subscriber number for EM-P1 extension to the consecutive number after EM-M1 or EM-MX extensions.
- EM-M1 or EM-MX extensions
 - Heating circuit 2 with mixer: Rotary switch on extension kit to **1**
 - Heating circuit 3 with mixer: Rotary switch on extension kit to **2**

Note

EM-EA1 extensions may have the same subscriber number as the EM-P1, EM-M1 or EM-MX extensions. The following table shows an **example** of how a system may be equipped.

Function	Electronics module	Extension	Setting Rotary switch S1
System with solar collectors	ADIO	EM-S1	0
Heating circuit 2 with mixer	ADIO	EM-M1/EM-MX	1
Heating circuit 3 with mixer	ADIO	EM-M1/EM-MX	2
Heating circuit 1 without mixer (circulation pump downstream of low loss header)	ADIO	EM-P1	3
Function extensions (e.g.):	DIO	EM-EA1	1
■ Fault message input	DIO	EM-EA1	2
■ Fault message output	DIO	EM-EA1	3
■ Operating mode changeover	DIO	EM-EA1	3

Service menu

Service menu

Calling up the service menu

Tap the following buttons:

1. "≡"
2. "Service"
3. Enter password "viservice".
4. Use ✓ to confirm.
5. Select the required menu section.

Note

Not all menu areas will be available, depending on the system equipment level.

Service menu overview

Service	
Diagnosis	
	General
	Burner
	Heating circuit 1
	Heating circuit 2
	Heating circuit 3
	Heating circuit 4 ^{*1}
	DHW
	Solar energy
	RF module
Actuator test	
System configuration	
Message history	
Service functions	
	System pressure setting
	Reset service
	Filling
	Air vent valve
	System log
	WLAN Information
Energy statement reset	
Change passwords	
Commissioning	
Appliances detected	
Exit service	
Access point ON/OFF	

Note

Tap 🏠 to return to "Service, main menu"

Changing the service password

In the delivered condition, "viservice" is preset as the password for accessing the "Service menu".

Tap the following buttons:

1. "≡"
2. "Service"
3. Enter password "viservice".
4. Use ✓ to confirm.
5. "Change passwords".
6. "Service menu"
7. Enter current password.
8. Use ✓ to confirm.

^{*1} (only Vitodens 3xx and Vitodens 200-W, type B2HF with 7 inch touchscreen)

Changing the service password (cont.)

9. Enter new password.
10. Confirm twice with ✓.

Resetting all passwords to delivered condition

Tap the following buttons:

1. Request master password from the Viessmann Technical Service.
2. "≡"
3. "Service"
4. Enter password "viservice".
5. Use ✓ to confirm.
6. "Change passwords"
7. "Reset all passwords"
8. Enter master password.
9. Confirm twice with ✓.

Diagnosis

Checking operating data

Operating data can be called up in various areas. See "Diagnosis" in the service menu overview.
Operating data on heating circuits with mixer can only be called up if such components are installed in the system.

Note

If a called up sensor is faulty, "- - -" appears on the display.

Calling up operating data

Tap the following buttons:

1. "≡"
2. "Service"
3. Enter password "viservice".
4. Use ✓ to confirm.
5. "Diagnosis"
6. Select required group, e.g. "General".

Calling up messages (message history)

The messages are sorted by date.

Tap the following buttons:

1. "≡"
2. "Service"
3. Enter password "viservice".
4. Confirm with ✓.

Calling up messages (message history) (cont.)

5. "Message history"

The following is displayed in the message lists:

- Date and time of the occurrence of the notification
- Notification number
- Description of the notification
- Subscriber number of the component on which the message has occurred:
 - PlusBus subscriber components
 - 0 EM-S1 extension (ADIO electronics module)
 - 1 - 15 EM-M1, EM-MX and EM-P1 extensions (ADIO electronics module)
 - 17 - 31 EM-EA1 extension (DIO electronics module)
 - 32 - 47 Cylinder module (electronics module M2IO)
 - 49 - 63 Vitotrol 200-E
 - SDIO/SM1A electronics module
 - CAN BUS subscriber components
 - 1 HMU heat management unit
 - 50 BCU burner control unit
 - 58 RF module (TCU 200)
 - 59 HMI programming unit
 - 60 Fan unit
 - 90 Gateway
 - Low power radio subscriber components
 - 49 - 63 Vitotrol 300-E

- 6. ■ **"Faults"** to call up saved fault messages. For further details, see the following chapter "Fault messages".
 - **"Service messages"** to call up saved service messages.
 - **"Status"**, to call up the saved status messages.
 - **"Warnings"** to call up saved warning messages.
 - **"Information"**, to call up saved service information.
- For messages, see chapter "Further messages".

7. If you wish to delete messages, tap .


8. ✓ to confirm

Checking outputs (actuator test)

Note



When the actuator test is started, all actuators are initially disabled and valves moved to their central position.

Tap the following buttons:

1. 
2. **"Service"**
3. Enter password **"viservice"**.
4. Confirm with ✓.
5. **"Actuator test"**
6. ✓ to confirm the security prompt.

Note

If an actuator function is not possible due to the running process, the function is interrupted. A message appears.

7. Use  to select the required group. See the table below.
8. Tap the required actuator function. Several functions can be activated simultaneously.
9. If necessary, tap ✓ to confirm. The functions are active for 30 s.
10. Use  to end the Actuator test.

Checking outputs (actuator test) (cont.)

The following actuator functions can be controlled subject to the system equipment level:

Display		Explanation
Gas condensing boiler group		
Fan speed	Set value	Burner fan speed in rpm (rotations/minute)
Burner modulation, set value	<ul style="list-style-type: none"> ▪ Off ▪ Minimum heating output ▪ Maximum heating output ▪ Maximum DHW output 	Modulation level (in accordance with specific heat generator settings)
3-way valve target position	Heating	3-way diverter valve set to heating mode
	Middle	3-way diverter valve in central position (filling/draining)
	DHW	3-way diverter valve set to DHW heating
Heating group		
Primary circuit pump speed	Set value	Internal circulation pump speed in %
3-way valve target position	Heating	3-way diverter valve set to heating mode
	Middle	3-way diverter valve in central position (filling/draining)
	DHW	3-way diverter valve set to DHW heating
Heating circuit 1 pump speed	Set value	Speed, heating circuit pump, heating circuit 1 without mixer in %
Heating circuit 2 pump speed	Set value	Speed, heating circuit pump, heating circuit 2 with mixer in %
Heating circuit 3 pump speed	Set value	Speed, heating circuit pump, heating circuit 3 with mixer in %
Heating circuit 4 pump speed ^{*2}	Set value	Speed, heating circuit pump, heating circuit 4 with mixer in %
Mixer HC2	Open	Output for "Mixer open" enabled (mixer extension kit)
	Stop	Current position is maintained
	Close	Output for "Mixer close" enabled
Mixer HC3	Open	Output for "Mixer open" enabled (mixer extension kit)
	Stop	Current position is maintained
	Close	Output for "Mixer close" enabled
Mixer HC4 ^{*2}	Open	Output for "Mixer open" enabled (mixer extension kit)
	Stop	Current position is maintained
	Close	Output for "Mixer close" enabled
DHW group		
Primary circuit pump, set speed	Set value	Internal circulation pump in %
3-way valve target position	Heating	3-way diverter valve set to heating mode
	Middle	3-way diverter valve in central position (filling/draining)
	DHW	3-way diverter valve set to DHW heating
Circulation pump for cylinder heating	On Off	
DHW circulation pump	On Off	


Group Solar (not for Vitodens 222-W)

^{*2} (only Vitodens 200-W, type B2HF with 7 inch screen)

Checking outputs (actuator test) (cont.)



Display		Explanation
Solar circuit pump, set speed	Set value	Speed, solar circuit pump in %
Circulation pump hygiene function	On	
	Off	
Circulation pump, solar	On	
	Off	
3-way valve, solar	Open	
Target position	Close	
	Stop	


Fault display on the programming unit

If there is a fault, the display shows the fault message plus .

Note

If a central fault message facility is connected, this is switched on.

1. Tap  in the footer to call up the fault messages. For an explanation of the fault codes, see the following table.
2. Tap  to hide the fault messages. For an explanation of the fault codes, see the following table.

If "Connection error" and  appear on the display:
Check connecting cable and plug between HMU heat management unit and HMI programming unit.

Acknowledging the fault display

Tap .


Note

Any connected central fault message facility is switched off.

If an acknowledged fault is not remedied, the fault message will be redisplayed the following day at 07:00 h, and the fault message facility restarts.

Calling up acknowledged fault messages

Tap the following buttons:

1. 
2. Tap "Message lists".
The fault messages appear in chronological order.

Note

When troubleshooting, always observe the subscriber number of the component.

Check the component displayed, rectify the fault if required. The subscriber number of the component depends on the position of rotary switch S1 on the corresponding extension module. The rotary switch position was set during installation.

To identify the affected module, check the position of rotary switch S1 on the module if required.

Note

See also page 73





The following is displayed:

- Date and time of the occurrence of the fault
- Fault code
- Description of the fault
- Subscriber number of the component on which the fault has occurred:
PlusBus subscriber components
 - 0 EM-S1 extension (ADIO electronics module)
 - 1 - 15 EM-M1, EM-MX and EM-P1 extensions (ADIO electronics module)
 - 17 - 31 EM-EA1 extension (DIO electronics module)
 - 32 - 47 Cylinder module (electronics module M2IO)
 - 48 - 63 Vitotrol 200-E
 - 64 SDIO/SM1A electronics module
- CAN BUS subscriber components
 - 1 HMU heat management unit
 - 50 BCU burner control unit
 - 58 RF module (TCU 200)
 - 59 HMI programming unit
 - 60 Fan unit
 - 90 Gateway
- Low power radio subscriber components
 - 49 - 63 Vitotrol 300-E

Calling up fault messages from the fault memory (message history)

The 10 most recent faults (including those remedied) and service messages are saved and can be called up.
Faults are sorted by date.

Tap the following buttons:

1. 
2. "Service"
3. Enter password "viservice".
4. Confirm with .
5. "Message history"
6. "Faults" to call up saved fault messages.
7. If you wish to delete the list, tap .
8.  to confirm.

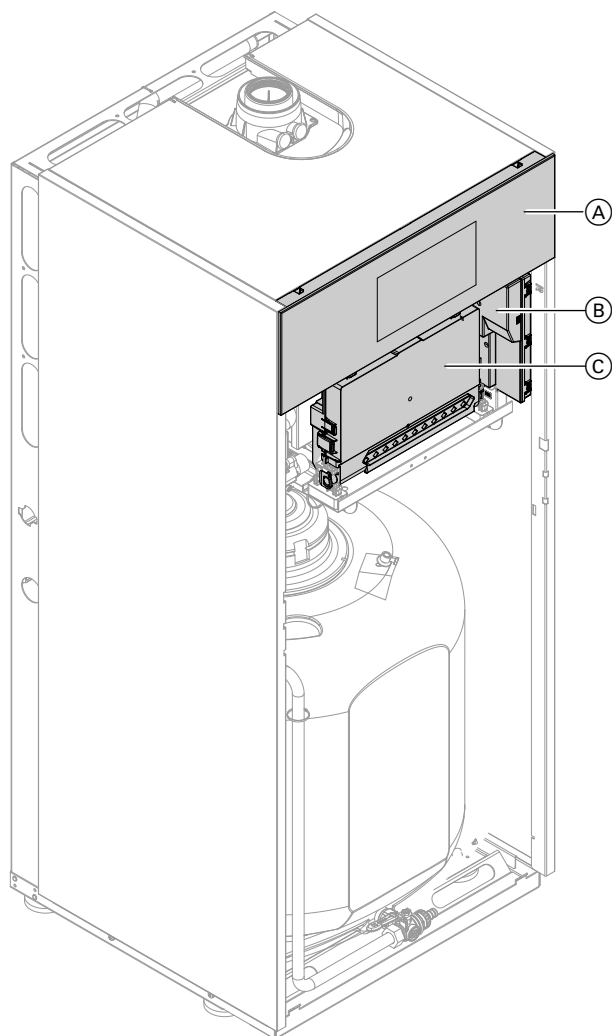


Fig. 50

- Ⓐ HMI programming unit
- Ⓑ BCU burner control unit
- Ⓒ HMU heat management unit

Fault messages

Note

For diagnosis and troubleshooting, see chapter "Repairs".

Fault messages dependent on appliance equipment level

Displayed fault code	System characteristics	Cause	Measures
F.5	Flow rate not being monitored. System continues operating in normal mode with replacement value.	Lead break or short circuit, flow sensor	Check plug 33/X6 and cable between BCU burner control unit and flow sensor: <ul style="list-style-type: none"> Check voltage level, to see if 5 V present at plug 33, pin 1 and 2. Turn the gas condensing boiler ON/OFF switch off and back on again.
F.7	No DHW heating	Lead break, cylinder temperature sensor	<ul style="list-style-type: none"> Check DHW setting in the commissioning assistant and correct if required. Check cylinder temperature sensor (plug 5, wires 3 and 4). Measure voltage at sensor input on electronics module. Set value: 3.3 V– with sensor disconnected. Replace faulty component if required.
F.8	No DHW heating	Short circuit, cylinder temperature sensor	Check cylinder temperature sensor (plug 5, wires 3 and 4). Replace faulty component if required.
F.11	No solar DHW heating or central heating backup	Lead break, collector temperature sensor	<ul style="list-style-type: none"> Check collector temperature sensor. Measure voltage at sensor input on electronics module. Set value: 3.3 V– with sensor disconnected
F.12	No solar DHW heating	Short circuit, collector temperature sensor	<ul style="list-style-type: none"> Check collector temperature sensor. Measure voltage at sensor input on electronics module. Set value: 3.3 V– with sensor disconnected
F.13	Regulates as if the outside temperature were 0 °C.	Lead break, outside temperature sensor	<ul style="list-style-type: none"> Check operating mode setting in commissioning assistant and remedy if required. Check outside temperature sensor and connection to sensor (external plug, contacts 1 and 2). Measure voltage at sensor input on electronics module. Set value: 3.3 V– with sensor disconnected. Replace faulty component if required.
F.14	Regulates as if the outside temperature were 0 °C.	Short circuit, outside temperature sensor	Check outside temperature sensor and connection to sensor (external plug, and contacts 1 and 2). Replace faulty components if necessary.

Fault messages (cont.)

Displayed fault code	System characteristics	Cause	Measures
F.15	No solar DHW heating or central heating backup	Lead break, cylinder temperature sensor	Check cylinder temperature sensor. Measure voltage at sensor input on electronics module. Set value: 3.3 V– with sensor disconnected
F.16	No solar DHW heating or central heating backup	Short circuit, cylinder temperature sensor	Check cylinder temperature sensor. Measure voltage at sensor input on electronics module. Set value: 3.3 V– with sensor disconnected
F.29	Regulates without flow temperature sensor for low loss header.	Lead break, low loss header sensor	<ul style="list-style-type: none"> Check commissioning assistant setting, low loss header. Check flow temperature sensor, low loss header. Measure voltage at sensor input on electronics module. Set value: 3.3 V– with sensor disconnected
F.30	Regulates without flow temperature sensor for low loss header.	Short circuit, low loss header sensor	Check flow temperature sensor, low loss header. Measure voltage at sensor input on electronics module. Set value: 3.3 V– with sensor disconnected
F.49	Burner in a fault state	Lead break, flue gas temperature sensor	Check flue gas temperature sensor. Reset the appliance.
F.50	Burner in a fault state	Short circuit, flue gas temperature sensor	Check flue gas temperature sensor. Reset the appliance.
F.57	Control mode without room influence	Lead break, room temperature sensor	<ul style="list-style-type: none"> Check commissioning setting of remote control. Check plug and cable of external room temperature sensor, heating circuit. If no external room temperature sensor installed, replace Vitotrol programming unit.
F.58	Control mode without room influence	Short circuit, room temperature sensor	Check plug and cable of external room temperature sensor, heating circuit. If no external room temperature sensor installed, replace Vitotrol programming unit.
F.59	Burner locked out	Power supply, low voltage	Check mains voltage. If voltage is correct and the fault occurs repeatedly, replace the fan unit.

Fault messages (cont.)

Displayed fault code	System characteristics	Cause	Measures
F.62	Burner in a fault state	High limit safety cut-out has responded.	<ul style="list-style-type: none"> Check heating system fill level. Check pre-charge pressure in diaphragm expansion vessel. Adjust to required system pressure. Check whether flow rate is sufficient (flow sensor and circulation pump). Check 3-way diverter valve function in actuator test. Vent the system. Reset the appliance.
F.63	Burner in a fault state	Flue gas temperature limiter has responded.	<ul style="list-style-type: none"> Check heating system fill level. Check pre-charge pressure in diaphragm expansion vessel. Adjust to required system pressure. Check whether flow rate is sufficient (flow sensor and circulation pump). Check 3-way diverter valve function in actuator test. Vent the system. Reset the appliance once the flue system has cooled down.
F.67	Burner in a fault state	Ionisation current lies outside the permissible range	<p>Check gas supply (gas pressure and gas flow switch), check gas solenoid valve and inlet strainer.</p> <p>Check ionisation electrode for the following:</p> <ul style="list-style-type: none"> Clearance to burner gauze assembly Check electrode/burner gauze assembly for contamination. <p>If specified measures don't help, replace fan unit. Reset the appliance.</p>
F.68	Burner in a fault state	Flame signal is already present at burner start.	<p>Close the gas shut-off valve. Remove connecting cable of the ionisation electrode. Reset the appliance.</p> <p>If the fault persists, replace BCU burner control unit: See page 100.</p>

Fault messages (cont.)

Displayed fault code	System characteristics	Cause	Measures
F.69	Burner in a fault state	Ionisation current lies outside the permissible range	<p>Check ionisation electrode for the following:</p> <ul style="list-style-type: none"> Check whether insulation block is touching electrode ceramic. Check gas train: Activate "Minimum heating output" for approx. 4 min in actuator test. If this causes a fault to occur, replace BCU burner control unit. In the actuator test, switch from "Minimum heating output" to "Maximum heating output". If this fault occurs during modulation, check the intake screen for contamination. Replace the fan unit if necessary.
F.70	Burner in a fault state	Internal burner control unit fault	Replace BCU burner control unit: See page 100.
F.71	Burner in a fault state	Fan speed too low	<ul style="list-style-type: none"> Check fan for blockage. Check setting for gas type and flue system. Reset the appliance.
F.72	Burner in a fault state	Fan idle state not reached	Reset the appliance. If fault occurs repeatedly, replace fan unit.
F.73	Burner in a fault state	Internal communication error	Reset the appliance. If fault recurs, replace BCU burner control unit: See page 100.
F.74	Burner locked out. Internal circulation pump off. No central heating and no DHW heating.	System pressure too low	<p>Top up with water. Vent the system.</p> <p>If the fault occurs repeatedly:</p> <ul style="list-style-type: none"> Check system pressure sensor with external pressure gauge. Check diaphragm expansion vessel pre-charge pressure. Check settings for set system pressure and range.
F.77	Burner in a fault state	Data memory burner control unit	Reset the appliance. If fault recurs, replace BCU burner control unit: See page 100.
F.89	No central heating and no DHW heating	Internal circulation pump blocked	Check circulation pump. Replace if necessary.
F.91	Function of affected extension in emergency mode	DIO electronics module communication error	Check connections to DIO electronics module and connection to heat management unit.

Fault messages (cont.)

Displayed fault code	System characteristics	Cause	Measures
F.92	Function of the relevant electronics module in emergency mode	ADIO electronics module communication error	<ul style="list-style-type: none">▪ Check setting in the commissioning assistant and correct if required.▪ Check connections and leads to the ADIO electronics module.▪ Check PlusBus voltage level (24 to 28 V).▪ Check subscriber number on rotary switch S1 and correct if required.
F.94	Function of the relevant electronics module in emergency mode. No solar central heating backup.	SDIO electronics module communication error	<ul style="list-style-type: none">▪ Check setting in the commissioning assistant and correct if required.▪ Check connections and leads to the SDIO electronics module.▪ Check PlusBus voltage level (24 to 28 V).
F.100	Electronics modules connected to PlusBus not functioning	Voltage error PlusBus	Check whether the PlusBus power supply on the HMU heat management unit is OK: Remove all connected PlusBus components and reconnect one by one. Check that there aren't more than 2 Vitotrol 200-E connected to the HMU. Check whether there is a short circuit at the PlusBus cable.
F.104	Depending on configuration of EM-EA1 extension (DIO electronics module)	External fault message input active	Check connected external device.
F.142	Burner in a fault state	Communication error, CAN bus	<ul style="list-style-type: none">▪ Check the fan unit for correct function. For this, check the stepper motor of the fan unit (reference run with mains ON).▪ If the fault still persists, visually check the plug-in connections and cables of the CAN bus.▪ Check further CAN bus subscribers. If fault still persists, replace the fan unit.
F.160	Burner in a fault state	Communication error, CAN bus	<ul style="list-style-type: none">▪ If "Connection error" is displayed, check the internal CAN bus subscriber connections.▪ If only F.160 is displayed, check the connections of the external CAN bus subscribers.▪ Check the connecting cables for secure seating and corrosion. Reset the appliance.
F.161	Burner in a fault state	BCU data memory access error	Reset the appliance. If fault recurs, replace BCU burner control unit: See page 100.

Fault messages (cont.)

Displayed fault code	System characteristics	Cause	Measures
F.163	Burner in a fault state	Memory access checksum error BCU	Reset the appliance. If fault recurs, replace BCU burner control unit: See page 100.
F.182	No DHW heating	Short circuit, outlet temperature sensor (if installed)	Check outlet temperature sensor (plug X1, cores 13 and 14). Measure sensor input on electronics module. Set value: 3.3 V– with sensor disconnected
F.183	No DHW heating	Lead break, outlet temperature sensor (if installed)	Check outlet temperature sensor (plug X1, cores 13 and 14).
F.184	Burner in a fault state	Short circuit, flow temperature sensor/high limit safety cut-out	Check the flow temperature sensor/high limit safety cut-out. Check sensor lead. Replace faulty component if required. Reset the appliance.
F.185	Burner in a fault state	Lead break, flow temperature sensor/high limit safety cut-out	Check the flow temperature sensor/high limit safety cut-out. Replace faulty component if required. Reset the appliance.
F.299	Time/date incorrect	Real time clock setting incorrect	Set the time and date.
F.342	No central heating, no DHW heating	Communication error, burner control unit BCU	<ul style="list-style-type: none"> Check connecting cable to the burner control unit plug X4 on BCU. Check all plug-in connections and cables of the internal CAN. Remove all plugs except X4, X2, X16 and X18 from the BCU burner control unit. Check whether fault persists. <p>Note Several other fault messages will be added due to the removed plugs. Ignore these. If fault message F.342 is no longer shown, re-insert the plugs one by one and establish which component is faulty.</p> <p>Reset the appliance.</p>
F.345	Burner locked out, automatic enabling after appliance cool-down. Independent restart.	Temperature limiter has responded. See heat generator specification.	<ul style="list-style-type: none"> Ensure adequate heat transfer. Check heating system fill level. Check pre-charge pressure in diaphragm expansion vessel. Adjust to required system pressure. Check whether flow rate is sufficient (flow sensor and pump). Check 3-way diverter valve function in actuator test. Vent the system. <p>If the fault occurs during DHW heating: Check DHW cylinder or plate heat exchanger for contamination and scaling.</p>

Fault messages (cont.)

Displayed fault code	System characteristics	Cause	Measures
F.346	Burner in a fault state	Ionisation current calibration error	<ul style="list-style-type: none">▪ Check the gas supply pressure.▪ Check gas solenoid valve strainer on the inlet side for contamination.▪ Check ionisation electrode for contamination.▪ Check flue system. Remove flue gas recirculation if required.▪ Check the connecting cable to the fan unit.▪ Check impeller for ease of operation. Reset the appliance.
F.348	Burner in a fault state	Gas modulation valve	If several heat generators are connected to a common flue system: Check whether " Multiple connections " is set in the commissioning assistant. Check the flue system for unrestricted flow. If fault remains, replace gas fan unit.
F.349	Burner in a fault state	Air mass rate flow not detected correctly in fan unit.	<ul style="list-style-type: none">▪ Check for dust contamination in the supply air.▪ Check burner gauze assembly for contamination. Reset the appliance. If the fault occurs repeatedly, replace the gas fan unit.
F.350, F.351	Burner in a fault state	Ionisation current lies outside the permissible range	Replace BCU burner control unit: See page 100.
F.352	Burner in a fault state	CO limit within appliance exceeded	Check entire flue gas path for the following: <ul style="list-style-type: none">▪ Flue gas recirculation▪ Leaks▪ Flue gas back pressure caused by water pocket (if flue system fall is insufficient)▪ Constrictions▪ Blockages Repair flue system if necessary. Reset the appliance.
F.353	Burner shutdown with restart if demand exists	Insufficient gas supply, burner output reduced	Check the gas supply. Optically check input-side screen in the gas solenoid valve for contamination. Reset the appliance.
F.354	Burner in a fault state	Gas modulation valve tolerance outside permissible range	Replace gas fan unit.
F.355	Burner in a fault state	Analogue signal reference check: Flame signal is already present at burner start.	Replace BCU burner control unit: See page 100.

Fault messages (cont.)

Displayed fault code	System characteristics	Cause	Measures
F.357	Burner in a fault state	Insufficient gas supply	<ul style="list-style-type: none"> Check that the gas shut-off valve is open. Optically check input-side screen in the gas solenoid valve for contamination. Test static gas pressure and gas flow pressure. Check that on-site gas line and gas flow switch are correctly sized. <p>Note <i>If the building pressure regulator has a leak, you may notice rising pressure when the burner is idle. When the system is restarted, the gas flow switch may trip. If the static pressure doesn't drop, check cable to the fan unit. Check whether the coil resistance at the fuel valve is approx. 4 kΩ (plug 35, contact 2 and 4). Check the ignition electrode for damaged insulation.</i></p> <p>Reset the appliance.</p>
F.359	Burner in a fault state	No ignition spark	<ul style="list-style-type: none"> Check whether the ignition electrode insulation is damaged. Check for a voltage of 230 V~ at the ignition module during the ignition phase. If not, replace the BCU burner control unit. If 230 V~ is present at the ignition module but there is still a fault, replace the ignition module. Check connection cables and leads from ignition module and ignition electrode. <p>Reset the appliance.</p>
F.361	Burner in a fault state	Flame signal is not present or insufficient at burner start.	<p>Check ionisation electrode and connecting cable. Check plug-in connections for loose contacts.</p> <p>Note <i>Deposits on the electrodes indicate foreign bodies in the combustion air. Check the installation room and flue system for causes of the deposits. For example: Laundry detergents, cleaning agents, toilet-ries, deposits in the ventilation air supply (chimney).</i></p> <p>Reset the appliance.</p>
F.366, F.367	Burner in a fault state	Gas valve electricity supply does not turn off.	<p>Replace BCU burner control unit: See page 100.</p>

Fault messages (cont.)

Displayed fault code	System characteristics	Cause	Measures
F.369	Burner in a fault state	Flame is lost immediately after flame formation (during safety time)	<p>Check gas supply (gas pressure and gas flow switch). Check balanced flue system for flue gas recirculation.</p> <p>Check ionisation electrode for the following:</p> <ul style="list-style-type: none"> ▪ Clearance to burner gauze assembly. ▪ Contamination on electrode. <p>Reset the appliance.</p>
F.370	Burner in a fault state	Fuel valve or modulation valve will not close.	<p>Reset the appliance. If fault occurs repeatedly, replace fan unit.</p>
F.372	Burner in a fault state	Repeated flame loss during calibration	<ul style="list-style-type: none"> ▪ Check ionisation electrode and connecting cable. ▪ Check plug-in connections for loose contacts. ▪ Check flue system. Remove flue gas recirculation if required. ▪ Check system for condensate backup. ▪ Visually inspect gas solenoid valve inlet and strainer on the inlet side for contamination. <p>Note <i>To prevent water damage, detach fan unit before removing the burner. Deposits on the electrodes indicate foreign bodies in the combustion air.</i></p> <p>Check the installation room and flue system for causes of the deposits. For example: Laundry detergents, cleaning agents, toilet-ries, deposits in the ventilation air supply (chimney). If burner gauze assembly and ionisation electrode have been replaced, also clean fan unit, gas/air channel and Venturi extension. Reset the appliance.</p>
F.373	Burner in a fault state	Heat transfer too low during calibration Temperature limiter has shut down.	<ul style="list-style-type: none"> ▪ Ensure adequate heat transfer. ▪ Check circulation pump for faults, scale or blockages. ▪ Check 3-way diverter valve function in actuator test. Vent the system. ▪ Check function of flow sensor. <p>Reset the appliance.</p>

Fault messages (cont.)

Displayed fault code	System characteristics	Cause	Measures
F.377	Burner in a fault state	Post-processing ionisation current calibration: Stabilisation conditions for post-calibration not reached	Check gas type setting. If fault recurs, replace BCU burner control unit: See page 100. Reset the appliance.
F.378	Burner in a fault state	Flame loss during stabilisation or operating phase	<ul style="list-style-type: none"> Check gas supply (gas pressure and gas flow switch). Check flue gas recirculation. Check for contamination of ionisation electrode and burner gauze assembly. Reset the appliance.
F.379	Burner in a fault state	Flame signal not present or insufficient	<ul style="list-style-type: none"> Check ionisation electrode connecting cable for damage and ensure it is secure. Check ionisation electrode, replace if necessary. Reset the appliance.
F.380	Burner in a fault state	Flame is lost immediately after flame formation (during safety time)	Check gas supply (gas pressure and gas flow switch). Check balanced flue system for flue gas recirculation. Check ionisation electrode, burner gauze assembly: <ul style="list-style-type: none"> Clearance to burner gauze assembly Contamination on electrode Reset the appliance.
F.381	Burner in a fault state	Flame loss during operating phase	Check gas supply (gas pressure and gas flow switch). Check balanced flue system for flue gas recirculation. Check ionisation electrode, burner gauze assembly: <ul style="list-style-type: none"> Clearance to burner gauze assembly. Contamination on electrode Reset the appliance.
F.382	Burner in a fault state	Fault counter has exceeded limit.	Reset the appliance. Work through fault analysis using fault history.
F.383	Burner in a fault state	Possible contamination of gas line	<ul style="list-style-type: none"> Check gas line for contamination. Check the gas supply pressure. Replace gas fan if required. Reset the appliance.
F.384	Burner in a fault state	Possible contamination of gas line	<ul style="list-style-type: none"> Check gas line for contamination. Check the gas supply pressure. Replace gas fan if required. Reset the appliance.
F.385	Burner in a fault state	Short circuit, signal 1, ionisation current. BCU burner control unit faulty.	Check IO electrode for earth fault. If fault persists, replace BCU burner control unit: See page 100. Reset the appliance.


Fault messages (cont.)

Displayed fault code	System characteristics	Cause	Measures
F.386	Burner in a fault state	BCU burner control unit faulty	Replace BCU burner control unit: See page 100. Reset the appliance.
F.387	Burner in a fault state	Earth fault, ionisation current. BCU burner control unit faulty.	Check ionisation electrode and connecting cable. If fault persists, replace BCU burner control unit: See page 100. Reset the appliance.
F.388	Burner in a fault state	BCU burner control unit faulty	Replace BCU burner control unit: See page 100. Reset the appliance.
F.395	Burner in a fault state	IO electrode earth fault, BCU burner control unit faulty	Check ignition electrode for earth fault. If fault persists, replace BCU burner control unit: See page 100. Reset the appliance.
F.396	Burner in a fault state	BCU burner control unit faulty	Replace BCU burner control unit: See page 100. Reset the appliance.
F.399	Burner in a fault state	IO electrode earth fault, BCU burner control unit faulty	Check IO electrode for earth fault. If fault persists, replace BCU burner control unit: See page 100. Reset the appliance.
F.400	Burner in a fault state	BCU burner control unit faulty	Replace BCU burner control unit: See page 100. Reset the appliance.
F.401	Burner in a fault state	IO electrode earth fault, BCU burner control unit faulty	Check IO electrode for earth fault. If fault persists, replace BCU burner control unit: See page 100. Reset the appliance.
F.402	Burner in a fault state	BCU burner control unit faulty	Replace BCU burner control unit: See page 100. Reset the appliance.
F.403	Burner in a fault state	Ionisation electrode earth fault, BCU burner control unit faulty	Check IO electrode for earth fault. If fault persists, replace BCU burner control unit: See page 100. Reset the appliance.
F.404	Burner in a fault state	BCU burner control unit faulty	Replace BCU burner control unit: See page 100. Reset the appliance.
F.405	Burner in a fault state	Ionisation electrode earth fault, BCU burner control unit faulty	Check IO electrode for earth fault. If fault persists, replace BCU burner control unit: See page 100. Reset the appliance.
F.406, F.408, F.410	Burner in a fault state	BCU burner control unit faulty	Replace BCU burner control unit: See page 100. Reset the appliance.
F.416	Burner locked out	Flue gas temperature sensor incorrectly positioned	Fit flue gas temperature sensor correctly. See "Repairs". Carry out mains reset after fault has been remedied.
F.417, F.418	Burner in a fault state	BCU burner control unit faulty	Replace BCU burner control unit: See page 100. Reset the appliance.

Fault messages (cont.)

Displayed fault code	System characteristics	Cause	Measures
F.425	System in control mode, calculation out of operation	Time synchronisation failed	Set the time. If external time is used, check parameters 1504 and 508.
F.430	Control mode operation in line with set values of heat generator	Communication error, gateway	Check gateway module connecting cable and power supply.
F.446	Burner in a fault state	Deviation, heat generator flow temperature sensor/ high limit safety cut-out	Check the flow temperature sensor/high limit safety cut-out. Check plug-in connection and lead to sensor. Reset the appliance.
F.447, F.448	Burner in a fault state	Deviation, ionisation voltage signal	Replace BCU burner control unit: See page 100. Reset the appliance.
F.449, F.450, F.451, F.452	Burner in a fault state	Error in scheduled program run monitoring	Reset the appliance. If fault recurs, replace BCU burner control unit: See page 100.
F.453	Burner in a fault state	Synchronisation error, sequence	Reset the appliance. If fault recurs, replace BCU burner control unit: See page 100.
F.454	Burner in a fault state	Incorrect software version	Flash the correct software version for the BCU burner control unit.
F.455	Burner in a fault state	Error in program run monitoring	Reset the appliance. If fault recurs, replace BCU burner control unit: See page 100.
F.456	Burner in a fault state	Error in program run monitoring	Reset the appliance. If fault recurs, replace BCU burner control unit: See page 100.
F.457	Burner in a fault state	Fan sluggish or blocked.	Reset the appliance. Check fan for sluggishness. In the case of severe contamination or grinding noises, replace fan unit.


Fault messages (cont.)

Displayed fault code	System characteristics	Cause	Measures
F.463	Burner in a fault state	Contaminated combustion air, flue gas recirculation	 Heat generator installation and service instructions Check flue system for contamination and flue gas recirculation. Clean flue system if required. Reset the burner. Note <i>Deposits on the electrodes indicate foreign bodies in the combustion air. Check the installation room and flue system for causes of the deposits. For example: Laundry detergents, cleaning agents, toilet-ries, deposits in the ventilation air supply (chimney). If burner gauze assembly and ionisation electrode have been replaced, also clean fan unit, gas/air channel and Venturi extension. Reset the appliance.</i>

Fault messages (cont.)

Displayed fault code	System characteristics	Cause	Measures
F.464	Burner in a fault state	Ionisation current too low during calibration. Differential compared to previous value not plausible.	<ul style="list-style-type: none"> Check ionisation electrode and connecting cable. Check plug-in connections for loose contacts. Check whether there is a lot of dust in the ventilation air (e.g. from construction work). Check flue system. Remove flue gas recirculation if required. Check system for condensate backup. <p>Reset the appliance.</p> <p>Note To prevent water damage, detach fan unit before removing the burner.</p> <p>If fault is permanently present, replace BCU burner control unit: See page 100.</p> <p>Note Deposits on the electrodes indicate foreign bodies in the combustion air. Check the installation room and flue system for causes of the deposits. For example: Laundry detergents, cleaning agents, toiletries, deposits in the ventilation air supply (chimney). If burner gauze assembly and ionisation electrode have been replaced, also clean fan unit, gas/air channel and Venturi extension.</p>
F.467	Burner in a fault state	Gas supply insufficient during calibration Contaminated or insufficiently sized gas line.	<ul style="list-style-type: none"> Test static gas pressure and gas flow pressure. Check that on-site gas line and gas flow switch are correctly sized. Visually inspect gas solenoid valve inlet and strainer on the inlet side for contamination. <p>Reset the appliance.</p> <p>Note Contamination from a brazed gas line, for example, can block up the gas solenoid valve strainer on the inlet side.</p>

Fault messages (cont.)

Displayed fault code	System characteristics	Cause	Measures
F.468	Burner in a fault state	Ionisation current too high during calibration	<p>Check gap between ionisation electrode and burner gauze assembly.</p> <p> Heat generator installation and service instructions</p> <p>Check whether there is a lot of dust in the ventilation air (e.g. from construction work). Reset the appliance.</p> <p>Note <i>Deposits on the electrodes indicate foreign bodies in the ventilation air. Check the installation room and flue system for causes of the deposits. For example: Laundry detergents, cleaning agents, toilet-ries, deposits in the ventilation air supply (chimney). If burner gauze assembly and ionisation electrode have been replaced, also clean fan unit, gas/air channel and Venturi extension.</i></p>
F.471	No heat demand	System pressure sensor not available, lead break or short circuit	<ul style="list-style-type: none"> ▪ Check system pressure sensor (plug 163). ▪ Check lead and plug-in connection. ▪ Measure, to see if supply voltage to sensor is 5 V–.
F.473	No heat demand	HMU heat management unit communication error	Check connecting cable between burner control unit and HMU heat management unit.
F.474	Burner in a fault state	Error in scheduled program run monitoring	Reset the appliance. If fault recurs, replace BCU burner control unit: See page 100.
F.517	Control mode, remote control unit not functioning	Lead break, PlusBus cable, incorrect appliance address set, remote control faulty	<ul style="list-style-type: none"> ▪ Check setting in commissioning assistant. ▪ Check remote control cable. ▪ Check remote control subscriber number. Replace faulty remote control if applicable.
F.527	Burner in a fault state	Incorrect parameter set, HMU heat management unit	Overwrite (flash) the HMU heat management unit with the correct parameter set: See page 100.
F.528	Burner in a fault state	Incorrect parameter set, BCU burner control unit	Overwrite (flash) the BCU burner control unit with the correct parameter set: See page 100.
F.530	Solar function limited	Sensor value not available or lead break of one or more sensors/missing sensor(s)	Check sensor(s), or connect missing sensor(s) to SDIO electronics module.

Fault messages (cont.)

Displayed fault code	System characteristics	Cause	Measures
F.540	Burner in a fault state	Condensate backup in the heat cell	<ul style="list-style-type: none"> Check system for condensate backup. Check the condensate drain and trap. Replace insulation blocks, electrodes and burner gauze assembly if required. <p>Note To prevent water damage, detach fan unit before removing the burner.</p> <p>Reset the appliance.</p>
F.544	Mixer closes. Heating circuit pump is operational.	Lead break, flow temperature sensor, heating circuit 2 with mixer Incorrect setting during commissioning	<p>Check flow temperature sensor, mixer 2.</p> <p>Measure voltage at sensor input on electronics module. Set value: 3.3 V– with sensor disconnected.</p> <p>Check commissioning assistant setting.</p> <p>Checking setting of ADIO rotary switch.</p>
F.545	Mixer closes. Heating circuit pump is operational.	Short circuit, flow temperature sensor for heating circuit 2 with mixer	<p>Check flow temperature sensor, mixer 2.</p> <p>Measure voltage at sensor input on electronics module. Set value: 3.3 V– with sensor disconnected</p>
F.546	Mixer closes. Heating circuit pump is operational.	Lead break, flow temperature sensor, heating circuit 3 with mixer	<p>Check flow temperature sensor, mixer 3.</p> <p>Measure voltage at sensor input on electronics module. Set value: 3.3 V– with sensor disconnected.</p> <p>Check commissioning assistant setting. Checking setting of ADIO rotary switch.</p>
F.547	Mixer closes. Heating circuit pump is operational.	Short circuit, flow temperature sensor for heating circuit 3 with mixer	<p>Check flow temperature sensor, mixer 3.</p> <p>Measure voltage at sensor input on electronics module. Set value: 3.3 V– with sensor disconnected</p>

Fault messages (cont.)

Displayed fault code	System characteristics	Cause	Measures
F.548	Mixer closes. Heating circuit pump is operational.	Short circuit, flow temperature sensor for heating circuit 4 with mixer	<ul style="list-style-type: none"> Check flow temperature sensor, mixer 4. Measure voltage at sensor input on electronics module. Set value: 3.3 V– with sensor disconnected Check commissioning assistant setting. Checking setting of ADIO rotary switch.
F.549	Mixer closes. Heating circuit pump is operational.	Short circuit, flow temperature sensor for heating circuit 4 with mixer	Check flow temperature sensor, mixer 4. Measure voltage at sensor input on electronics module. Set value: 3.3 V– with sensor disconnected

Note

If subscriber faults occur, "**Fault, subscriber ...**" is displayed.

Further messages

Service messages

Message on the display	Meaning
P.1	Service due after interval.
P.4	Top up heating water.
P.8	Service due after burner hours run.

Status messages

Message on the display	Meaning
S.60	Summer mode active (outside temperature economy function)
S.74	Heating suppression, heating
S.75	DHW circulation pump active
S.94	No demand, external hook-up, heating circuit 1
S.95	No demand, external hook-up, heating circuit 2
S.96	No demand, external hook-up, heating circuit 3

Warning messages

Messages on the display	Meaning	Measure
A.11	System pressure has fallen below normal limit.	Check system pressure and diaphragm expansion vessel. Check settings for set system pressure and range in the commissioning assistant.
A.12	Real time clock battery flat.	Replace the battery (type CR2032) in the HMU heat management unit.
A.18	Possible condensate backup in the heat cell	Check combustion chamber and condensate drain.

Further messages (cont.)

Messages on the display	Meaning	Measure
A.20	Service interval could not be activated.	Check the time and date settings.
A.21	System pressure has exceeded maximum pressure.	Check the safety valve and diaphragm expansion vessel. On combi boilers: Check the plate heat exchanger.

Information

Message on the display	Meaning
I.56	External demand active
I.57	External blocking active
I.59	Parameters were restored (parameter set was flashed to BCU electronics module).

Repairs



Please note

Residual water will escape when the boiler or one of the following components is fitted or removed:

- Water-filled pipework
- Heat exchanger
- Circulation pumps
- Plate heat exchanger
- Components fitted in the heating water or DHW circuit.


Water ingress can result in damage to other components.

Protect the following components against ingress of water:

- Control unit components (especially in the service position)
- Electrical components
- Plug-in connections
- Cables and leads

Shutting down the boiler

1. Switch OFF the power supply.
2. Shut off the gas supply.
3. If the boiler needs to be removed:
 - Disconnect the balanced flue system.
 - Drain the boiler on the heating water and DHW sides.
 - Disconnect the on-site cables/leads.

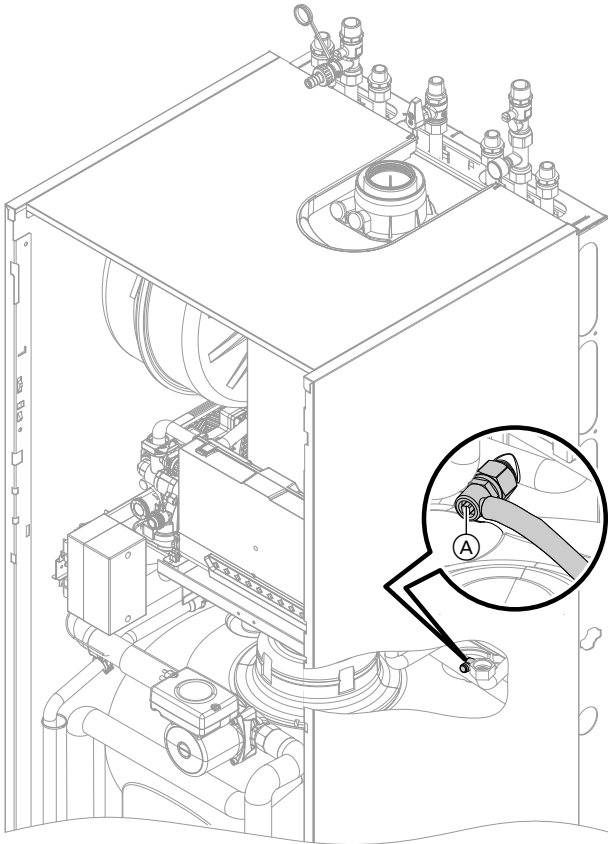Repairs (cont.)**Draining the boiler on the heating water side***Fig. 51*

1. Close the shut-off valves on the heating water side.
2. Connect hose to air vent valve (A) and route it into a suitable container or drain outlet.
3. By means of an actuator test, move the 3-way valve to its centre position.
4. Open air vent valve (A) and drain the boiler as much as required.

Checking the temperature sensors

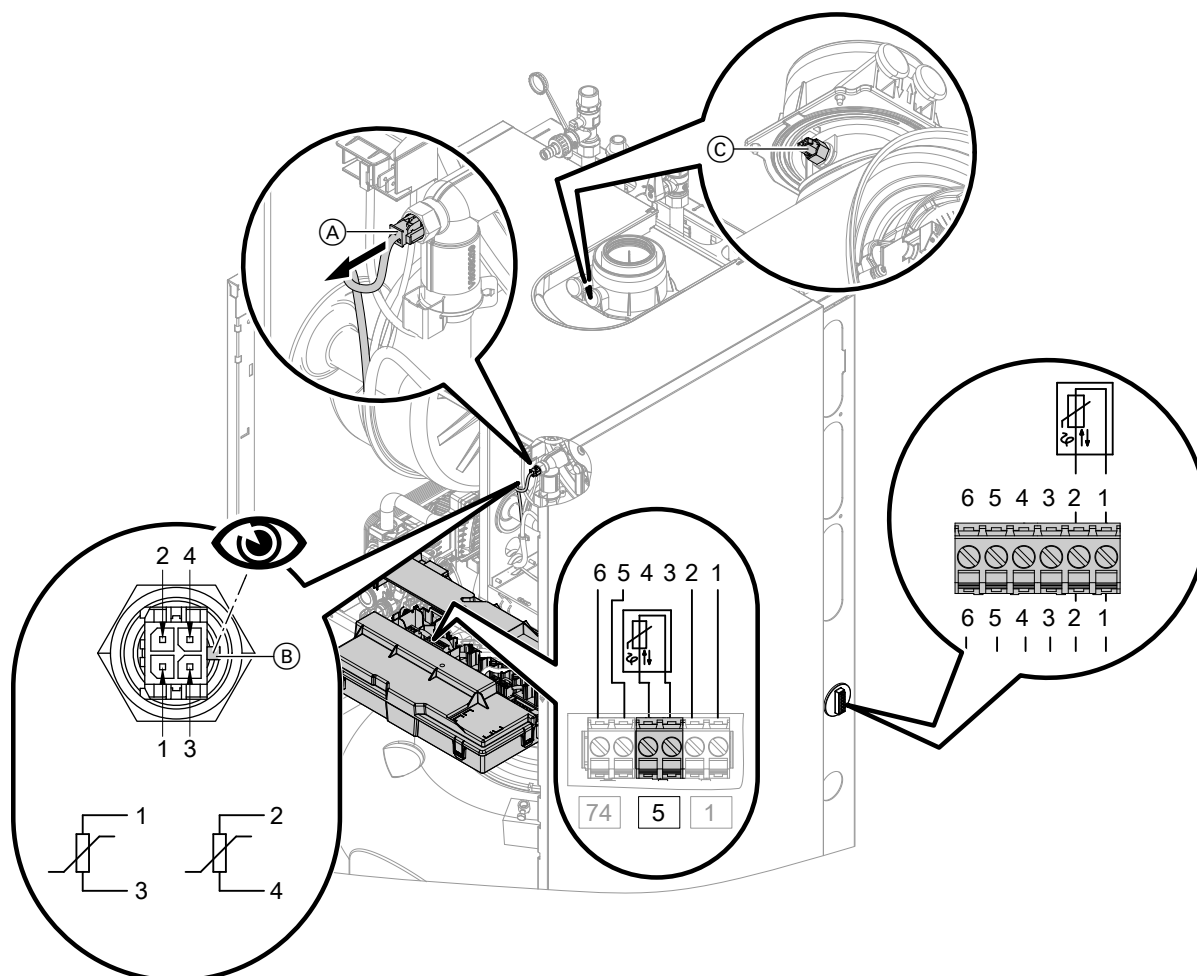


Fig. 52

Heat generator circuit flow temperature sensor (dual sensor)

1. Check the leads and plugs of flow temperature sensors (A).
2. Disconnect the leads from flow temperature sensors (A).

3. Check the sensor resistance. Note position of guide lug (B).
 - Sensor 1: Connections 1 and 3
 - Sensor 2: Connections 2 and 4

Compare the resistances with the value for the current temperature from the following diagram. In the event of severe deviation (> 10 %), replace the dual sensor.



Danger

The dual sensor is directly immersed in the heating water (risk of scalding). Drain the boiler on the heating water side before replacing the sensor.



Danger

Risk of electric shock from escaping heating water. Check the dual sensor for leaks.

Repairs (cont.)

Cylinder temperature sensor/outlet temperature sensor

1. Check lead and plug of cylinder temperature sensor [5] or outlet temperature sensor [4].
2. Disconnect wires of sensor plug.
3. Check the sensor resistance. Compare the resistance with the value for the current temperature from the following diagram.
In the event of severe deviation (> 10 %), replace the sensor.

Low loss header sensor

1. Check lead and plug of temperature sensor [9] on the ADIO electronics module (mixer extension kit).
2. Disconnect wires of sensor plug.
3. Check the sensor resistance. Compare the resistance with the value for the current temperature from the following diagram.
In the event of severe deviation (> 10 %), replace the sensor.

Outside temperature sensor

1. Check the lead and plug of the outside temperature sensor.
2. Disconnect wires 1 and 2 from the external plug.
3. Check the sensor resistance. Compare the resistance with the value for the current temperature from the following diagram.
If the results are very different from the curve (> 10 %), disconnect the wires from the sensor.
Repeat the test directly on the sensor.
Check the on-site lead. 2-core lead, length up to 35 m with a cross-section of 1.5 mm²
Depending on the test result, replace the lead or the outside temperature sensor.

Flue gas temperature sensor

1. Check the lead and plug of flue gas temperature sensor ©.
2. Disconnect leads, flue gas temperature sensor ©.
3. Rotate sensor (anti-clockwise) by ¼ turn to remove it (bayonet fitting).
4. Check the sensor resistance. Compare the resistance with the value for the currently recorded temperature from the following diagram.
In the event of severe deviation (> 10 %), replace the sensor.
5. Rotate sensor (clockwise) by ¼ turn to install it.




Danger

Escaping flue gas can cause poisoning.
When restarting, check for leaks on the flue gas side.

6. Reconnect leads, flue gas temperature sensor ©.
7. If the permissible flue gas temperature has been exceeded, the flue gas temperature sensor locks out the appliance. Reset the burner on the programming unit once the flue system has cooled down.


Repairs (cont.)

- Flue gas temperature sensor
- Flow temperature sensor
- Cylinder temperature sensor
- Outlet temperature sensor
- Temperature sensor, low loss header

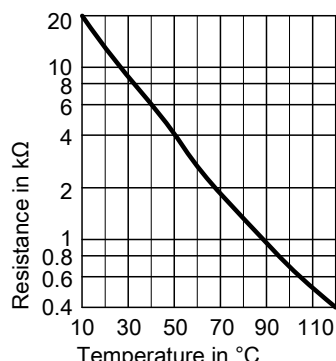

Sensor type: NTC 10 kΩ

- Outside temperature sensor

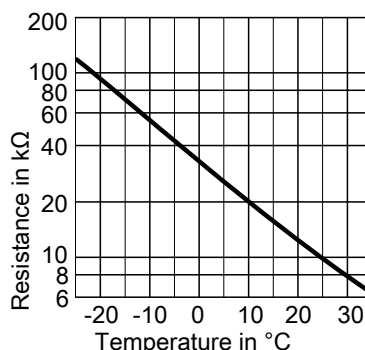

Sensor type: NTC 10 kΩ

Fault during commissioning (fault message F.416)

During commissioning, the control unit checks for correct placement of the flue gas temperature sensor. If fault message F.416 is displayed:

1. Check whether the flue gas temperature sensor is correctly installed (bayonet fitting). See previous diagram.
2. If required, correct the position of the flue gas temperature sensor.
3. Check the flue gas temperature sensor resistance. See previous chapter. Replace faulty flue gas temperature sensor if required.

4. Turn off the ON/OFF switch.
5. Turn the ON/OFF switch back on. Restart the commissioning assistant.
6. Check for leaks on the flue gas side.

Note

If fault message F.416 continues to be displayed although the flue gas temperature sensor has been correctly positioned: Initial commissioning may result in burner faults e.g. caused by air in the gas line. Eliminate the fault and unlock the device.

Information on replacing the HMU heat management unit and BCU burner control unit

If BCU burner control units and/or HMU heat management unit are replaced, the replacement must be carried out with the help of the "service assistant".



See spare part installation instructions and internet address: "www.service-assistent.info"

Repairs (cont.)

Checking the plate heat exchanger

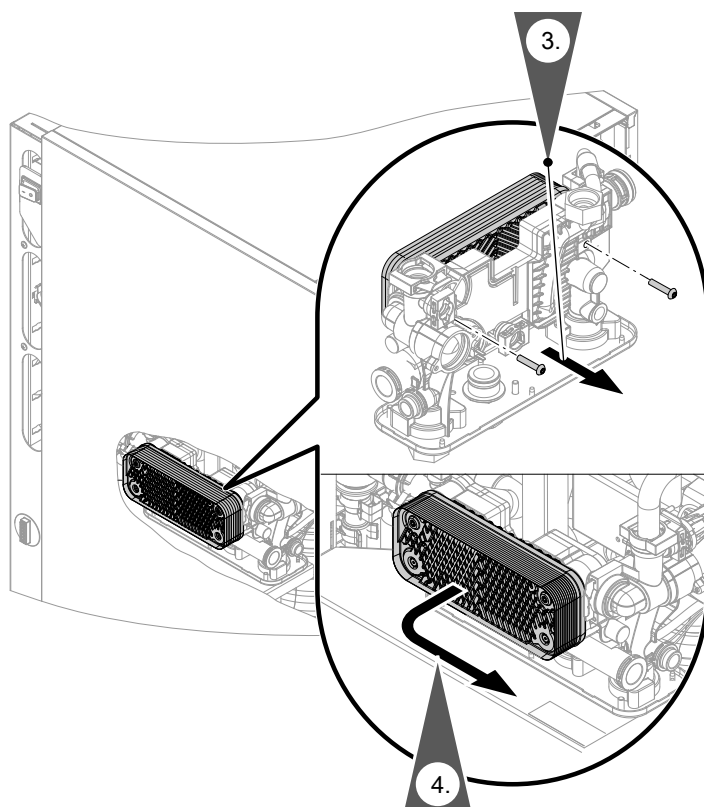


Fig. 53

1. Drain the boiler:
 - On the heating water side, see page 97
 - On the DHW side, see page 50
2. Move the programming unit to the maintenance position (see page 30).
3. Undo the fixing screws.
4. Detach the plate heat exchanger and remove towards the front.
5. Check the connections on the heating water and DHW sides for contamination and scaling; replace the plate heat exchanger if necessary.
6. Install in reverse order using new gaskets. Torque for fixing screws 3.2 Nm

Removing the hydraulic unit and return pipe

If components of the hydraulic unit have to be replaced.

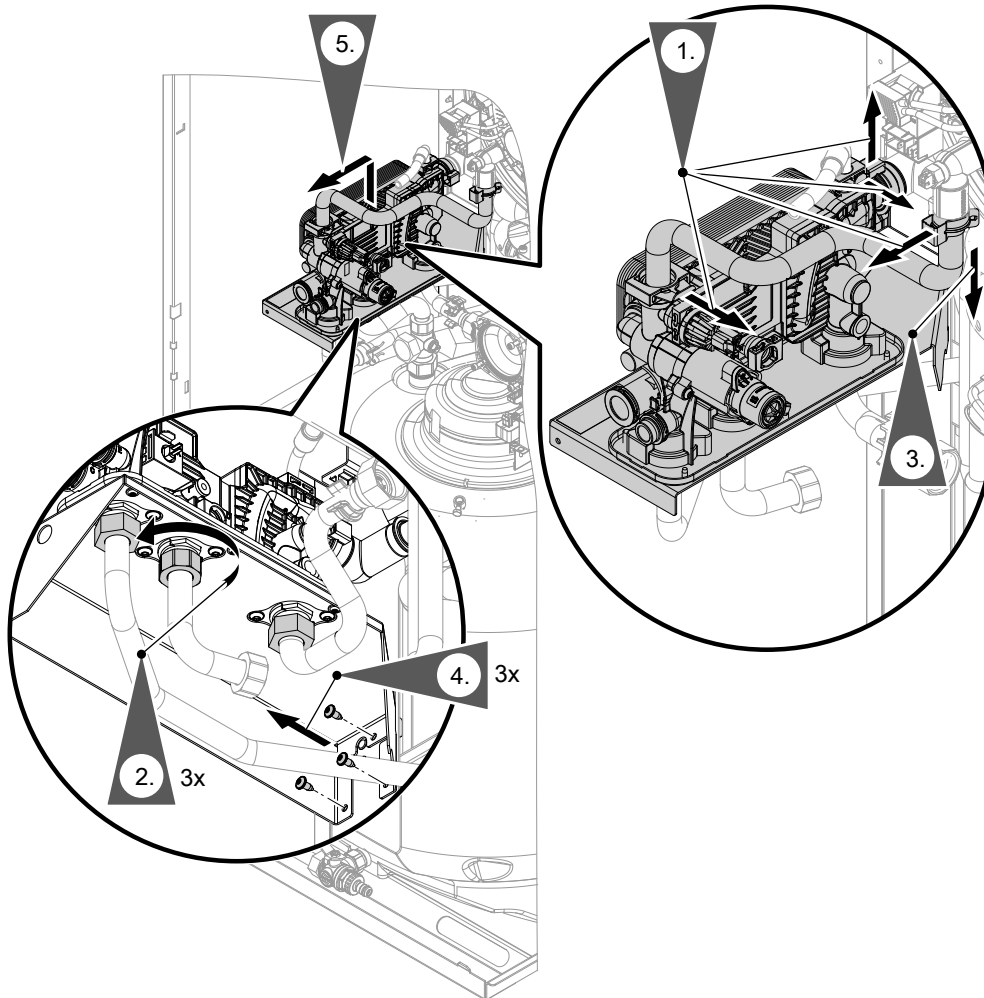


Fig. 54

Repairs (cont.)

Remove the return pipe:

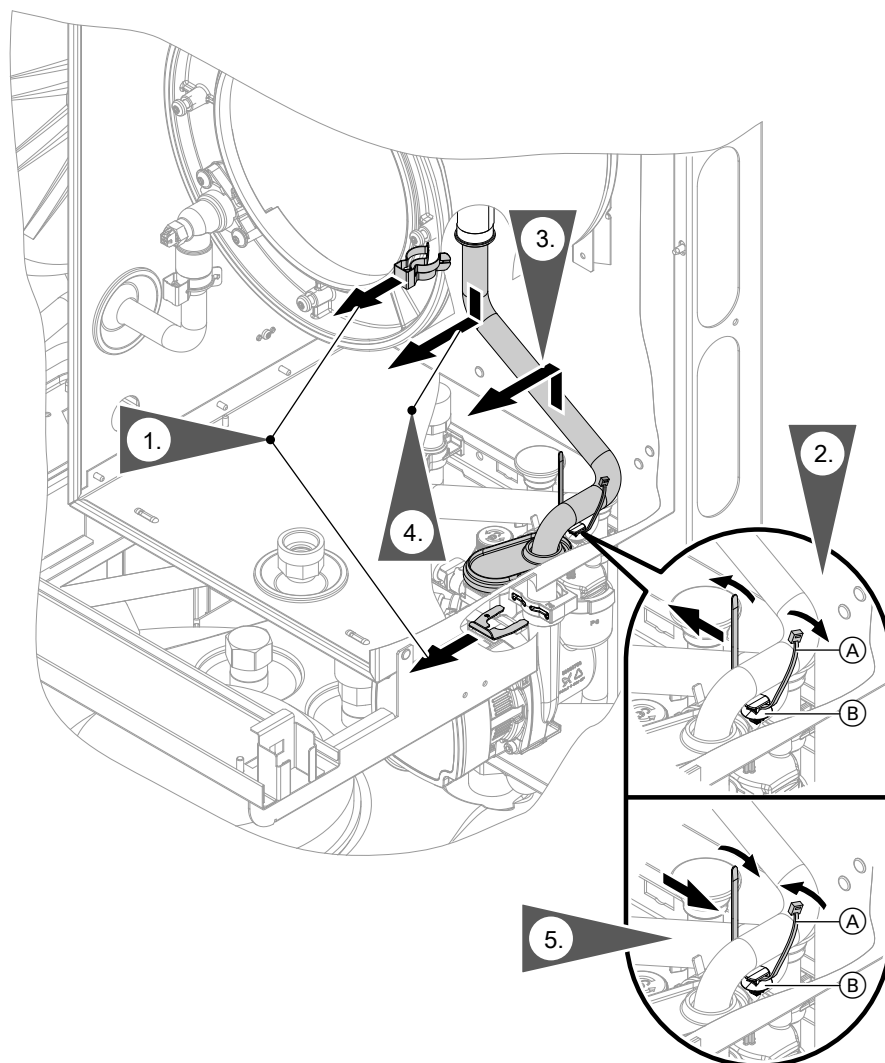


Fig. 55

Note

After replacing the return pipe, use a new cable tie.

Replacing the power cable

When replacing the power cable, only use the power cable available as a spare part from Viessmann.

Checking the fuse

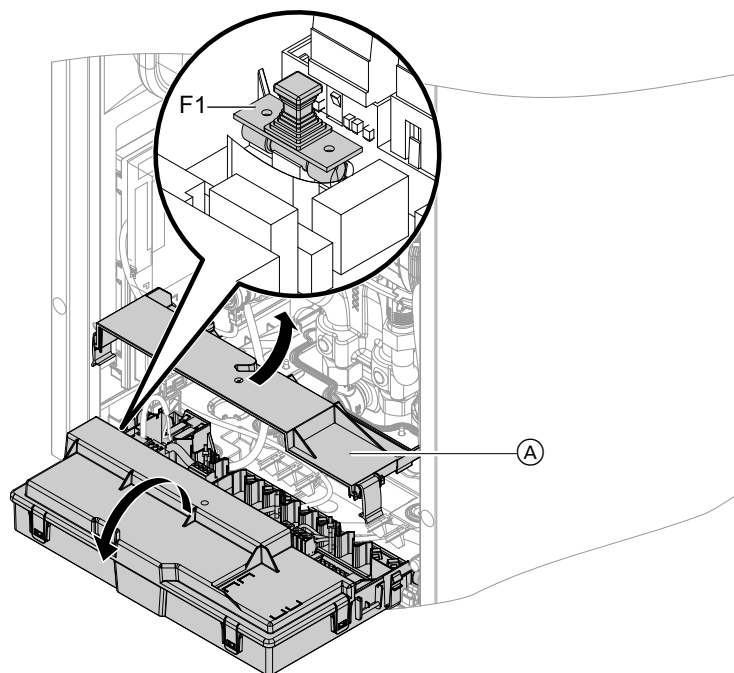


Fig. 56

1. Turn off the ON/OFF switch.
2. Depending on the configuration: Move programming unit together with bracket to service position.
3. Pivot the HMU heat management unit down.
4. Remove cover (A).
5. Check fuse F1 (see connection and wiring diagram).



Danger

Incorrect or improperly fitted fuses can lead to an increased risk of fire.

- Insert fuses without using any force. Position fuses correctly.
- Only use structurally identical types with the specified response characteristics.

Control functions

Heating mode

The control unit determines a set flow temperature for the heat generator, subject to the outside temperature or the room temperature and the slope/level of the heating curve.

The determined set flow temperature is transferred to the burner control unit. The burner control unit calculates the modulation level from the set and actual flow temperatures and regulates the burner accordingly. The electronic temperature limiter inside the burner control unit limits the flow temperature.

Heating circuit pump connection for heating circuit without mixer

Only for systems with several heating circuits.

If a heating circuit without mixer is connected downstream of the low loss header, the circulation pump can be connected to output P2. The function of the output is set in the commissioning assistant.



To start the commissioning assistant: See "Commissioning, inspection and maintenance".

If output P2 is being used for another function, the circulation pump can be connected to an EM-P1 extension (accessories).

Venting program

During the venting program, the circulation pump will be alternately switched on and off for 30 s over a period of 20 min.

The 3-way diverter valve alternates between central heating and DHW heating for a certain period of time. The burner is switched off during the venting program.



Activate venting program: See "Commissioning, inspection and maintenance".

Filling program

In the delivered condition, the 3-way diverter valve is set to its central position, so the system can be filled completely. After the control unit has been switched on, the 3-way diverter valve no longer goes into its central position.

If the system is to be filled with the control unit switched on, the 3-way diverter valve is moved to its central position in the filling program and the pump is started.



Activate filling program: See "Commissioning, inspection and maintenance".

In this position, the control unit can be switched off and the system can be filled completely. When the function is enabled, the burner shuts down. The program automatically becomes inactive after 20 min.

Heating curve

The heating curves represent the relationship between the outside temperature and the flow temperature. Simplified: The lower the outside temperature, the higher the flow temperature must be in order to reach the room temperature set point.

Factory settings:

- Slope = 1.4
- Level = 0

Note

If heating circuits with mixer are present in the heating system: The flow temperature of the heat generator is one differential temperature higher than the flow temperature for the heating circuits with mixer. Differential temperature in delivered condition set to 8 K.

The differential temperature is adjustable using the following parameters:

- Heating circuit 2: Parameter 934.5
- Heating circuit 3: Parameter 935.5
- Heating circuit 4 (if installed): Parameter 936.5

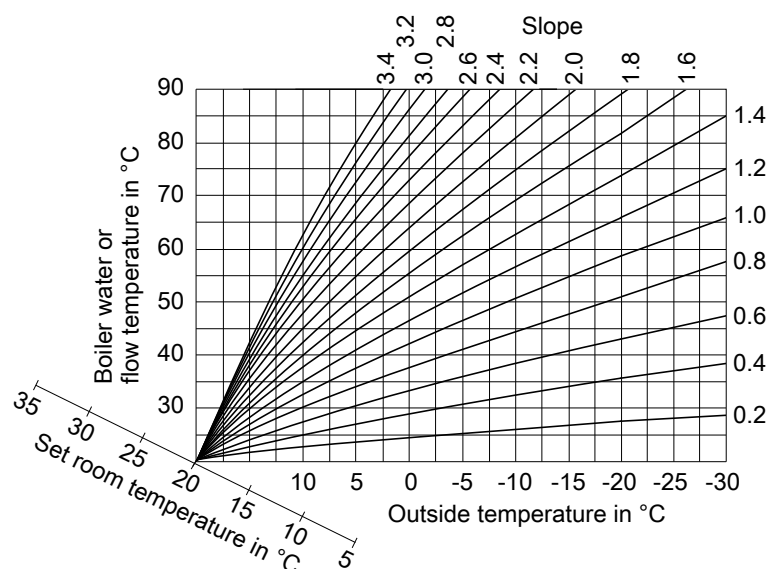


Fig. 57

Slope setting ranges:

- Underfloor heating systems: 0.2 to 0.8
- Low temperature heating systems: 0.8 to 1.6

Set room temperature

Standard room temperature or comfort room temperature

Individually adjustable for each heating circuit.
The heating curve is offset along the set room temperature axis. The start and stop points of the heating circuit pumps depend on the Heating limit... outside temperature, heating circuit... setting.


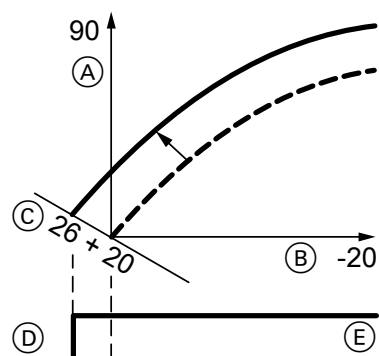


Fig. 58 Example 1: Adjusting the set room temperature from 20 to 26 °C

- (A) Flow temperature in °C
- (B) Outside temperature in °C
- (C) Set room temperature in °C
- (D) Heating circuit pump "OFF"
- (E) Heating circuit pump "ON"

Changing the set room temperature



Operating instructions

Reduced room temperature


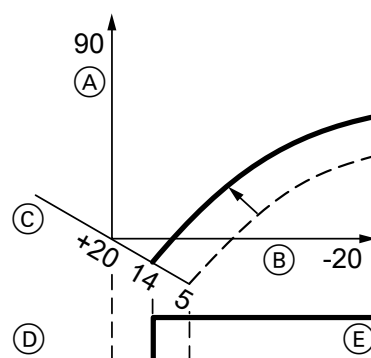


Fig. 59 Example 2: Adjusting the reduced set room temperature from 5 °C to 14 °C

- (A) Flow temperature in °C
- (B) Outside temperature in °C
- (C) Set room temperature in °C
- (D) Heating circuit pump "OFF"
- (E) Heating circuit pump "ON"

Changing the reduced set room temperature



Operating instructions

Changing the slope and level

Individually adjustable for each heating circuit.

Control functions (cont.)

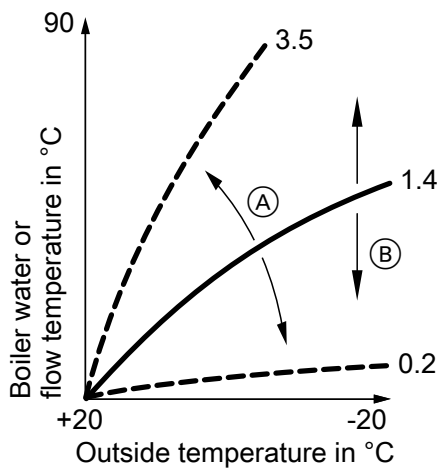


Fig. 60

- (A) Changing the slope
- (B) Changing the level (vertical parallel offset of the heating curve)

Raising the flow temperature of the heating circuits during operation with room temperature hook-up

The higher the value, the greater the influence of the room temperature on the flow temperature of the heating circuit.

Room influence factor parameter

Heating circuit	Parameter
1 (without mixer)	933.7 (only set if just one heating circuit is installed)
2 (with mixer)	934.7
3 (with mixer)	935.7
4 ^{*2} (with mixer)	936.7

Example for determining the increase in the flow temperature using the value of the heating curve when the actual room temperature deviates from the set room temperature:

- Set room temperature = 20.0 °C (RT set)
- Actual room temperature = 18.0 °C (RT actual)
- Heating curve slope = 1.4
- Room influence factor = 8 (delivered condition)

Determining the increase in flow temperature

$(RT_{\text{set}} - RT_{\text{actual}}) \times (1 + \text{slope}) \times \text{room influence factor} / 4 = \text{raising the flow temperature via heating curve value}$

$$(20 - 18) \times (1 + 1.4) \times 8 / 4 = 9.6$$

Increase in flow temperature via heating curve value = 9.6 K

Screed drying

When enabling screed drying, observe the information provided by the screed manufacturer.

When screed drying is activated, the heating circuit pumps of **all** heating circuits are switched on and the flow temperature is maintained at the set profile. After completion (30 days), the heating circuits with mixer are automatically controlled with the set parameters.

Note

During screed drying, DHW heating is not available.

Observe EN 1264. The report to be provided by the heating contractor must contain the following details regarding heat-up:

- Heat-up data with the relevant set flow temperatures
- Max. flow temperature achieved.
- Operating state and outside temperature at handover

Different temperature profiles can be set via parameter 897.0.

Note

Temperature profile 6 ends after 21 days.

The function continues after a power failure or after the control unit has been switched off. When screed drying has completed or been manually switched off, the system is regulated in accordance with the selected parameters.

Control functions (cont.)

Parameter 897.0 "Screed drying":

Temperature profile 1 (EN 1264-4)

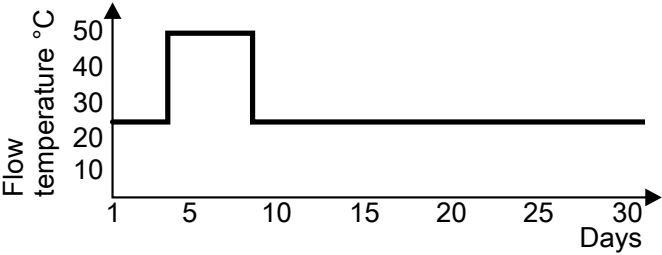


Fig. 61

Temperature profile 2 (ZV parquet and flooring technology)

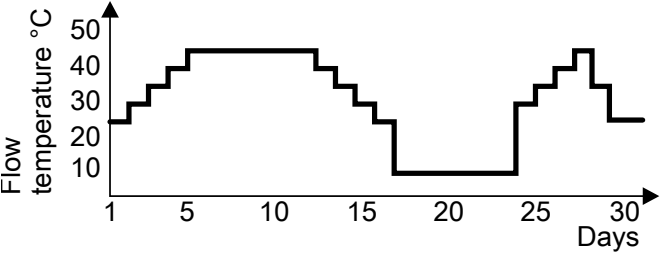


Fig. 62

Temperature profile 3

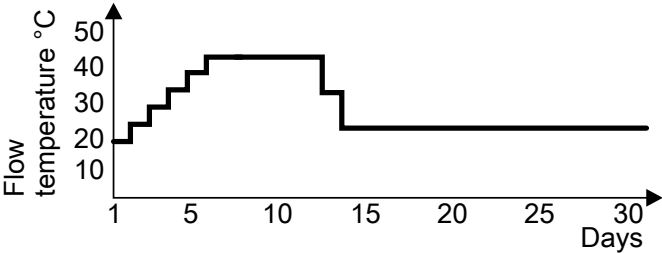


Fig. 63

Temperature profile 4

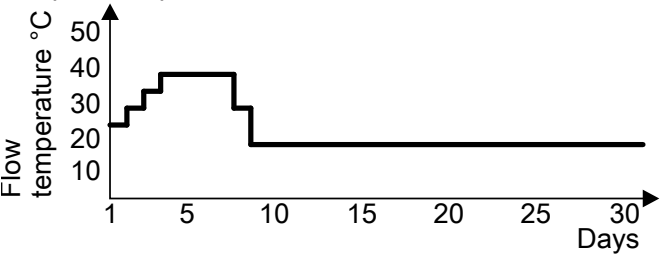


Fig. 64

Temperature profile 5

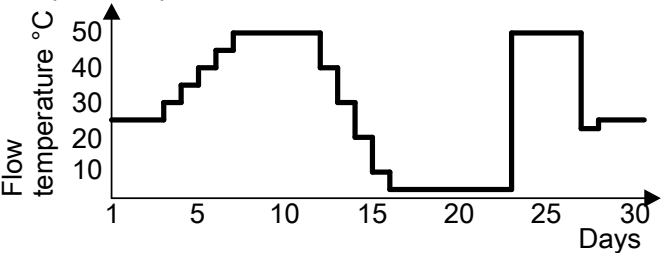


Fig. 65

Control functions (cont.)

Temperature profile 6

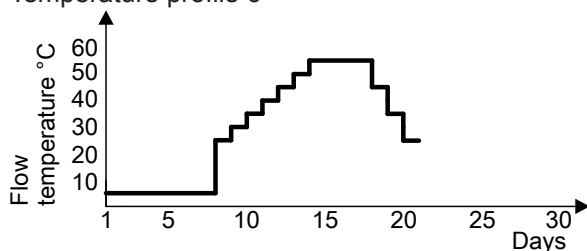


Fig. 66 Ends after 21 days.

Raising the reduced room temperature

During operation at reduced room temperature, the reduced set room temperature can be automatically raised subject to the outside temperature. The temperature is raised in accordance with the selected heating curve, and no higher than the standard set room temperature or comfort room temperature. Depending on which set room temperature will become active in the next time phase.

The outside temperature limits for the start and end of temperature raising can be set in parameters 1139.0 and 1139.1.

Example using the settings in the delivered condition

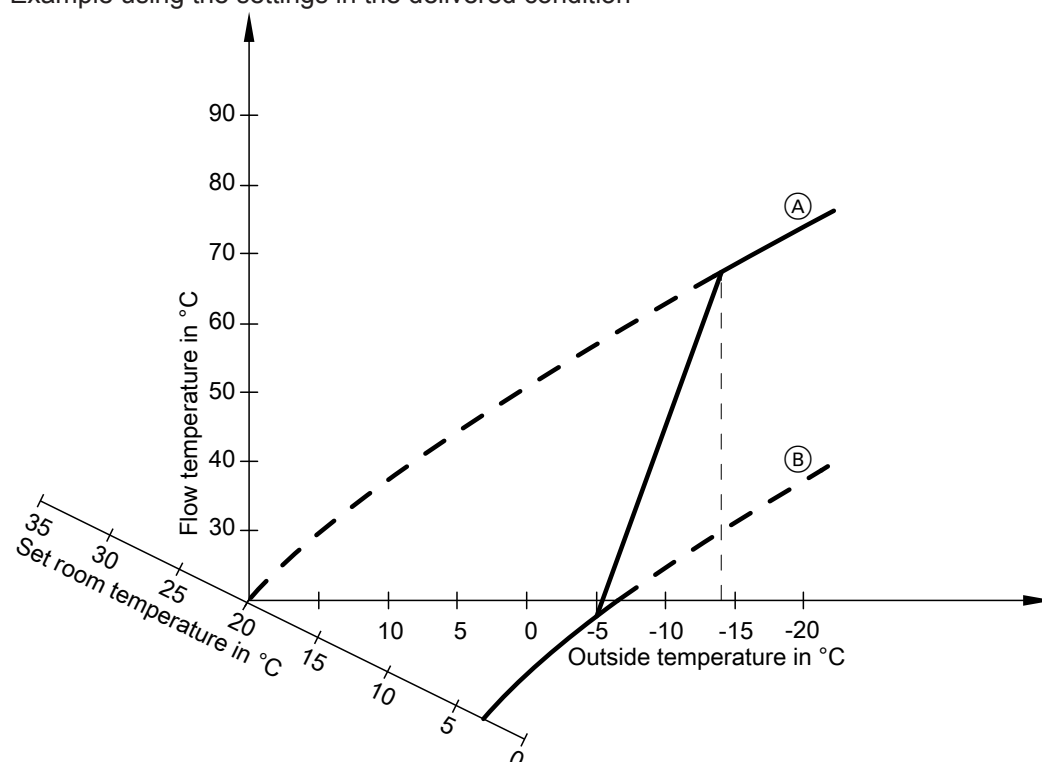


Fig. 67

- Ⓐ Heating curve for operation at standard room temperature or comfort room temperature
- Ⓑ Heating curve for operation at reduced room temperature

Control functions (cont.)

Reducing the heat-up time

During the transition from operation at reduced room temperature to operation at standard room temperature or comfort room temperature, the flow temperature will be raised in accordance with the selected heating curve.

The value and duration of the additional increase in the set flow temperature is adjusted in parameters 424.3 and 424.4.

Example

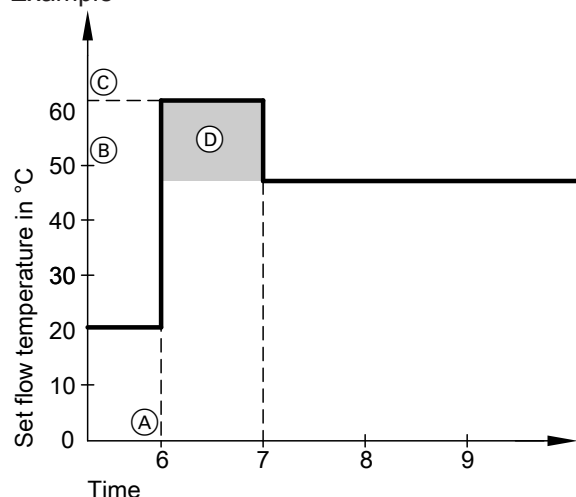


Fig. 68

- (A) Start of operation at standard room temperature or comfort room temperature
- (B) Set flow temperature in accordance with the set heating curve
- (C) Set flow temperature in accordance with parameter 424.3
- (D) Duration of operation with higher set flow temperature in accordance with parameter 424.4: 60 min

DHW heating

Heating the DHW loading cylinder from cold

The heating circuit pump is switched ON and the 3-way diverter valve will be changed over, if the cylinder temperature sensor captures a temperature lower than the defaulted set value.

- The cylinder loading pump is switched ON if the boiler water temperature \geq set cylinder temperature.
- The burner is switched ON if the boiler water temperature \leq set cylinder temperature, and the cylinder loading pump is switched ON when the required boiler water temperature is reached.

The loading cylinder is heated up to the set cylinder temperature. Heating stops when the specified temperature has been reached at the cylinder temperature sensor.

Reheating when DHW is drawn off

When DHW is drawn off, cold water enters the lower section of the loading cylinder.

The heating circuit pump is switched ON and the 3-way diverter valve is changed over, if the cylinder temperature sensor captures a temperature lower than the defaulted set value.

- The cylinder loading pump is switched ON if the boiler water temperature \geq set cylinder temperature.
- The burner is switched ON if the boiler water temperature \leq set cylinder temperature, and the cylinder loading pump is switched ON when the required boiler water temperature is reached.

DHW is regulated to the set temperature via the outlet temperature sensor.

DHW heating (cont.)

After the draw-off process has ended, the loading cylinder continues to be heated up until the set DHW temperature is reached at the cylinder temperature sensor.

Increased DHW hygiene

The DHW can be heated to a specified (higher) set DHW temperature (approx. 65 °C) for a period of one hour.



Danger

Risk of injury due to increased DHW temperature.

Inform the system user of the risk from the raised outlet temperature at the draw-off points. If required, provide on-site scald protection measures.

External heating circuit hook-up (if installed)

Note

Only in conjunction with weather-compensated operation.

■ Function:

- If the external demand is active (plug 96 or digital input on DIO electronics module closed), the heating circuit is supplied with heat.
- If the external demand is inactive (contact open), heat supply to the heating circuit ends (regardless of the current set room temperature or the switching time).

The following status messages are shown on the display of the control unit:

- S.94 (heating circuit 1)
- S.95 (heating circuit 2)
- S.96 (heating circuit 3)



Please note

There is no frost protection for the connected heating circuits.

■ Connection:

- If just one heating circuit is hooked up, use connection at plug 96: See page 22.
- If several heating circuits (max. 3) are hooked up, connect all contacts at EM-EA1 extension (DIO electronics module) to subscriber no. 1 (rotary switch = 1).



See EM-EA1 extension installation instructions

HMU heat management unit

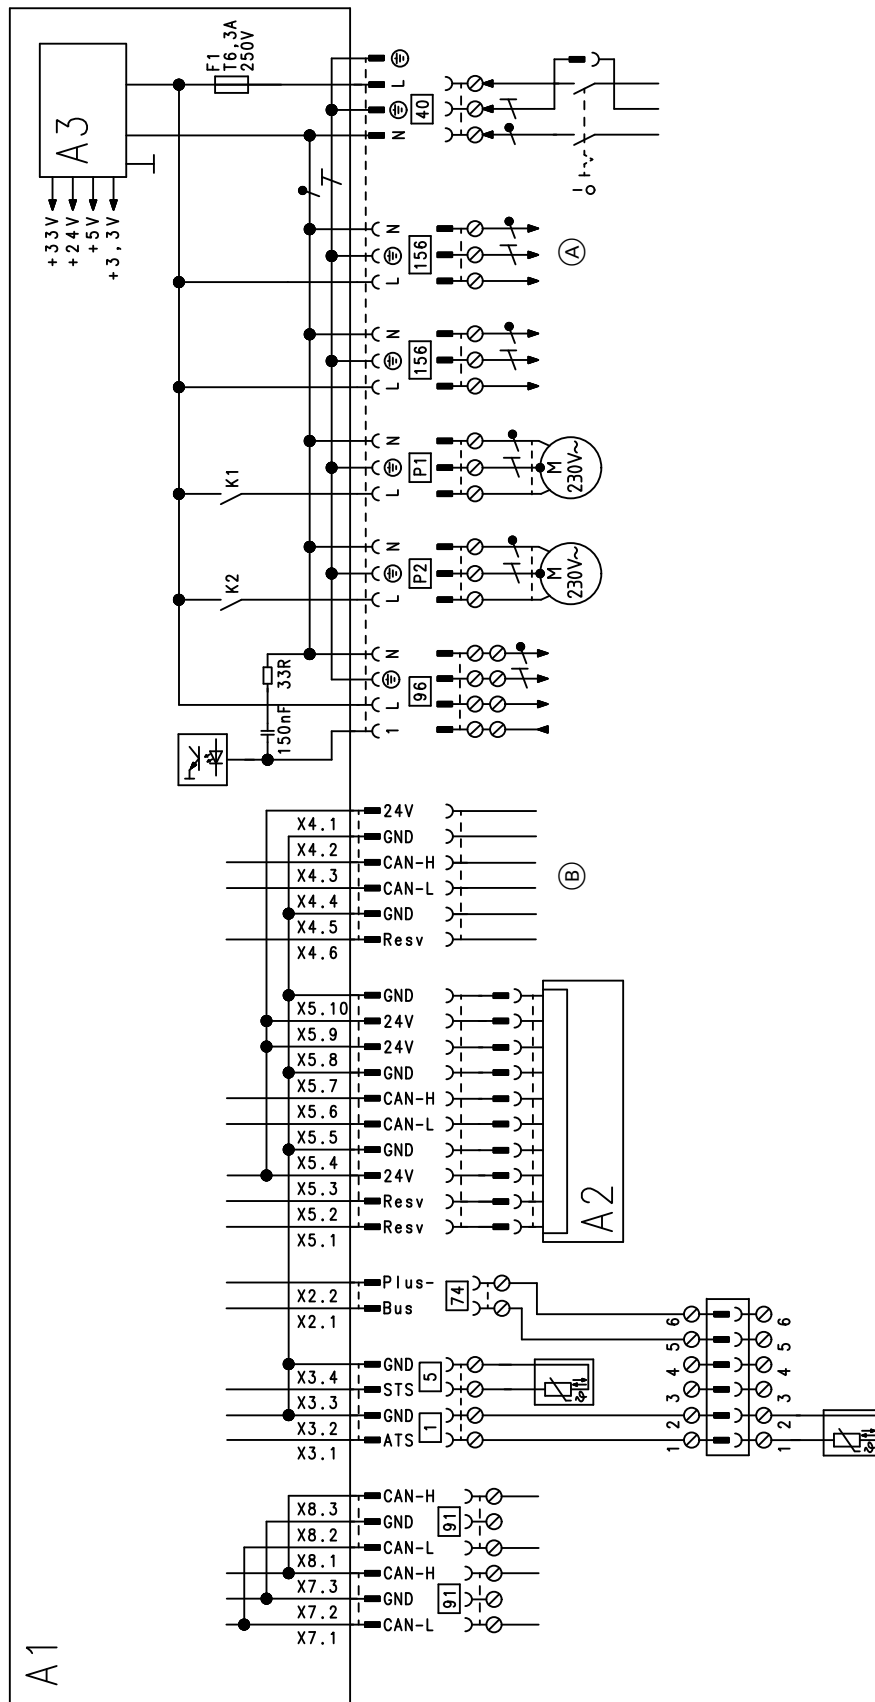


Fig. 69

- A1 HMU heat management unit
- A2 HMI programming unit with RF module (TCU 200)
- A3 Power supply unit
- X... Electrical interfaces
- 1 Outside temperature sensor

- 5 Cylinder temperature sensor
- 40 Power supply
- 74 PlusBus
- 91 CAN bus
- 96 Floating input 230 V, output 230 V

HMU heat management unit (cont.)

- | | | | |
|-----|--|---|----------------------------|
| 156 | Mains voltage output | Ⓐ | To BCU burner control unit |
| P1 | Cylinder loading pump | Ⓑ | To BCU burner control unit |
| P2 | Parametrisable output for: | | |
| | ■ DHW circulation pump | | |
| | or | | |
| | ■ Circulation pump for heating circuit without mixer | | |



BCU burner control unit

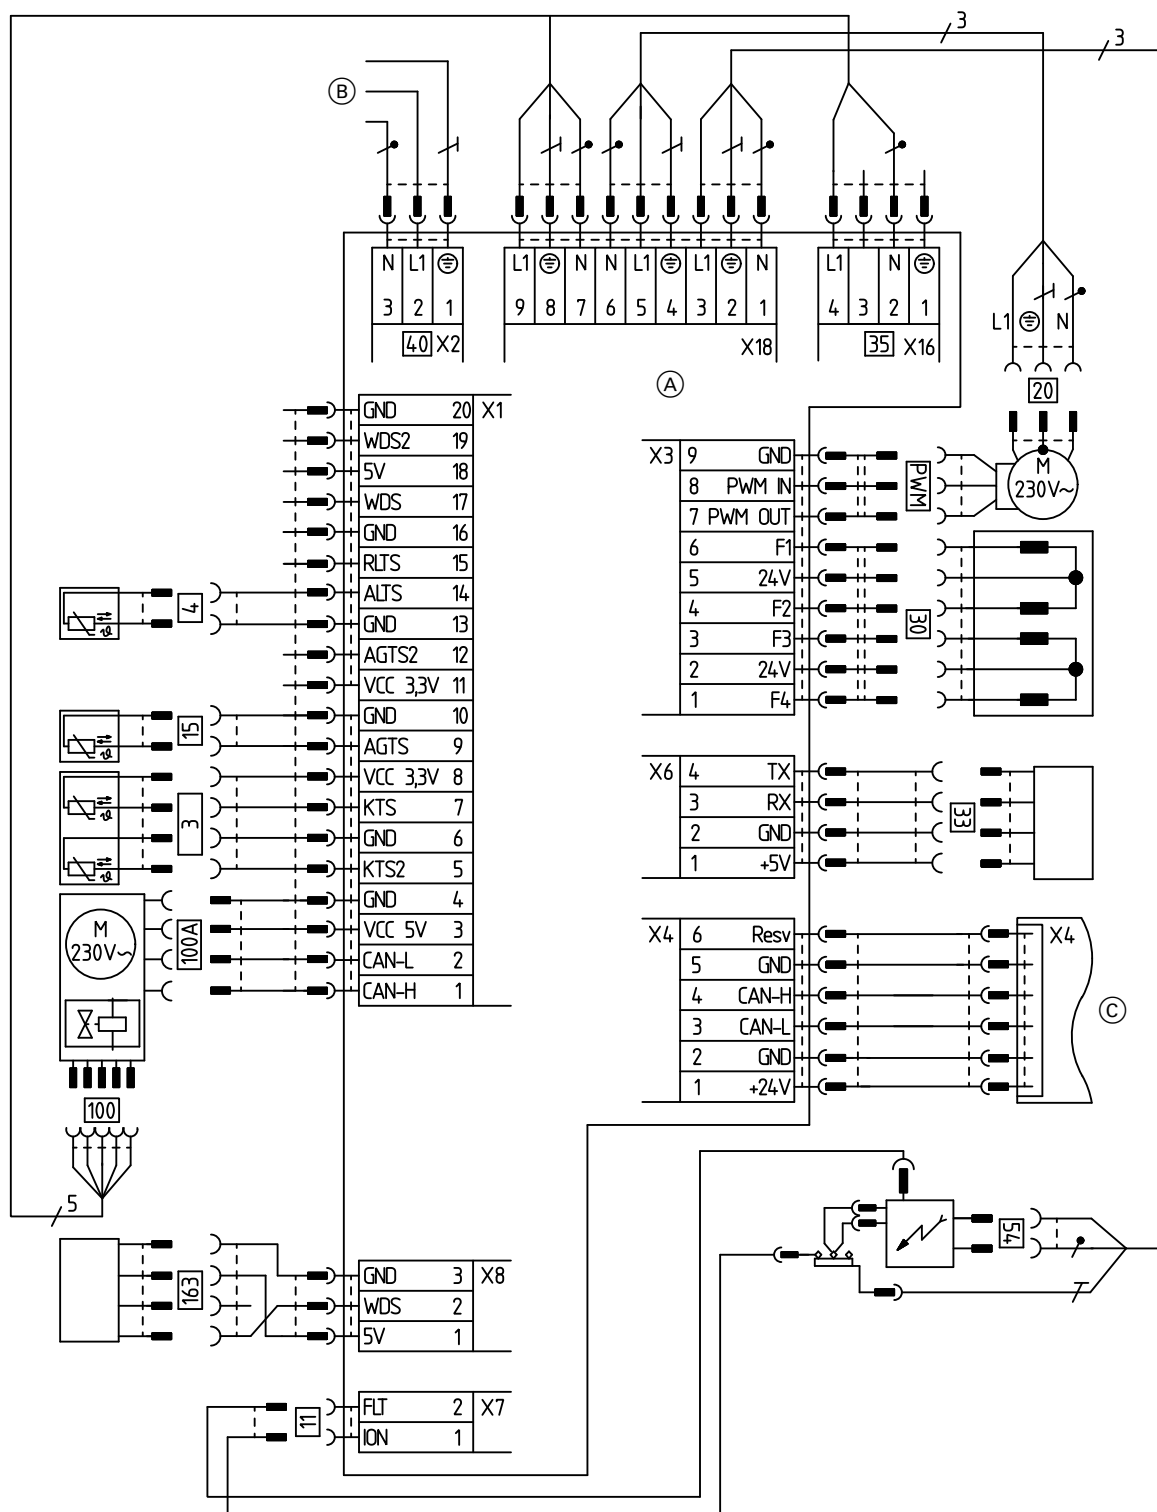


Fig. 70

- PWM Control signal
- X... Electrical interfaces
- [3] A/B Flow temperature sensors 1 and 2
- [4] Outlet temperature sensor
- [11] Ionisation electrode
- [15] Flue gas temperature sensor
- [20] Internal circulation pump (primary pump)
- [30] 3-way diverter valve
- [35] Gas solenoid valve

- [40] Power supply
- [54] Ignition unit
- [100] Fan motor
- [100] A Fan motor control
- [163] Water pressure sensor
- [163] A Water pressure sensor
- (A) BCU burner control unit
- (B) HMU heat management unit (plug [156])
- (C) HMU heat management unit (plug X4)

Commissioning/service reports

Settings and test values	Set value	Commissioning	Maintenance/service	Maintenance/service
Date				
Signature				
Static pressure mbar kPa	≤ 57.5 ≤ 5.75			
Supply pressure (flow pressure)				
<input type="checkbox"/> For natural gas mbar kPa	See table "Supply pressure" (Commissioning ...)			
<input type="checkbox"/> For LPG mbar kPa				
<input type="checkbox"/> Enter gas type				
Carbon dioxide content CO₂ For natural gas				
▪ At lower heating output % by vol.	See "Check- ing the com- bustion qual- ity" (Com- mission- ing ...)			
▪ At upper heating output % by vol.				
For LPG				
▪ At lower heating output % by vol.				
▪ At upper heating output % by vol.				
Oxygen content O₂				
▪ At lower heating output % by vol.				
▪ At upper heating output % by vol.				
Carbon monoxide content CO				
▪ At lower heating output ppm	< 1000			
▪ At upper heating output ppm	< 1000			

Specification

Gas boiler, type B and C, category II_{2N3P}				
Type		B2TF		
Rated heating output range (details to EN 15502)				
T_F/T_R = 50/30 °C (P(50/30))				
Natural gas	kW	1.9 - 19	1.9 - 25	1.9 - 32
LPG	kW	2.5 - 19	2.5 - 25	2.5 - 32
T_F/T_R = 80/60 °C (Pn(80/60))				
Natural gas	kW	1.7 - 17.5	1.7 - 23	1.7 - 29.3
LPG	kW	2.2 - 17.5	2.2 - 23	2.2 - 29.3
Rated heating output for DHW heating				
Natural gas	kW	1.7 - 22	1.7 - 28.6	1.7 - 33.9
LPG	kW	2.2 - 22	2.2 - 28.6	2.2 - 33.9
Rated heat input (Q_n)				
Natural gas	kW	1.8 - 17.8	1.8 - 23.4	1.8 - 29.9
LPG	kW	2.3 - 17.8	2.3 - 23.4	2.3 - 29.9
Rated heat input for DHW heating (Q_{nw})	kW	22.7	29.5	34.9
Product ID		CE-0085CT0017		
IP rating to EN 60529		IP X4		
▪ In conjunction with assembly kit (accessories)		IP X1		
Protection class		I		
NO_x	Category	6		
Gas supply pressure				
Natural gas	mbar	20	20	20
	kPa	2	2	2
LPG	mbar	50	50	50
	kPa	5	5	5
Max. permiss. gas supply pressure^{*3}				
Natural gas	mbar	25.0	25.0	25.0
	kPa	2.5	2.5	2.5
LPG	mbar	57.5	57.5	57.5
	kPa	5.75	5.75	5.75
Sound power level (to EN ISO 15036-1)				
– At partial load	dB(A)	38.8	38.8	38.8
– At rated heating output (DHW heating)	dB(A)	49.2	50.7	52.6
Power consumption in the delivered condition (incl. circulation pump)	W	54	68	110
Rated voltage	V	230		
Rated frequency	Hz	50		
Appliance fuse protection	A	6.3		
Backup fuse (power supply)	A	16		
RF module (integral)				
WiFi frequency band	MHz	2400 - 2483.5		
Max. transmitting power	dBm	17		
Low power radio frequency band	MHz	2400 - 2483.5		
Max. transmitting power	dBm	6		

^{*3} If the gas supply pressure is higher than the maximum permissible value, install a separate gas pressure governor upstream of the system.

Specification (cont.)

Gas boiler, type B and C, category II_{2N3P}				
Type		B2TF		
Rated heating output range (details to EN 15502)				
T_F/T_R = 50/30 °C (P(50/30))				
Natural gas	kW	1.9 - 19	1.9 - 25	1.9 - 32
LPG	kW	2.5 - 19	2.5 - 25	2.5 - 32
T_F/T_R = 80/60 °C (Pn(80/60))				
Natural gas	kW	1.7 - 17.5	1.7 - 23	1.7 - 29.3
LPG	kW	2.2 - 17.5	2.2 - 23	2.2 - 29.3
Supply voltage	V DC	24		
Power consumption	W	4		
Permissible ambient temperature				
▪ During operation	°C	+5 to +35		
▪ During storage and transport	°C	-5 to +60		
Electronic temperature limiter setting (TN)	°C	91		
Electronic temperature cut-out setting	°C	110		
Weight excl. heating water	kg	111.5		
Permiss. operating pressure, heating water side (PMS)	bar	3		
	MPa	0.3		
Weight				
– Excl. heating water and DHW	kg	111.5	111.5	111.5
– Incl. heating water and DHW	kg			
Water capacity (excl. diaphragm expansion vessel)	l	3.0	3.0	3.0
Max. flow temperature	°C	82	82	82
Max. flow rate (Limit for the use of hydraulic separation)	l/h	See residual head graphs		
Nominal circulating water volume At T _F /T _R = 80/60 °C	l/h	818	1076	1374
Expansion vessel				
Capacity	l	18	18	18
Pre-charge pressure	bar	0.75	0.75	0.75
	kPa	75	75	75
Permiss. operating pressure	bar	3	3	3
	MPa	0.3	0.3	0.3
Connections (with connection accessories)				
Boiler flow and return	R	¾	¾	¾
Cold water and DHW	R	½	½	½
DHW circulation	R	½	½	½
Dimensions				
Length	mm	595	595	595
Width	mm	600	600	600
Height	mm	1400	1400	1400
Gas connection (with connection accessories)	R	½	½	½

Specification (cont.)

Gas boiler, type B and C, category II _{2N3P}				
Type		B2TF		
Rated heating output range (details to EN 15502)				
T_F/T_R = 50/30 °C (P(50/30))				
Natural gas	kW	1.9 - 19	1.9 - 25	1.9 - 32
LPG	kW	2.5 - 19	2.5 - 25	2.5 - 32
T_F/T_R = 80/60 °C (Pn(80/60))				
Natural gas	kW	1.7 - 17.5	1.7 - 23	1.7 - 29.3
LPG	kW	2.2 - 17.5	2.2 - 23	2.2 - 29.3
DHW loading cylinder				
Capacity	l	100	100	100
Permiss. operating pressure (DHW side)	bar	10	10	10
	MPa	1	1	1
Continuous DHW output	kW	19.74	26.53	32.50
For DHW heating from 10 to 45 °C	l/h	484.80	648.80	793.80
Performance factor N _L ^{*4}		1.4	2.1	2.6
Initial DHW output	l/10 min	163.70	196.20	215.50
For DHW heating from 10 to 45 °C				
Supply values				
Relative to the max. load and 1013 mbar/15 °C				
Natural gas E	m ³ /h	2.40	3.12	3.69
Natural gas LL	m ³ /h	2.79	3.63	4.29
LPG	kg/h	1.76	2.29	2.71
Flue gas parameters				
Temperature (at a return temperature of 30 °C)				
– At rated heating output	°C	41	46	59
– At partial load	°C	38	38	38
Temperature (at a return temperature of 60 °C)	°C	67	72	77
Mass flow rate (for DHW heating)				
Natural gas				
– At rated heating output	kg/h	40.4	54.2	62.1
– At partial load	kg/h	3.2	3.2	3.2
LPG				
– At rated heating output	kg/h	39.8	53.2	61.1
– At partial load	kg/h	3.9	3.9	3.9
Available draught				
	Pa	250	250	250
	mbar	2.5	2.5	2.5
Max. amount of condensate	l/h	3.2	4.1	4.9
To DWA-A 251				
Condensate connection (hose nozzle)	Ø mm	20 - 24	20 - 24	20 - 24
Flue gas connection	Ø mm	60	60	60
Ventilation air connection	Ø mm	100	100	100

^{*4} At 70 °C average boiler water temperature and cylinder storage temperature T_{cyl} = 60 °C.

DHW performance factor N_L depends on cylinder storage temperature T_{cyl}.

Standard values: T_{cyl} = 60 °C → 1.0 × N_L T_{cyl} = 55 °C → 0.75 × N_L T_{cyl} = 50 °C → 0.55 × N_L T_{cyl} = 45 °C → 0.3 × N_L.

Specification (cont.)

Gas boiler, type B and C, category II _{2N3P}				
Type		B2TF		
Rated heating output range (details to EN 15502)				
T _F /T _R = 50/30 °C (P(50/30))				
Natural gas	kW	1.9 - 19	1.9 - 25	1.9 - 32
LPG	kW	2.5 - 19	2.5 - 25	2.5 - 32
T _F /T _R = 80/60 °C (Pn(80/60))				
Natural gas	kW	1.7 - 17.5	1.7 - 23	1.7 - 29.3
LPG	kW	2.2 - 17.5	2.2 - 23	2.2 - 29.3
Standard seasonal efficiency [to DIN] at				
T _F /T _R = 40/30 °C	%	Up to 98 (H _s) [gross cv]		
Energy efficiency class				
– Heating		A	A	A
– DHW heating, draw-off profile XL		A	A	A

Note

The supply values are only for reference (e.g. in the gas contract application) or for a supplementary, rough estimate to check the volumetric settings. Due to factory settings, the gas pressure must not be altered from these values. Reference: 15 °C, 1013 mbar (101.3 kPa).

Flue system types

Available in the following countries	Type of flue system
AE, AM, AZ, BA, BG, BY, CH, CY, CZ, DK, EE, ES, FI, FR, GB, GR, HR, HU, IE, IS, IT, KG, KZ, LI, LT, LU, LV, MD, ME, MT, NL, NO, PL, PT, RO, RS, RU, SE, SK, TR, UA, UZ	B ₂₃ , B _{23P} , B ₃₃ , C ₁₃ , C ₃₃ , C ₅₃ , C ₆₃ , C ₈₃ , C _{83P} , C ₉₃
BE	B ₂₃ , B _{23P} , B ₃₃ , C ₁₃ , C ₃₃ , C ₅₃ , C ₈₃ , C _{83P} , C ₉₃
DE, SI	B ₂₃ , B _{23P} , B ₃₃ , C _{13X} , C _{33X} , C _{53X} , C _{63X} , C _{83X} , C _{93X}

Gas categories

Available in the following countries	Gas categories
AE, LU, AM, DK, EE, KG, LV, RO, RU, SE, AZ, BA, BG, BY, CH, CZ, ES, FI, GB, GR, HR, IE, IS, KZ, IT, LI, LT, MD, ME, NO, PT, RS, SI, SK, TR, UZ, HU, MT, UA	II _{2N3P} /II _{2H3P}
BE	I _{2N}
DE, FR	II _{2N3P}
CY	I _{3P}
NL	II _{2EK3P}
PL	II _{2N3P} /II _{2ELW3P}

Electronic combustion control unit

The electronic combustion controller utilises the physical correlation between the level of the ionisation current and the air ratio λ . The maximum ionisation current is achieved at an air ratio of 1 for all gas qualities. The ionisation signal is evaluated by the combustion controller. The air ratio is regulated to a value that is between $\lambda = 1.2$ and 1.5 . This range provides for an optimum combustion quality. Thereafter, the electronic gas train regulates the required gas volume subject to the prevailing gas quality.

To check the combustion quality, the CO_2 content or the O_2 content of the flue gas is measured. The prevailing air ratio is determined using the actual values.

To achieve optimum combustion control, the system regularly carries out an automatic self-calibration; also after power failures (shutdown). For this, the combustion is briefly regulated to maximum ionisation current (corresponding to air ratio $\lambda = 1$). Self-calibration takes place shortly after the burner starts. The process lasts approx. 20 s during which higher than normal CO emissions may occur briefly.

Final decommissioning and disposal

Viessmann products can be recycled. Components and substances from the system are not part of ordinary household waste.

For decommissioning the system, isolate the system from the power supply and allow components to cool down where appropriate.
All components must be disposed of correctly.

Declaration of conformity

We, Viessmann Werke GmbH & Co. KG, D-35107 Allendorf, declare as sole responsible body that the named product complies with the European directives and supplementary national requirements in terms of its design and operational characteristics. Viessmann Werke GmbH & Co. KG, D-35107 Allendorf hereby declares that the radio equipment type of the named product is in compliance with Directive 2014/53/EU.


Using the serial number, the full Declaration of Conformity can be found on the following website:
www.viessmann.co.uk/eu-conformity

Manufacturer's certificate according to the 1st BImSchV [Germany]

We, Viessmann Werke GmbH & Co. KG, D-35107 Allendorf, confirm that the product **Vitodens 222-F** complies with the NO_x limits specified by the 1st BImSchV, paragraph 6.

Allendorf, 1 February 2018

Viessmann Werke GmbH & Co. KG

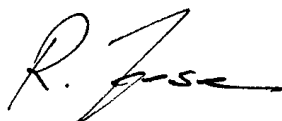

Authorised signatory Reiner Jansen
Head of Strategic Quality Management

Keyword index

- A**
 Angle of penetration..... 25
- B**
 Back draught safety device..... 46
 Boiler, draining on the DHW side..... 50
 Boiler water temperature sensor..... 98
 Burner control unit..... 114
 – Connection diagram..... 114
 Burner gasket..... 45
 Burner gauze assembly..... 45
 Burner installation..... 49
 Burner removal..... 44
- C**
 Checking
 – Service message..... 57
 Checking functions..... 74
 Combustion chamber cleaning..... 47
 Combustion controller..... 120
 Combustion quality, checking..... 55
 Commissioning..... 34
 Commissioning assistant..... 30
 Condensate drain..... 47
 Connection diagrams..... 112
 Connection error..... 77
 Control functions..... 105
 Control unit
 – Connection diagram..... 112
 Converting the gas type..... 38
 Cylinder cleaning..... 51
 Cylinder temperature sensor..... 98
- D**
 Determining the increase in flow temperature..... 107
 DHCP..... 25
 DHW boost heating..... 58, 111
 DHW circulation pump, connecting..... 22
 DHW heating
 – Functions..... 110
 DHW hygiene..... 58, 111
 DHW temperature, raised..... 58, 111
 Diaphragm expansion vessel..... 35
 Dynamic IP addressing..... 25
- E**
 Electronic combustion controller..... 120
- F**
 Fault codes..... 79
 Fault message, calling up..... 77
 Fault messages
 – Display..... 77
 Fault messages, calling up..... 73
 Faults
 – Display..... 77
 Filling function..... 35, 105
 Fill water..... 34
 Flow pressure..... 40
 Flow temperature sensor..... 98
- Flue gas temperature sensor..... 99
 Function descriptions..... 105
 Fuse..... 104
- G**
 Gas supply pressure..... 39
 Gas train 39
 Gas type..... 38
 Gas type conversion..... 38
- H**
 Heating circuit pump for heating circuit without mixer.... 105
 Heating contractor
 – Contact details..... 37
 Heating curve..... 57, 105
 Heating curve level..... 106
 Heating curve slope..... 106
 Heating output, setting..... 41
 Heating surface cleaning..... 47
 Heating system, venting..... 36
 Heat-up time..... 110
- I**
 Ignition..... 46
 Ignition electrodes..... 46
 Information messages..... 96
 Internet, connecting..... 33
 Ionisation electrode..... 46
 IP addressing..... 25
- L**
 Language selection..... 30
 Leak test, balanced flue system..... 43
- M**
 Magnesium protective anode
 – Checking anode..... 52
 – Replacing anode..... 52
 Maintenance display
 – Resetting..... 57
 Manufacturer's certificate 122
 Message history..... 77
 Messages, calling up..... 73
- O**
 Operating conditions, checking..... 73
 Operating data, checking..... 73
 Operating data call-up..... 73
 Operational reliability..... 25
 Outside temperature sensor..... 21, 98

P

Parameter

– Automatic summer/wintertime changeover.....	60
– Burner hours until next service.....	61
– Calorific value, gas.....	61
– Clear maintenance messages.....	62
– Cylinder priority on heating circuit.....	66, 67, 68
– DHW circulation pump function.....	64
– Differential temperature, heating circuit.....	67, 68
– Display correction for outside temperature.....	59
– Function, DHW circulation pump.....	64
– Gas volume correction factor.....	60
– Heating limit, outside temperature.....	70
– Integral threshold value.....	63
– Interval until next service.....	62
– Max. flow temperature, heating circuit.....	69
– Max. speed, heating circuit pump.....	68
– Maximum heating output.....	62
– Min. flow temperature, heating circuit.....	69
– Min. speed, heating circuit pump.....	68
– Minimum heating output.....	63
– Operating mode, circulation pump.....	63
– Outside temperature limit.....	61
– Reheating suppression, solar cylinder heating.....	65
– Residual head control, circulation pump.....	63
– Room influence factor, heating circuit.....	67, 68
– Room temperature hook-up, heating circuit.....	66, 67, 68
– Scald protection activation.....	64
– Screed drying.....	60
– Set flow temperature for external demand.....	59
– Source for date and time.....	61
– Speed of boiler circuit pump.....	62
– Speed of circulation pump for cylinder heating.....	65
Parameters.....	59
– Groups.....	59
– Setting local time.....	59
Parameters, calling up.....	59
Parameters for commissioning.....	57
Password	
– Changing.....	72
Passwords	
– Reset to delivered condition.....	73
Plate heat exchanger.....	101
Port 123.....	25
Port 443.....	25
Port 80.....	25
Port 8883.....	25
Protective anode	
– Anode current and anode, checking.....	50
– Checking anode.....	52
– Replacing anode.....	52

R

Raising flow temperature

– Operation with room temperature hook-up.....	107
Raising reduced room temperature.....	109

Range of WiFi connections.....	25
Reduced set room temperature.....	106
Reducing heat-up output.....	109
Reducing heat-up time.....	110
Relay test.....	74
Repairs.....	96
Report.....	115
Requirements.....	25
Room temperature hook-up.....	107

S

Screed drying.....	107
Screed drying function.....	41, 107
Security parameters.....	25
Service menu	
– Calling up.....	72
Service message	
– Checking.....	57
Service messages.....	95
Service messages, calling up.....	73
Set room temperature	
– Setting.....	106
Specification.....	116
Static pressure.....	39
Status messages.....	95
Subscriber number	
– Extensions.....	70
– Setting.....	70
Subscriber number of connected component.....	77
Summer economy control.....	70
Supply pressure.....	39, 40
Switch S1.....	70
System, filling.....	35, 37
System configuration.....	59
System pressure.....	35, 37
System requirements.....	25
System schemes.....	57

T

Trap.....	17, 47
-----------	--------

V

Venting.....	36
Venting program.....	105

W

Warning messages.....	95
Warning messages, calling up.....	73
WiFi connection.....	33
WiFi connection range.....	25
WiFi network.....	33
WiFi router.....	25
Wiring diagram.....	112







Viessmann Werke GmbH & Co. KG
D-35107 Allendorf
Telephone: +49 6452 70-0
Fax: +49 6452 70-2780
www.viessmann.com



Viessmann Limited
Hortonwood 30, Telford
Shropshire, TF1 7YP, GB
Telephone: +44 1952 675000
Fax: +44 1952 675040
E-mail: info-uk@viessmann.com

6151778 Subject to technical modifications.