

**EM-EA1 extension**

DIO electronics module  
Function extension

**EM-EA1 extension**



### Safety instructions



Please follow these safety instructions closely to prevent accidents and material losses.

#### Safety instructions explained



##### **Danger**

This symbol warns against the risk of injury.



##### **Please note**

This symbol warns against the risk of material losses and environmental pollution.

##### **Note**

*Details identified by the word "Note" contain additional information.*

#### Target group

These instructions are exclusively intended for qualified contractors.

- Work on gas installations may only be carried out by a registered gas fitter.
- Work on electrical equipment may only be carried out by a qualified electrician.
- The system must be commissioned by the system installer or a qualified person authorised by the installer.

#### Regulations to be observed

- National installation regulations
- Statutory regulations for the prevention of accidents
- Statutory regulations for environmental protection
- Codes of practice of the relevant trade associations
- Relevant country-specific safety regulations

#### Safety instructions for working on the system

##### Working on the system

- Where gas is used as the fuel, close the main gas shut-off valve and safeguard it against unintentional reopening.
- Isolate the system from the power supply, e.g. by removing the separate fuse or by means of a mains isolator, and check that it is no longer live.
- Safeguard the system against reconnection.
- Wear suitable personal protective equipment when carrying out any work.



##### **Danger**

Hot surfaces and fluids can lead to burns or scalding.

- Before maintenance and service work, switch OFF the appliance and let it cool down.
- Never touch hot surfaces on the boiler, burner, flue system or pipework.



##### **Please note**

Electronic assemblies can be damaged by electrostatic discharge.  
Prior to commencing work, touch earthed objects such as heating or water pipes to discharge static loads.

##### Repair work



##### **Please note**

Repairing components that fulfil a safety function can compromise the safe operation of the system.  
Replace faulty components only with genuine Viessmann spare parts.

##### Auxiliary components, spare and wearing parts



##### **Please note**

Spare and wearing parts that have not been tested together with the system can compromise its function. Installing non-authorised components and making non-approved modifications or conversions can compromise safety and may invalidate our warranty.  
For replacements, use only original spare parts supplied or approved by Viessmann.

## Safety instructions (cont.)

### Safety instructions for operating the system

#### If you smell gas



##### **Danger**

Escaping gas can lead to explosions which may result in serious injury.

- Do not smoke. Prevent naked flames and sparks. Never switch lights or electrical appliances on or off.
- Close the gas shut-off valve.
- Open windows and doors.
- Evacuate any people from the danger zone.
- Notify your gas or electricity supply utility from outside the building.
- Have the power supply to the building shut off from a safe place (outside the building).

#### If you smell flue gas



##### **Danger**

Flue gas can lead to life threatening poisoning.

- Shut down the heating system.
- Ventilate the installation site.
- Close doors to living spaces to prevent flue gases from spreading.

#### What to do if water escapes from the appliance



##### **Danger**

If water escapes from the appliance there is a risk of electrocution.  
Switch OFF the heating system at the external isolator (e.g. fuse box, domestic distribution board).



##### **Danger**

If water escapes from the appliance there is a risk of scalding.  
Never touch hot heating water.

#### Condensate



##### **Danger**

Contact with condensate can be harmful to health.  
Never let condensate touch your skin or eyes and do not swallow it.

#### Flue systems and combustion air

Ensure that flue systems are clear and cannot be sealed, for instance due to accumulation of condensate or other external causes.

Ensure an adequate supply of combustion air.

Inform system users that subsequent modifications to the building characteristics are not permissible (e.g. cable/pipework routing, cladding or partitions).



##### **Danger**

Leaking or blocked flue systems, or an inadequate supply of combustion air can cause life threatening poisoning from carbon monoxide in the flue gas.

Ensure the flue system is in good working order.  
Vents for supplying combustion air must be non-sealable.

#### Extractors

Operating appliances that exhaust air to the outside (extractor hoods, extractors, air conditioning units, etc.) can create negative pressure. If the boiler is operated at the same time, this can lead to a reverse flow of flue gas.



##### **Danger**

The simultaneous operation of the boiler and appliances that exhausts air to the outside can result in life threatening poisoning due to a reverse flow of flue gas.










Fit an interlock circuit or take suitable steps to ensure an adequate supply of combustion air.

<b>1. Information</b>	Disposal of packaging .....	5
	Symbols .....	5
	Intended use .....	5
	Product information .....	6
	■ System examples .....	6
	■ Spare parts lists .....	6
<b>2. Installation sequence</b>	Wall mounting .....	7
	Overview of electrical connections .....	7
	Electrical connections .....	8
	Connecting external functions .....	8
	■ Connecting external default set flow temperature: 0 - 10 V IN .....	8
	■ Connecting an external default output: 0 - 10 V IN .....	9
	■ Connecting the operating mode changeover: DI1 to DI3 .....	10
	■ Connecting external demand: <span style="border: 1px solid black; padding: 0 2px;">43</span> .....	10
	■ Connecting external blocking: <span style="border: 1px solid black; padding: 0 2px;">43</span> .....	11
	Connecting the fault message input and fault message output .....	11
	■ Connection without system blocking via 230 V fault message input: <span style="border: 1px solid black; padding: 0 2px;">43</span> .....	11
	■ Connection with system blocking via 230 V fault message input: <span style="border: 1px solid black; padding: 0 2px;">43</span> ..	12
	■ Connection with system blocking via 24 V fault message input: DI1 ..	12
	■ Connecting only message facility: <span style="border: 1px solid black; padding: 0 2px;">66</span> .....	13
	Connecting the external LPG valve: <span style="border: 1px solid black; padding: 0 2px;">43</span> .....	13
	Connecting the external extractor interlock: <span style="border: 1px solid black; padding: 0 2px;">66</span> .....	13
	Connecting the PlusBus to the heat generator .....	14
	Power supply .....	14
	■ Power supply at heat generator .....	14
	■ Separate power supply .....	14
<b>3. Commissioning and adjustment</b>	Rotary switch S1 for subscriber number addressing .....	17
	Configuring functions .....	17
<b>4. Connection and wiring diagram</b>	.....	18
<b>5. Specification</b>	.....	19
<b>6. Disposal</b>	Final decommissioning and disposal .....	20
<b>7. Declaration of Conformity</b>	Declaration of conformity .....	21

## Disposal of packaging

Please dispose of packaging waste in line with statutory regulations.

## Symbols

Symbol	Meaning
	Reference to other document containing further information
	Step in a diagram: The numbers correspond to the order in which the steps are carried out.
	Warning of material losses and environmental pollution
	Live electrical area
	Pay particular attention.
	<ul style="list-style-type: none"> <li>▪ Component must audibly click into place.</li> <li>or</li> <li>▪ Acoustic signal</li> </ul>
	<ul style="list-style-type: none"> <li>▪ Fit new component.</li> <li>or</li> <li>▪ In conjunction with a tool: Clean the surface.</li> </ul>
	Dispose of component correctly.
	Dispose of component at a suitable collection point. Do <b>not</b> dispose of component in domestic waste.

## Intended use

The appliance is only intended to be installed and operated in sealed unvented heating systems that comply with EN 12828, with due attention paid to the associated installation, service and operating instructions as well as the details in the datasheet. It is only designed for the heating up of heating water.

Commercial or industrial usage for a purpose other than the heating up of heating water shall be deemed inappropriate.

Intended use presupposes that a fixed installation in conjunction with permissible components designed for this purpose has been carried out. Every other use will be deemed to be inappropriate. Any resulting losses are excluded from the manufacturer's liability.

Any usage beyond this must be approved by the manufacturer for the individual case.

Intended use also includes the adherence to maintenance and inspection intervals.

### Product information

Maximum 3 EM-EA1 function extensions can be connected to one heat generator.

Only one function can be connected to each EM-EA1 function extension (DIO electronics module).

The functions that can be connected depend on the settings made at the heat generator.



Heat generator installation and service instructions

### System examples

Available system examples: See **[www.viessmann-schemes.com](http://www.viessmann-schemes.com)**.

### Spare parts lists

Information about spare parts can be found on the Viessmann spare parts app.



Wall mounting

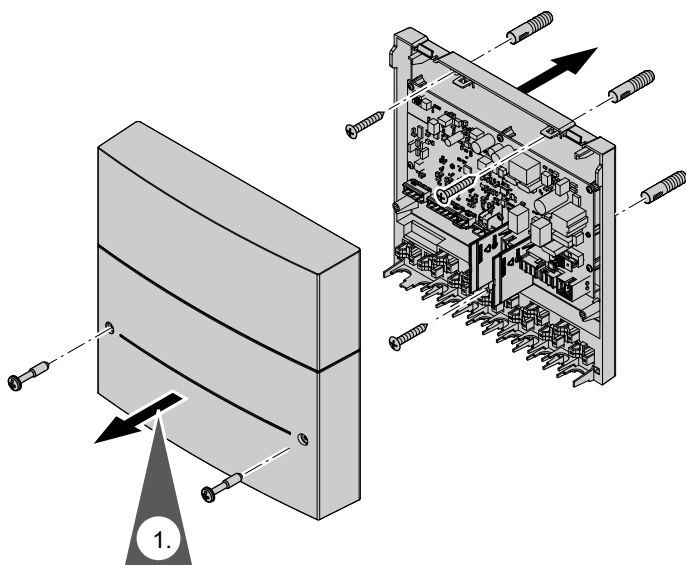


Fig. 1

Overview of electrical connections

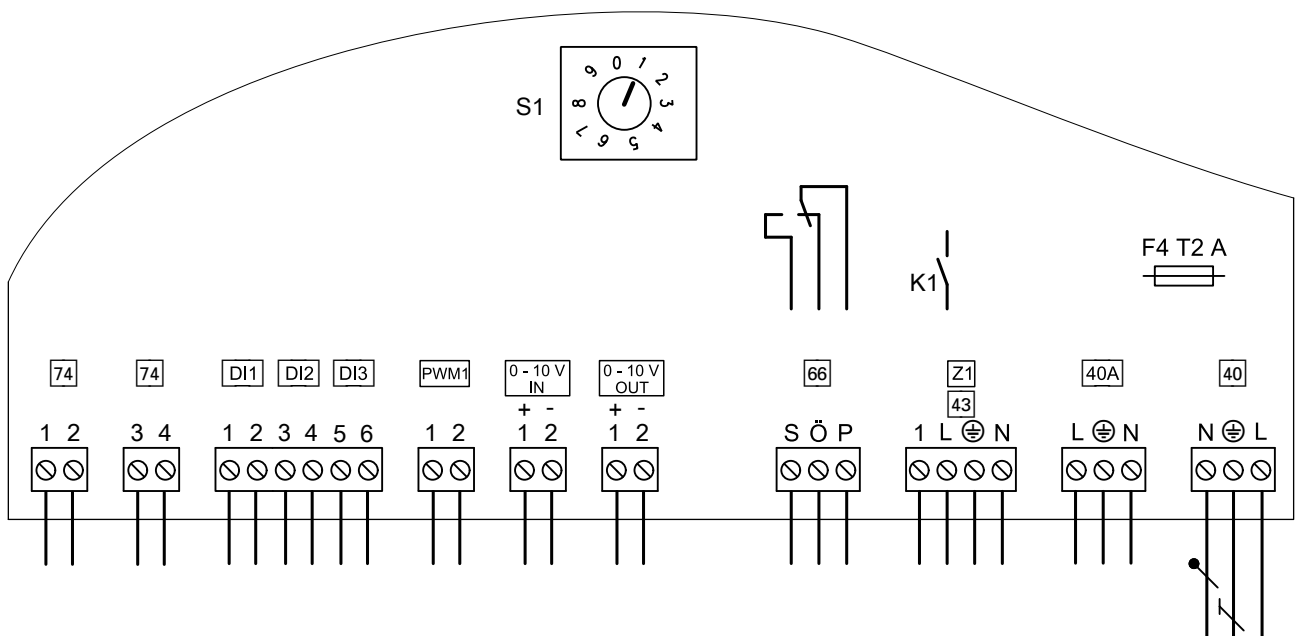


Fig. 2

DI1	Digital input 1	Z1 43	230 V relay output, 230 V input
DI2	Digital input 2	40	Power supply
DI3	Digital input 3	40 A	Power supply for additional accessories
0 - 10 V IN	0 - 10 V input	66	Changeover contact (floating switching contact) for connecting signalling equipment for fault messages or an extractor hood
0 - 10 V OUT	0 - 10 V output	74	PlusBus
F4	Fuse 2 A (slow)		
PWM1	Control voltage output		
S1	Rotary switch for subscriber number addressing		

**Overview of electrical connections** (cont.)

Function	Page	Connections:								
		DI1	DI2	DI3	PWM1	0 - 10 V		66	43	
						IN	OUT		43-1	43-L
<b>External functions</b>										
▪ External default set flow temperature	8					X			X	
▪ External default output	9					X			X	
▪ Operating mode changeover	10	X	X	X						
▪ External demand	10								X	
▪ External blocking	11								X	
<b>Fault message input and fault message output</b>										
▪ Connection without system blocking	11							X	X	
▪ Connection with system blocking, 230 V	12							X	X	
▪ Connection with system blocking, 24 V	13	X						X		
▪ Connecting only message facility (e.g. buzzer)	13							X		
<b>External LPG valve</b>	13									X
<b>External extractor interlock</b>	13							X		

**Electrical connections**

**! Please note**  
Electronic assemblies can be damaged by electrostatic discharge.  
Prior to commencing any work, touch earthed objects such as heating or water pipes to discharge static loads.

- Apply strain relief to on-site cables.
- Seal any unnecessary apertures with cable grommets (not cut open).

**Danger**

Incorrect wiring can lead to serious injury from electrical current and result in appliance damage.

Take the following measures to prevent wires drifting into the adjacent voltage area:

- Route extra low voltage (ELV) leads < 42 V separately from cables > 42 V/230 V~/400 V~. Secure with cable ties.
- Strip as little of the insulation as possible, directly before the terminals. Bundle the cables close to the corresponding terminals.
- If 2 components are connected to the same terminal, press both cores together in a **single** wire ferrule.
- When connecting external switching contacts and on-site components, observe the insulation requirements of IEC/EN 60335-1.

**Connecting external functions****Connecting external default set flow temperature: 0 - 10 V IN**

Analogue input for connecting the external default set flow temperature or the external default output



## Connecting external functions (cont.)

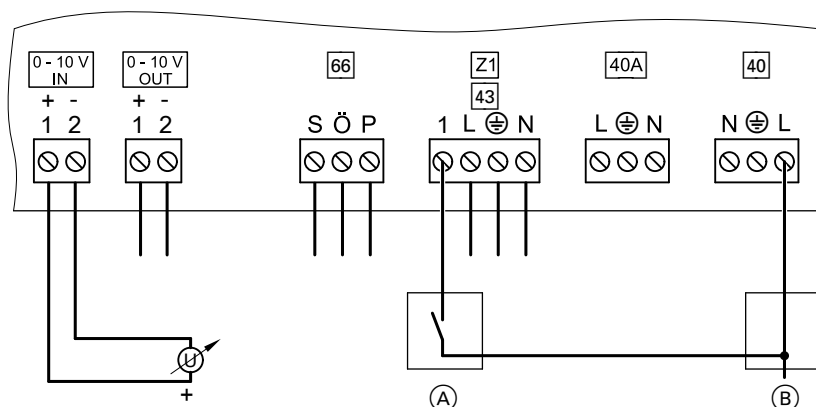


Fig. 3

- (A) Enable signal  
(B) Junction box

When making the connection, ensure correct polarity of the DC control voltage 0 - 10 V.

### Note

No galvanic separation is required between the earth conductor and the negative pole of the on-site power source.

The 0 to 10 V hook-up generates the following set flow temperatures:

< 1 V No default set flow temperature

1 V  $\triangleq$  10 °C

10 V  $\triangleq$  100 °C or max. set flow temperature in accordance with factory-set limit for heat generator

If 230 V voltage is present at digital input 43-1, the external default set flow temperature is enabled.

## Connecting an external default output: 0 - 10 V IN

Analogue input for connecting the external default set flow temperature or the external default output

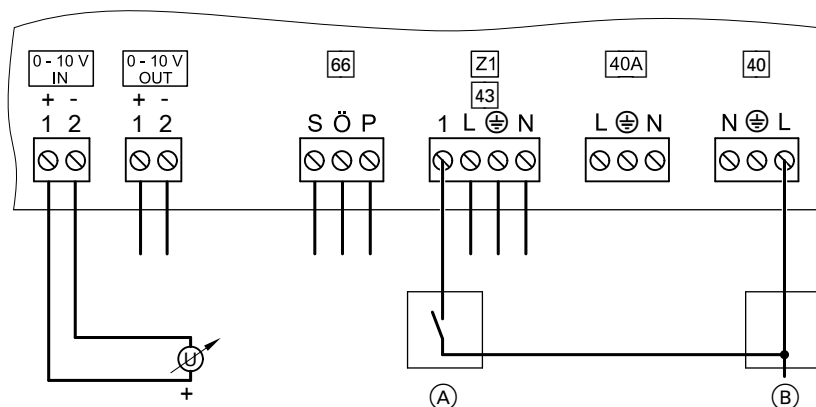


Fig. 4

- (A) Enable signal  
(B) Junction box

When making the connection, ensure correct polarity of the DC control voltage 0 - 10 V.

### Note

No galvanic separation is required between the earth conductor and the negative pole of the on-site power source.

The 0 to 10 V hook-up generates the following default output for the heat generator:

< 1 V  $\triangleq$  0 %

1 V  $\triangleq$  10 % or lower modulation limit

10 V  $\triangleq$  100 %

If 230 V voltage is present at digital input 43-1, the external default output is enabled.

### Connecting the operating mode changeover: DI1 to DI3

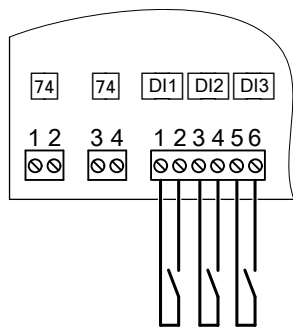


Fig. 5

- External contacts at DI1, DI2 and DI3 must be potential-free.
- When making the connection, adhere to the requirements of protection class II. That is 5.0 mm air and creep paths and 2.0 mm insulation thickness against 'live' components.

### Weather-compensated operation

As soon as the contact closes, the following demand becomes active:

- Demand for all installed heating circuits simultaneously, with the respective programmed set room temperature of the individual heating circuit:
  - DI1 Reduced room temperature
  - DI2 Standard room temperature
  - DI3 Comfort temperature

### Continuous operation or room temperature-dependent operation

As soon as the contact closes, the following demands become active:

- Set flow temperature demand for the system
- Demand for all installed heating circuits simultaneously, at the respective programmed temperature level of the individual heating circuit:
  - DI1 Reduced flow temperature
  - DI2 Standard flow temperature
  - DI3 Comfort flow temperature
 (Only with continuous operation)

### Connecting external demand: 43

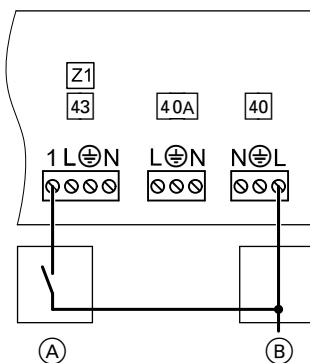


Fig. 6

- (A) Signal for external demand or external blocking
- (B) Junction box

The demand is active if 230 V voltage is present at digital input 43-1. A demand is issued to the heat generator.

The set values for the flow temperature and the speed of the primary pump are specified with parameters 528.0 and 1100.2.

## Connecting external functions (cont.)

### Connecting external blocking: 43

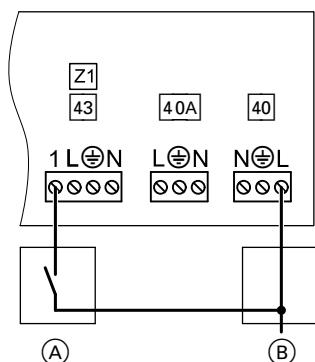


Fig. 7

- (A) Signal for external demand or external blocking  
(B) Junction box

If 230 V voltage is present at digital input 43-1, the heat generator is blocked.  
The message I.57 is shown.

## Connecting the fault message input and fault message output

### Connection without system blocking via 230 V fault message input: 43

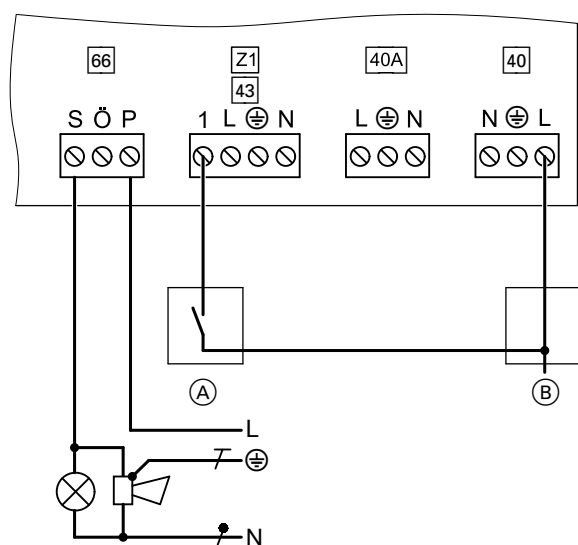


Fig. 8

- (A) Fault message facility  
(B) Junction box

- Fault message input 43-1 and conductor L of the power supply at plug 40 must be connected in phase.
- Rated current at floating fault message output 66: Max. 1 A ~.

The fault message is active if 230 V voltage is present at digital input 43-1. Floating fault message output 66 is switched over from "Ö" to "S".

## Connecting the fault message input and fault... (cont.)

### Connection with system blocking via 230 V fault message input: 43

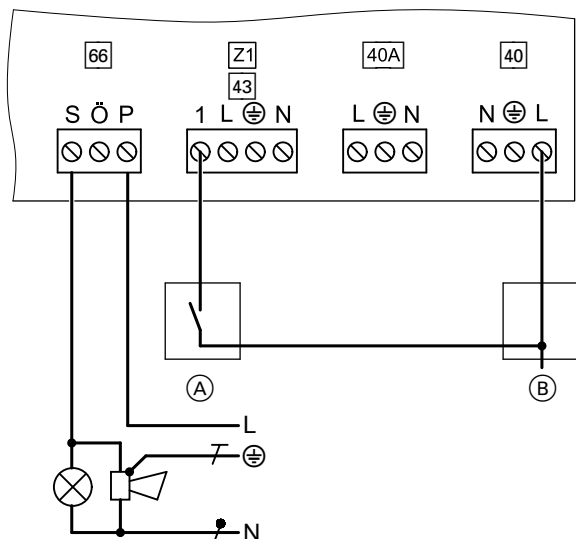


Fig. 9

- (A) Fault message facility
- (B) Junction box

- Fault message input 43-1 and conductor L of the power supply at plug 40 must be connected in phase.
- Rated current at floating fault message output 66: Max. 1 A ~.

The fault message is active if 230 V voltage is present at digital input 43-1. The heat generator is blocked. Floating fault message output 66 is switched over from "Ö" to "S". Fault message F.104 is shown.

### Connection with system blocking via 24 V fault message input: DI1

Example: Connecting a condensate removal pump

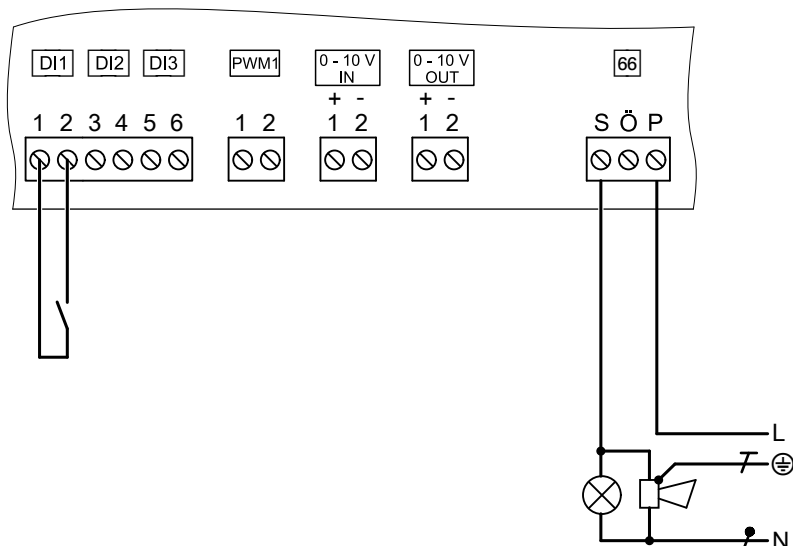


Fig. 10

## Connecting the fault message input and fault... (cont.)

- External contacts at DI1 must be potential-free. When making the connection, adhere to the requirements of protection class II. That is 5.0 mm air and creep paths and 2.0 mm insulation thickness against 'live' components.
- Rated current at fault message output **66**:  
Max. 1 A ~.

The fault messaging is active if the digital fault message input DI1 is closed. The heat generator is blocked.

Floating fault message output **66** is switched over from "Ö" to "S". Fault message F.104 is shown.

## Connecting only message facility: **66**

Example: Buzzer with illuminated signal switched in parallel

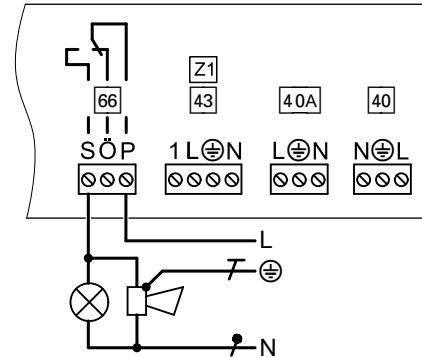


Fig. 11

## Connecting the external LPG valve: **43**

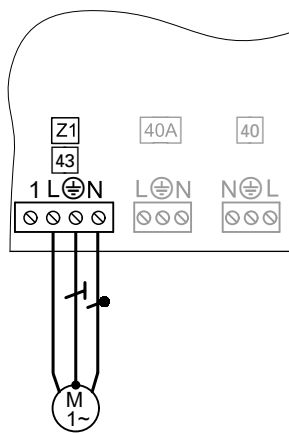


Fig. 12

Output 43-L is active as soon as the burner control unit starts the burner. The external LPG valve opens.

## Connecting the external extractor interlock: **66**

Example: Extractor hood

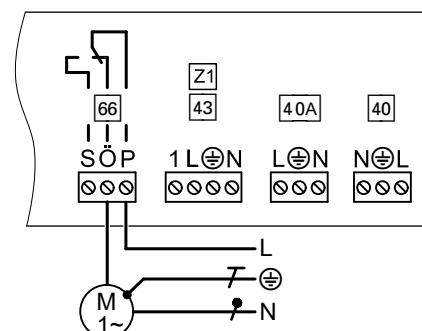


Fig. 13

## Installation sequence

### Connecting the external extractor interlock: 66 (cont.)

The floating contact switches from "Ö" to "S" as soon as the burner control unit starts the burner. The extractor is switched off.

### Connecting the PlusBus to the heat generator

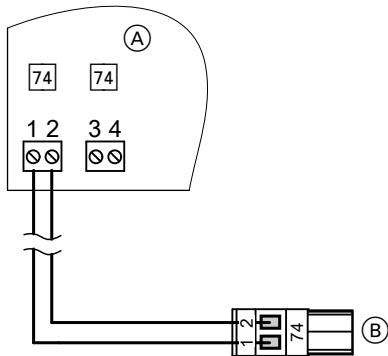


Fig. 14

- (A) Extension (electronics module)
- (B) PlusBus to heat generator

#### Note

If making the connection to the heat generator with an external plug for the bus connection, disconnect plug 74 and connect the wires directly.



Heat generator installation and service instructions

## Power supply

### Power supply at heat generator

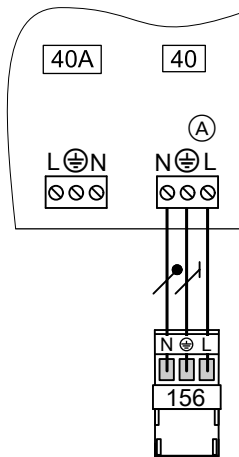


Fig. 15

- (A) Extension (electronics module)
- 40 Power supply
- 40A Power supply for further accessories
- 156 Plug for heat generator accessories power supply

Create the power supply connection.

Route the power cable to the heat generator. Connect to plug 156. Observe fuse protection at output, plug 156 of the heat generator.

If the power supply connection is made to another accessory, use plug 40A provided.



Heat generator installation and service instructions



#### Danger

Incorrect core assignment can result in serious injury and damage to the appliance. Never interchange cores "L" and "N".

### Power supply for several accessories

Several EM-EA1 function extensions (DIO electronics module) or other accessories can be connected to the heat generator.



Heat generator installation and service instructions

### Separate power supply

If the power supply for the extension is **not** made at the heat generator.

## Power supply (cont.)



## Danger

Incorrect electrical installations can lead to serious injury from electrical current and result in appliance damage.

Connect the power supply and implement all safety measures (e.g. RCD circuit) in accordance with the following regulations:

- IEC 60364-4-41
- VDE regulations
- Connection conditions of the local grid operator




## Danger

The absence of system component earthing can lead to serious injury from electric current if an electrical fault occurs.

The appliance and pipework must be connected to the equipotential bonding of the building.

## Isolators for non-earthed conductors

- The mains isolator (if installed) must simultaneously isolate all non-earthed conductors from the mains with a minimum contact separation of 3 mm.
- If **no** mains isolator is installed, all non-earthed conductors must be isolated from the power supply by the upstream circuit breaker with a minimum contact separation of 3 mm.

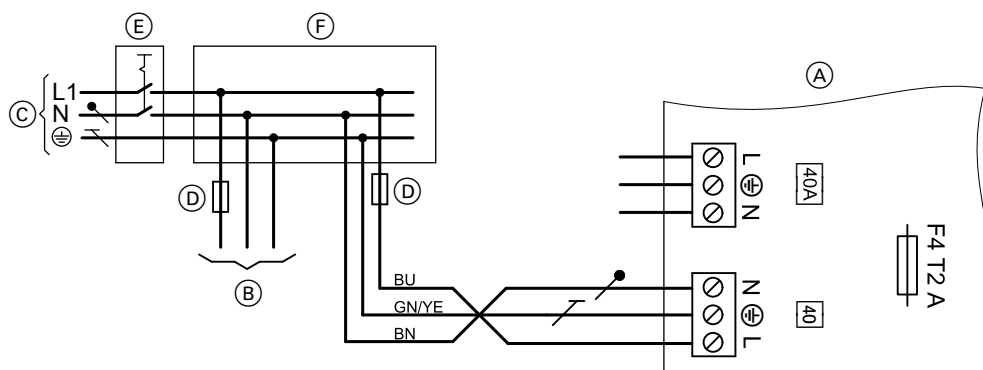

*Fig. 16*

- (A) Power supply, extension (electronics module)      (D) Fuse (max. 16 A)  
 (B) Power supply for heat generator      (E) Mains isolator, 2-pole, on site  
 (C) Power supply 1/N/PE, 230 V/50 Hz      (F) Junction box (on site)

### Power supply (cont.)

Connect the power supply in accordance with the diagram.

If the power supply to the appliance is connected with a flexible cable, ensure that the live conductors are pulled taut before the earth conductor in the event of strain relief failure. The length of the earth conductor wire will depend on the design.



#### **Danger**

Incorrect core assignment can result in serious injury and damage to the appliance.  
Never interchange cores "L" and "N".



#### **Please note**

Incorrect phase sequence can cause damage to the appliance.  
Ensure phase equality with the heat generator power supply.

Colour coding to IEC 60757

BN Brown

BU Blue

GNYE Green/yellow



## Rotary switch S1 for subscriber number addressing

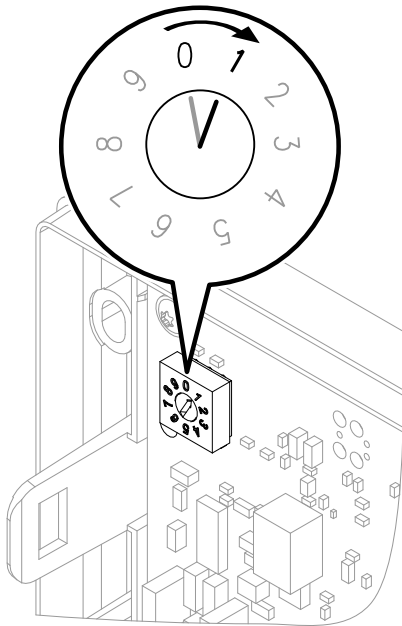


Fig. 17

Set rotary switch S1 to a consecutive numbers as shown in the example below:

- 1st EM-EA1 extension: Rotary switch to 1
- 2nd EM-EA1 extension: Rotary switch to 2
- 3rd EM-EA1 extension: Rotary switch to 3

### Note

*These settings are independent of the settings made at other extensions, such as EM-MX (mixer). If an EM-EA1 extension (DIO electronics module) has the setting 1, an EM-MX, EM-M1 or EM-P1 extension (ADIO electronics module) can also have the setting 1.*

## Configuring functions

Set the connected function during commissioning of the heat generator.



### Commissioning assistant

Heat generator installation and service instructions

#### Setting for the connected function in the commissioning assistant:

Function	Setting
<b>External functions</b> <ul style="list-style-type: none"> <li>▪ External default set flow temperature</li> <li>▪ External default output</li> <li>▪ Operating mode changeover</li> <li>▪ External demand</li> <li>▪ External blocking</li> </ul>	<b>"External set flow temperature 0 to 10 V"</b> <b>"External default output 0 to 10 V"</b> <b>"Operating mode changeover"</b> <b>"External demand"</b> <b>"External blocking"</b>
<b>Fault message input and fault message output</b> <ul style="list-style-type: none"> <li>▪ Connection without system blocking</li> <li>▪ Connection with system blocking, 230 V</li> <li>▪ Connection with system blocking, 24 V</li> <li>▪ Connecting only message facility (e.g. buzzer)</li> </ul>	<b>"Fault message input 230 V and fault message output"</b> <b>"Fault message input 230 V and block system"</b> <b>"Fault message input 24 V and block system"</b> <b>"Fault message output 230 V"</b>
<b>External LPG valve</b>	<b>"LPG valve"</b>
<b>External extractor interlock</b>	<b>"Cooker hood"</b>



DI1	Digital input 1
DI2	Digital input 2
DI3	Digital input 3
0 - 10 V IN	Input 0 to 10 V
0 - 10 V OUT	Output 0 to 10 V
F4	Fuse 2 A (slow)
PWM1	Control voltage output
S1	Rotary switch
Z1 43	230 V relay output, 230 V input
40	Power supply
40A	Power supply for additional accessories
66	Floating switching contact (changeover contact) for connecting a fault message facility or extractor hood
74	PlusBus

## Specification

Rated voltage	230 V~
Rated frequency	50 Hz
Rated current	2 A
Power consumption – electronics	2.8 W
Power consumption	12 mA
Permissible ambient temperature	
▪ Operation	0 to +40 °C
▪ Storage and transport	–20 to +60 °C
Output for rated breaking capacity <a href="#">66</a> (floating)	1 A, 230 V~
Rated breaking capacity of output Z1 <a href="#">43</a>	1 A, 230 V~

## Disposal

### Final decommissioning and disposal

Viessmann products can be recycled. Components and substances from the system are not part of ordinary household waste.

For decommissioning the system, isolate the system from the power supply and allow components to cool down where appropriate.  
All components must be disposed of correctly.

**Declaration of conformity****Declaration of Conformity**

We, Viessmann Werke GmbH & Co. KG, D-35107 Allendorf, declare as sole responsible body that the named product complies with the European directives and supplementary national requirements in terms of its design and operational characteristics.

Using the serial number, the full Declaration of Conformity can be found on the following website:

**[www.viessmann.co.uk/eu-conformity](http://www.viessmann.co.uk/eu-conformity)**





Viessmann Werke GmbH & Co. KG  
D-35107 Allendorf  
Telephone: +49 6452 70-0  
Fax: +49 6452 70-2780  
[www.viessmann.com](http://www.viessmann.com)



Viessmann Limited  
Hortonwood 30, Telford  
Shropshire, TF1 7YP, GB  
Telephone: +44 1952 675000  
Fax: +44 1952 675040  
E-mail: [info-uk@viessmann.com](mailto:info-uk@viessmann.com)

6131087 Subject to technical modifications.