

Installation and service instructions for contractors

VIESSMANN

Vitodens 200-W

Type B2HA, 45 and 60 kW

Wall mounted gas condensing boiler

Natural gas and LPG version


For applicability, see the last page




VITODENS 200-W




Safety instructions

 Please follow these safety instructions closely to prevent accidents and material losses.

Safety instructions explained

 **Danger**
This symbol warns against the risk of injury.

 **Please note**
This symbol warns against the risk of material losses and environmental pollution.

Note

Details identified by the word "Note" contain additional information.

Target group

These instructions are exclusively intended for qualified contractors.


- Work on gas installations must only be carried out by a registered gas fitter.
- Work on electrical equipment must only be carried out by a qualified electrician.
- The system must be commissioned by the system installer or a qualified person authorised by the installer.

Regulations

Observe the following when working on this system:


- Statutory regulations regarding the prevention of accidents
- Statutory regulations regarding environmental protection
- Codes of practice of the relevant trade associations
- All current safety regulations as defined by DIN, EN, DVGW, TRGI, TRF, VDE and all locally applicable standards
- Gas Safety (Installation & Use) Regulations
 - the appropriate Building Regulation either the Building regulations, the Building Regulation (Scotland), Building Regulations (Northern Ireland),
 - the Water Fittings Regulation or Water Bylaws in Scotland,
 - the current I.E.E. Wiring Regulations.

If you smell gas

 **Danger**
Escaping gas can lead to explosions which may result in serious injury.

- Do not smoke. Prevent naked flames and sparks. Do not switch lights or electrical appliances on or off.
- Close the gas shut-off valve.
- Open windows and doors.
- Evacuate any people from the danger zone.
- Notify your gas or electricity supply utility from outside the building.
- Shut off the electricity supply to the building from a safe place (outside the building).

If you smell flue gas


 **Danger**
Flue gas can lead to life-threatening poisoning.

- Shut down the heating system.
- Ventilate the installation site.
- Close all doors in the living space.

Flue systems and combustion air


Ensure that flue systems are clear and cannot be sealed, for instance due to accumulation of condensate or other causes. Ensure a sufficient supply of combustion air.

Instruct system users that subsequent modifications to the building characteristics are not permissible (e.g. cable/pipework routing, cladding or partitions).

 **Danger**
Life-threatening poisoning caused by carbon monoxide in the flue gas occurs as a result of leaking or blocked flue systems or an insufficient supply of combustion air.
Ensure the flue system is in proper working order. It must not be possible to close apertures for interconnected combustion air supply.

Extractors

Operating appliances that extract air to the outside (cooker hoods, extractors, air conditioning units, etc.) can create negative pressure. If the boiler is operated at the same time, this can lead to reverse flow of the flue gas.

 **Danger**
The simultaneous operation of the boiler and appliances that extract air to the outside can result in life threatening poisoning due to reverse flow of the flue gas.
Fit an interlock circuit or take suitable steps to ensure a sufficient supply of combustion air.

Safety instructions (cont.)**Working on the system**

- Where gas is used as the fuel, close the main gas shut-off valve and safeguard it against unintentional reopening.
- Isolate the system from the power supply (e.g. by removing the separate fuse or by means of a mains isolator) and check that it is no longer 'live'.
- Safeguard the system against reconnection.

**Please note**

- Electronic assemblies can be damaged by electrostatic discharge.
Prior to commencing any work, touch earthed objects, such as heating or water pipes to discharge static loads.

Repair work**Please note**

- Repairing components that fulfil a safety function can compromise the safe operation of your system.
Defective components must be replaced with genuine Viessmann spare parts.

Auxiliary components, spare and wearing parts**Please note**

- Spare and wearing parts that have not been tested together with the system can compromise its function. Installing non-authorized components and making non-approved modifications or conversions can compromise safety and may invalidate our warranty.
For replacements, use only original spare parts supplied or approved by Viessmann.

Index

| | | |
|--|--|----|
| 1. Product information | Intended use | 7 |
| | Product information | 7 |
| | ■ Vitodens 200-W, type B2HA | 7 |
| 2. Preparing for installation | | 8 |
| 3. Installation sequence | Fitting the boiler and making connections | 9 |
| | ■ Fitting the wall mounting bracket | 9 |
| | ■ Hooking the boiler onto the wall mounting bracket and levelling it | 10 |
| | Connections on the heating water side | 11 |
| | Flue gas connection | 11 |
| | Condensate connection | 12 |
| | Gas connection | 12 |
| | Opening the control unit casing | 12 |
| | Electrical connections | 14 |
| | ■ Circulation pump at plug 20 | 15 |
| | ■ Circulation pump at plug 21 | 15 |
| | ■ External demand via switching contact | 15 |
| | ■ External demand via 0 – 10 V input | 16 |
| | ■ External blocking via switching contact | 17 |
| | ■ Outside temperature sensor 1 | 17 |
| | ■ Power supply for accessories at plug 96 (230 V~) | 18 |
| | ■ Power supply 40 | 18 |
| | ■ Routing the connecting cables | 19 |
| | Closing the control unit casing and inserting the programming unit | 20 |
| 4. Commissioning, inspection, maintenance | Steps - commissioning, inspection and maintenance | 21 |
| 5. Code 1 | Calling up coding level 1 | 45 |
| | ■ Calling up coding level 1 | 45 |
| | General/group "1" | 45 |
| | ■ Coding | 46 |
| | Boiler/group "2" | 47 |
| | ■ Coding | 47 |
| | DHW/group "3" | 48 |
| | ■ Coding | 48 |
| | Solar/group "4" | 48 |
| | Heating circuit 1, heating circuit 2, heating circuit 3/group "5" | 49 |
| | ■ Coding | 50 |
| 6. Code 2 | Calling up coding level 2 | 54 |
| | ■ Calling up coding level 2 | 54 |
| | General/group "1" | 54 |
| | ■ Coding | 55 |
| | Boiler/group "2" | 60 |
| | ■ Coding | 60 |
| | DHW/group "3" | 61 |
| | ■ Coding | 61 |
| | Solar/group "4" | 62 |
| | ■ Coding | 62 |
| | Heating circuit 1, heating circuit 2, heating circuit 3/group "5" | 64 |
| | ■ Coding | 65 |
| 7. Diagnosis and service scans | Service level | 70 |
| | Diagnosis | 70 |
| | ■ Operating data | 70 |
| | ■ Brief scan | 71 |

Index

| | | |
|--|---|-----|
| | Checking outputs (relay test) | 74 |
| | ■ Weather-compensated control unit | 74 |
| | ■ Constant temperature control unit | 74 |
| 8. Troubleshooting | Fault display | 76 |
| | ■ Weather-compensated control unit | 76 |
| | ■ Constant temperature control unit | 76 |
| | Fault codes | 77 |
| | Repair | 86 |
| | ■ Checking the outside temperature sensor (weather-compensated control unit) | 86 |
| | ■ Checking the boiler water temperature sensors, cylinder temperature sensor or flow temperature sensor for the low loss header | 87 |
| | ■ Checking the flue gas temperature sensor | 88 |
| | ■ Checking the fuse | 89 |
| | ■ Extension kit, mixer | 89 |
| | ■ Check Vitotronic 200-H (accessory) | 90 |
| 9. Function description | Constant temperature control unit | 91 |
| | ■ Heating mode | 91 |
| | ■ DHW heating | 91 |
| | Weather-compensated control unit | 91 |
| | ■ Heating mode | 91 |
| | ■ DHW heating | 92 |
| | ■ Boosting DHW heating | 92 |
| | Internal extensions (accessories) | 92 |
| | ■ Internal extension H1 | 92 |
| | ■ Internal extension H2 | 93 |
| | External extensions (accessories) | 94 |
| | ■ Extension AM1 | 94 |
| | ■ Extension EA1 | 95 |
| | Control functions | 96 |
| | ■ External heating program changeover | 96 |
| | ■ External blocking | 97 |
| | ■ External demand | 97 |
| | ■ Venting program | 98 |
| | ■ Screed drying | 98 |
| | ■ Raising the reduced room temperature | 100 |
| | ■ Reducing the heat-up time | 100 |
| | Assigning heating circuits to the remote control | 101 |
| | Electronic combustion control unit | 102 |
| 10. Designs | Connection and wiring diagram – Internal connections | 103 |
| | Connection and wiring diagram – External connections | 104 |
| 11. Parts lists | Ordering parts | 105 |
| | Overview of the assemblies | 105 |
| | Casing assembly | 106 |
| | Heat cell assembly | 106 |
| | Burner assembly | 107 |
| | Hydraulic assembly | 108 |
| | Control unit assembly | 109 |
| | Miscellaneous assembly | 110 |
| 12. Commissioning/service reports | | 112 |
| 13. Specification | | 113 |
| 14. Certificates | Declaration of conformity | 114 |
| | ■ Declaration of Conformity for the Vitodens 200-W | 114 |

Index

Index (cont.)

| | | |
|--------------------------|--|-----|
| | Manufacturer's certificate according to the 1st BImSchV [Germany] | 114 |
| 15. Keyword index | | 115 |

Intended use

The appliance is only intended to be installed and operated in sealed unvented heating systems that comply with EN 12828, with due attention paid to the associated installation, service and operating instructions. It is only designed for the heating of water that is of potable water quality.

Intended usage presupposes that a fixed installation in conjunction with permissible, system-specific components has been carried out.

Commercial or industrial usage for a purpose other than heating the building or DHW does not comply with regulations.

Any usage beyond this must be approved by the manufacturer for the individual case.

Incorrect usage or operation of the appliance (e.g. the appliance being opened by the system user) is prohibited and results in an exclusion of liability. Incorrect usage also occurs if the components in the heating system are modified from their intended function (e.g. if the flue gas and ventilation air paths are sealed).

Product information

Vitodens 200-W, type B2HA

Preset for operation with natural gas E and natural gas LL.

For conversion to LPG P (without conversion kit), see the service instructions.

In principle the **Vitodens 200-W** may only be delivered to countries listed on the type plate. For deliveries to alternative countries, an approved contractor must arrange individual approval on his own initiative and in accordance with the law of the country in question.

Multi-boiler system

For the installation of a multi boiler system observe the installation instructions for the multi boiler system accessories.

Preparing for installation

- ! Please note**
- To prevent equipment damage, connect all pipework free of load and torque stress.

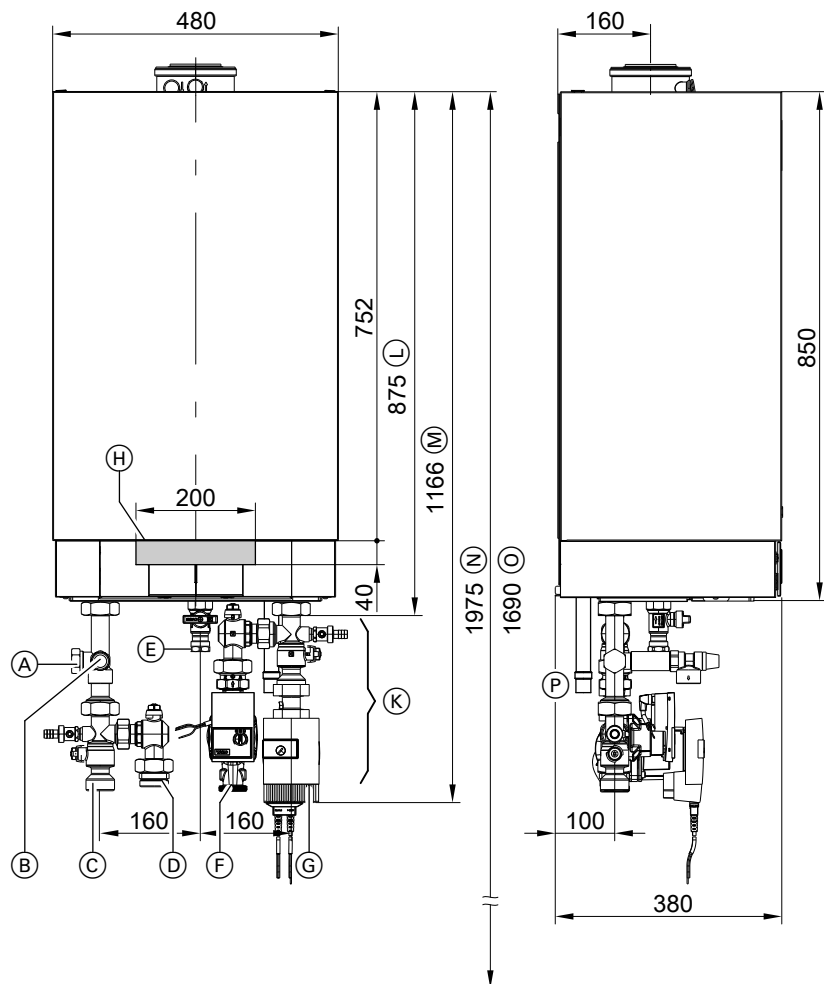


Fig. 1

- | | |
|-------------------------|--|
| (A) Expansion vessel G1 | (H) Cable entry area at the back |
| (B) Safety valve | (K) Accessories (connection sets) |
| (C) Heating flow G1½ | (L) Without connection sets (accessories) |
| (D) Cylinder flow G1½ | (M) With connection sets (accessories) |
| (E) Gas connection R ¾ | (N) Recommended dimension (single boiler system) |
| (F) Cylinder return G1½ | (O) Recommended dimension (multi boiler system) |
| (G) Heating return G1½ | (P) Condensate drain |

Note

This boiler (IP rating IP X4 D) is approved for installation in wet rooms inside safety zone 1 in accordance with DIN VDE 0100, providing the occurrence of hosed water can be ruled out. Observe the requirements of DIN VDE 0100 [or local regulations].

1. Prepare the water connections. Thoroughly flush the heating system.
2. Prepare the gas connection according to TRGI or TRF [or local regulations].

3. Prepare the electrical connections.
 - Power cable: NYM-J 3 x 1.5 mm², max. fuse 16 A, 230 V~.
 - Accessory cables: NYM with the required number of conductors for the external connections.
 - Allow all cables in area "(H)" to protrude 1200 mm from the wall.

Fitting the boiler and making connections

Fitting the wall mounting bracket

Note

The enclosed screws and rawl plugs are only suitable for concrete. For other construction materials, use fixing materials that are suitable for 100 kg loads.

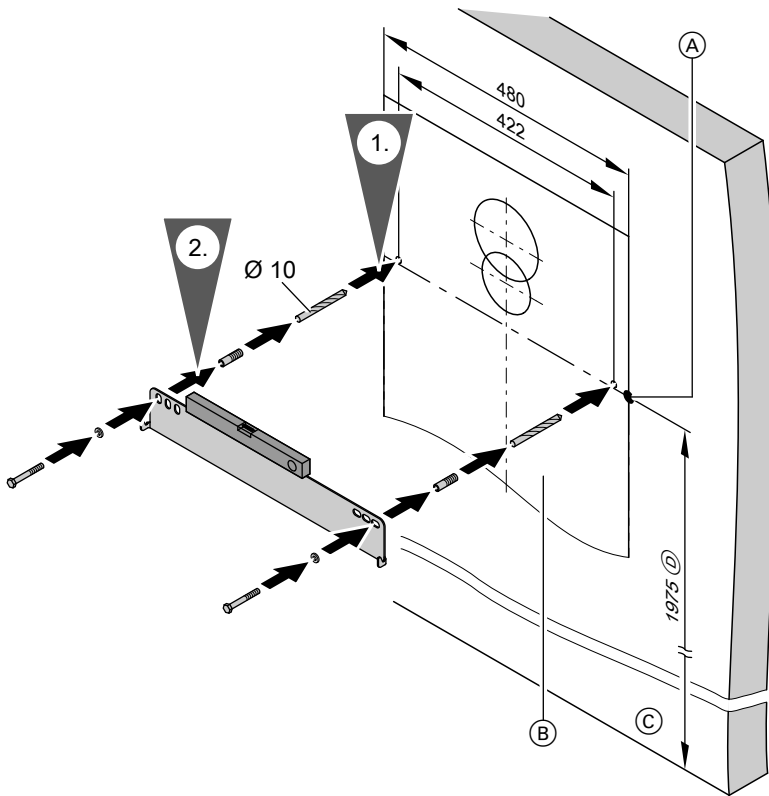


Fig. 2

- Ⓐ Reference point: boiler top edge
- Ⓑ Installation template (included with the boiler)
- Ⓒ Top edge finished floor
- Ⓓ Recommendation

Hooking the boiler onto the wall mounting bracket and levelling it

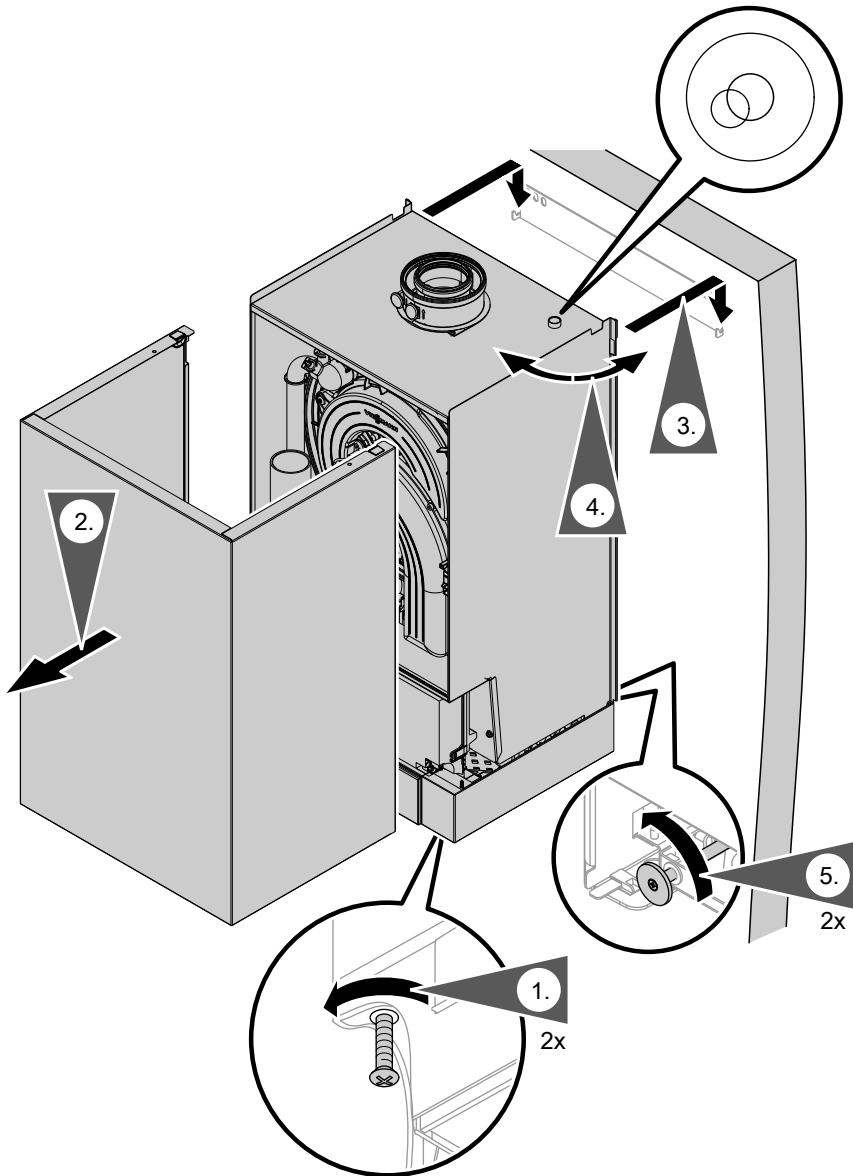


Fig. 3

Note on step 4

Place the supplied circular level on the boiler and align boiler vertically using the adjusting screws.

Connections on the heating water side

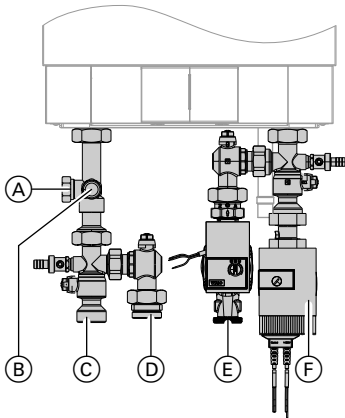


Fig. 4

- (A) Expansion vessel
- (B) Safety valve
- (C) Heating flow
- (D) Cylinder flow
- (E) Cylinder return
- (F) Heating return

Connect the boiler to the on-site pipework.

Note

Connection layout shown with the connection sets available as accessories.
Provide the required connections when using on-site fittings.

Flue gas connection

Note

The labels "System certificate" and "Skoberne GmbH flue system" enclosed with the technical documentation may only be used in conjunction with the Viessmann flue system made by Skoberne.

Do not carry out **commissioning** until the following conditions are met:

- Free passage through the flue gas pipes.
- Flue system with positive pressure is gas-tight.
- Apertures for ensuring sufficient combustion air supply are open and cannot be closed off.
- Applicable regulations on installing and commissioning flue systems have been followed.

Connect the balanced flue.



Flue system installation instructions



Danger

Leaking or blocked flue systems or an insufficient supply of combustion air cause life threatening poisoning due to carbon monoxide in the flue gas.
Ensure the flue system functions correctly. Apertures for combustion air supply must not be able to be closed off.

Installation sequence

Condensate connection

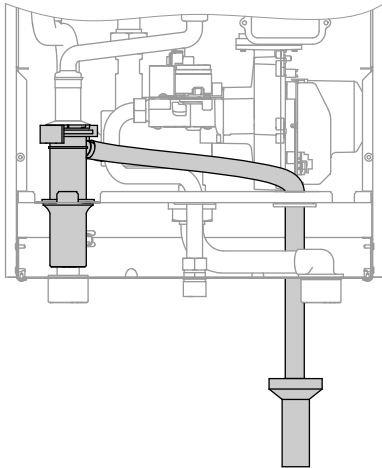


Fig. 5

1. Pull the condensate hose far enough out of the boiler that no unnecessary bends are created inside the boiler. Check the tightness of the siphon connection.
2. Connect the condensate hose with a constant fall and a pipe vent to the public sewage system or to a neutralising system.

Gas connection

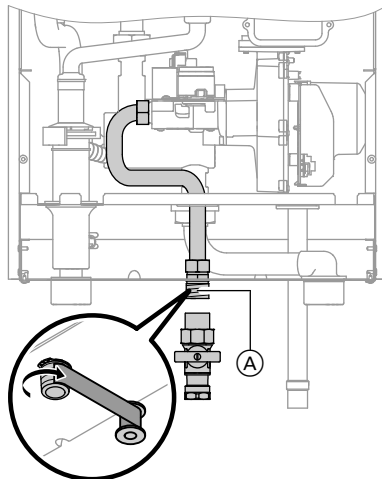


Fig. 6

Notes regarding operation with LPG

We recommend the installation of an external safety solenoid valve when installing the boiler in rooms below ground level.

1. Seal gas shut-off valve (A) into the gas supply pipe.

2. Carry out a tightness test.

Note

Only use suitable and approved leak detection agents (EN 14291) and devices for the tightness test. Leak detection agents with unsuitable constituents (e.g. nitrites, sulphides) can cause material damage.

Remove residues of the leak detection agent after testing.



Please note

Excessive test pressure may damage the boiler and the gas valve.

Max. test pressure 150 mbar (15 kPa).

Where higher pressure is required for tightness tests, disconnect the boiler and the gas valves from the gas supply pipe (undo the fitting).

3. Vent the gas line.



Conversion to other gas types:
Service instructions

Opening the control unit casing



Please note

Electronic assemblies can be damaged by electrostatic discharge.

Before beginning work, touch earthed objects, such as heating or water pipes, to discharge static loads.

Opening the control unit casing (cont.)

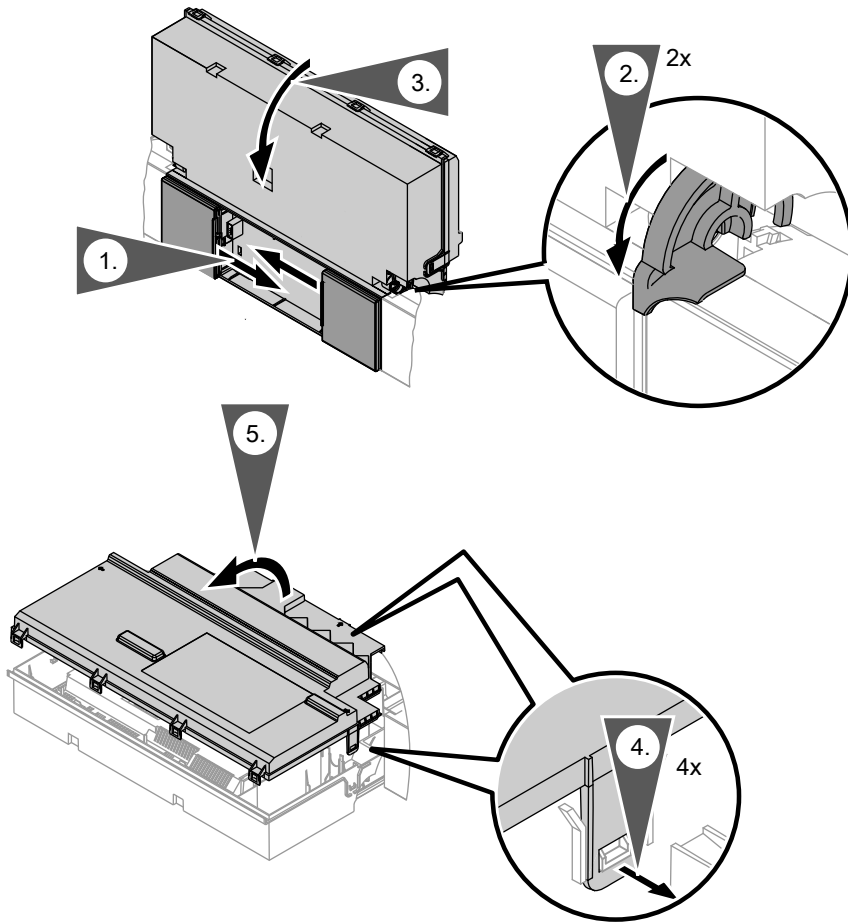


Fig. 7

Electrical connections

Installation

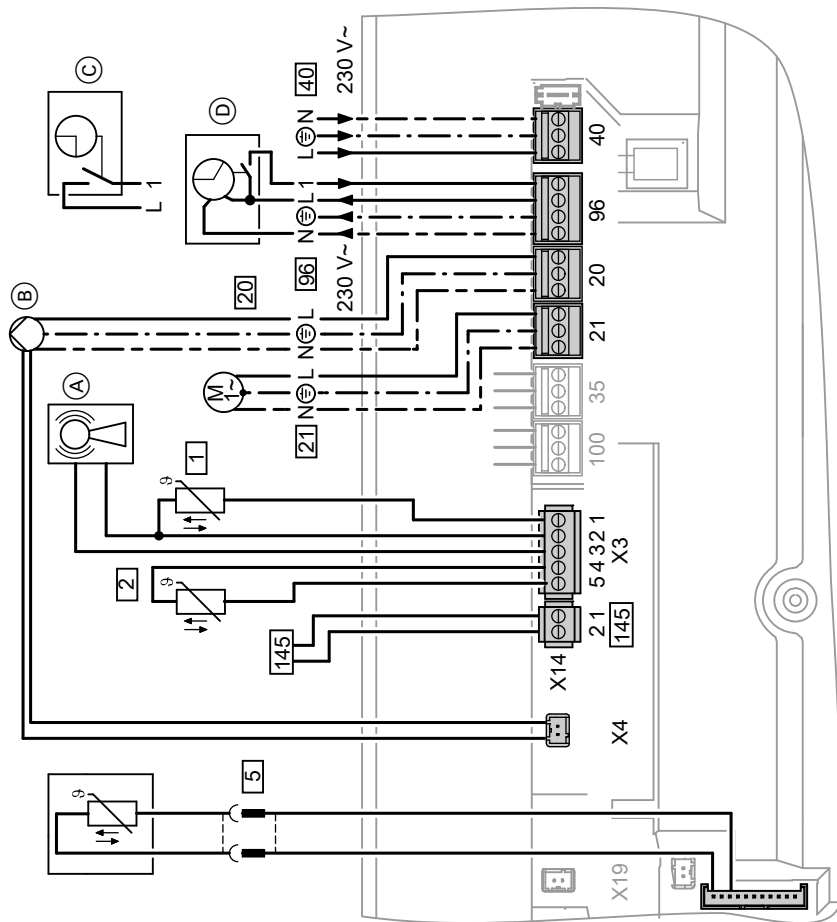


Fig. 8

- (A) Radio clock receiver
- (B) Heating circuit pump or boiler circuit pump
- (C) Vitotrol 100 UTDB (only for constant temperature control units)
When making this connection, remove jumper between "1" and "L".
- (D) Vitotrol 100 UTA (only for constant temperature control units)
or
Vitotrol 100 UTDB-RF wireless receiver
When making this connection, remove jumper between "1" and "L".

Connections at plug 230 V~

- 20 Boiler circuit pump or heating circuit pump
 - Variable speed with 0 - 10 V connection
- 21 Circulation pump, optional connection:
 - DHW circulation pump
 - External heating circuit pump
 - Circulation pump for cylinder heating
- 40 Power supply
 - Power supply for accessories
 - External demand/blocking
 - Vitotrol 100 UTA
 - Vitotrol 100 UTDB
 - Vitotrol 100 UTDB-RF

Connections at LV plug

- 1 Outside temperature sensor
- 2 Flow temperature sensor for low loss header (accessories)
- 5 Cylinder temperature sensor (part of the DHW cylinder connection set)
- 145 KM BUS subscriber (accessories)
 - Vitotrol 200A or 300A remote control
 - Vitocom 100 GSM
 - Extension kit for one heating circuit with mixer
 - Solar control module, type SM1
 - Vitosolic
 - Extension AM1
 - EA1 extension
 - Wireless base station

Electrical connections (cont.)



Information on connecting accessories

When connecting accessories observe the separate installation instructions provided with them.

Circulation pump at plug 20

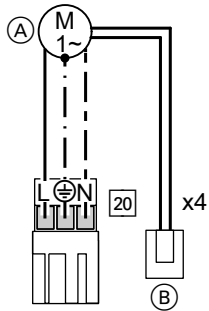


Fig. 9

- (A) Circulation pump
- (B) Plug in 0 - 10 V connection at X4

Rated current 2(1) A~
 Rated voltage 230 V~

Circulation pump at plug 21




Fig. 10

- (A) Circulation pump

Rated current 2(1) A~
 Rated voltage 230 V~

Set function of connected component in coding address "39"

| Function | Code |
|---|------|
| DHW circulation pump | 39:0 |
| Heating circuit pump for heating circuit without mixer A1 | 39:1 |
| Circulation pump for cylinder heating (delivered condition) | 39:2 |

External demand via switching contact

Connection options:

- Extension EA1 (accessory, see separate installation instructions).
- Plug 96.


Connection

- ! **Please note**
 'Live' contacts lead to short circuits or phase failure.
 The external connection **must be potential-free**.

Installation sequence


Electrical connections (cont.)

Plug 96

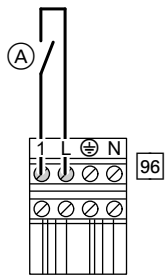

- (A) Floating contact
When making this connection, remove jumper between 1 and L.

EA1 extension

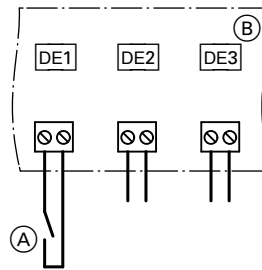

- (A) Floating contact
(B) EA1 extension

Burner operation is load-dependent if the contact is closed. The boiler water is heated to the value set in coding address "9b" in group **"General"/"1"**. The boiler water temperature is limited by this set value and the electronic maximum limit (coding address "06" in group **"Boiler"/"2"**).

Codes

Plug 96

"4b:1" in group **"General"/"1"**

EA1 extension

Set "3A" (DE1), "3b" (DE2) or "3C" (DE3) in group **"General"/"1"** to 2.

- Select effect of the function on the relevant heating circuit pump in coding address "d7" in group **"Heating circuit"/"5"**.
- Select effect of the function on the circulation pump for cylinder heating in coding address "5F" in group **"DHW"/"3"**.

External demand via 0 – 10 V input

Connection at 0 – 10 V input to **extension EA1**.
Ensure DC separation between the earth conductor and the negative pole of the on-site voltage source.

0 – 1 V \triangleq No default set boiler water temperature
1 V \triangleq Set value 10 °C
10 V \triangleq Set value 100 °C

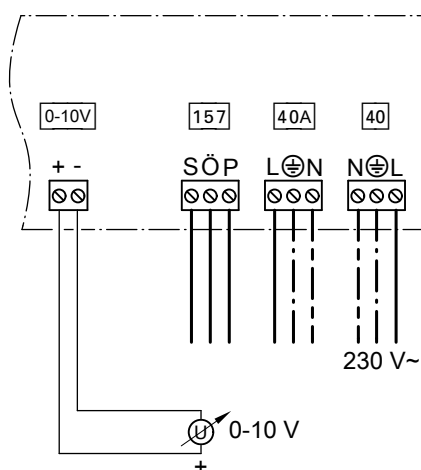


Fig. 11



Electrical connections (cont.)

External blocking via switching contact

Connection options:

- Plug 96.
- Extension EA1 (accessory, see separate installation instructions).

! Please note
 'Live' contacts lead to short circuits or phase failure.
 The external connection **must be floating**.
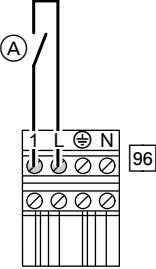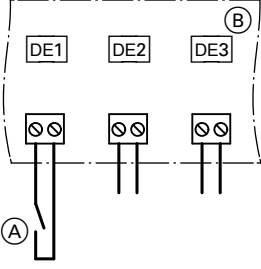
| Plug 96 | Extension EA1 |
|--|---|
|  <p>(A) Floating contact When making this connection, remove jumper between 1 and L.</p> |  <p>(A) Floating contact (B) Extension EA1</p> |

The burner is switched off if this contact is closed. The heating circuit pump and circulation pump for cylinder heating are switched according to the set code (see the following table "Codes").


! Please note
 When blocked, there is **no frost protection** for the heating system.

Codes

| Plug 96 | Extension EA1 |
|---|---|
| "4b:2" in group "General"/"1" | Set "3A" (DE1), "3b" (DE2) or "3C" (DE3) in group "General"/"1" to 3 or 4. |
| <ul style="list-style-type: none"> ■ Select effect of the function on the heating circuit pump in coding address "d6" in group "Heating circuit"/"5". ■ Select effect of the function on the circulation pump for cylinder heating in coding address "5E" in group "DHW"/"3". | |

Outside temperature sensor 1

Fitting outside temperature sensor RF (wireless accessory):

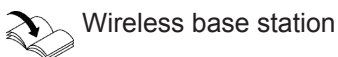

Fitting location for outside temperature sensor

- North or north-westerly wall, 2 to 2.5 m above ground level; in multi storey buildings, in the top half of the second floor
- Not above windows, doors or vents

- Not immediately below balconies or gutters
- Never render over

Outside temperature sensor connection

2-core lead, length up to 35 m with a cross-section of 1.5 mm²

Electrical connections (cont.)

Power supply for accessories at plug 96 (230 V~)

Where the boiler is installed in a wet area, the power supply connection for accessories outside the wet area must not be made at the control unit. If the boiler is installed outside wet areas, then the power supply connection for accessories can be made directly at the control unit. This connection is switched directly with the ON/OFF switch of the control unit.

If the total system current exceeds 6 A, connect one or more extensions directly to the mains supply via an ON/OFF switch (see next chapter).

Connection of accessories

Power supply and KM BUS

Power supply to all accessories via heat source control unit

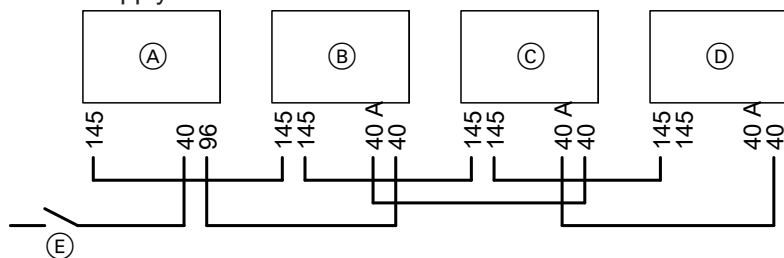


Fig. 12

Some accessories with direct power supply

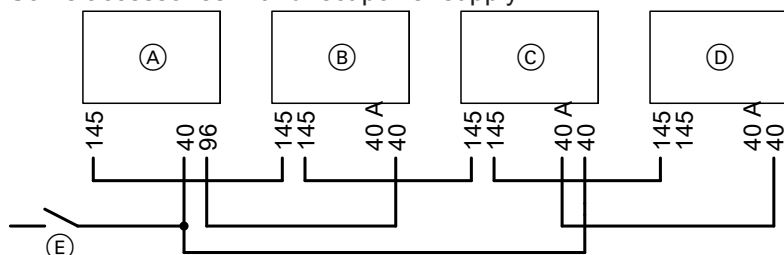


Fig. 13

- (A) Heat source control unit
- (B) Extension kit for heating circuit with mixer M2
- (C) Extension kit for heating circuit with mixer M3


- (D) Extension AM1, EA1 and/or solar control module, type SM1
- (E) ON/OFF switch

A buffer relay must be fitted if the current flowing to the connected working parts (e.g. circulation pumps) is higher than the safety level of the relevant accessory.

| Accessories | Internal fuse protection |
|--|--------------------------|
| Extension kit for heating circuit with mixer | 2 A |
| Extension AM1 | 4 A |
| Extension EA1 | 2 A |
| Solar control module, type SM1 | 2 A |

Power supply 40

Danger
 Incorrect core allocation can result in serious injury and damage to the appliance. Take care not to interchange wires "L1" and "N".

- Install an isolator in the power cable which simultaneously separates all non-earthed conductors from the mains with contact separation of at least 3 mm. Furthermore, we recommend installing an AC/DC-sensitive RCD (RCD class B ) for DC (fault) currents that can occur with energy efficient equipment.
- Max. fuse rating 16 A.

Electrical connections (cont.)

Routing the connecting cables



Please note

If connecting cables touch hot components they will be damaged.

When routing and securing connecting cables on site, ensure that the maximum permissible temperatures for these cables are not exceeded.

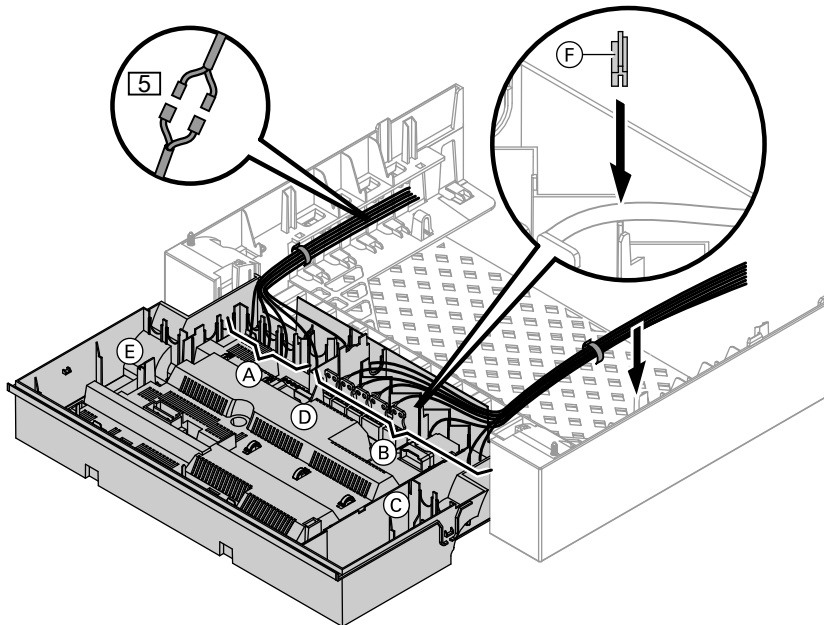


Fig. 14

- | | |
|------------------------|---|
| (A) LV connections | (E) Communication module |
| (B) 230 V connections | (F) Cable grommet for power cable |
| (C) Internal extension | (5) Plugs for connecting the cylinder temperature sensor to the cable harness |
| (D) Main PCB | |

Remove the existing cable grommet when using larger cross-sections (up to \varnothing 14 mm). Secure the cable with cable grommet (F) integrated into the casing base (black).

Closing the control unit casing and inserting the programming unit

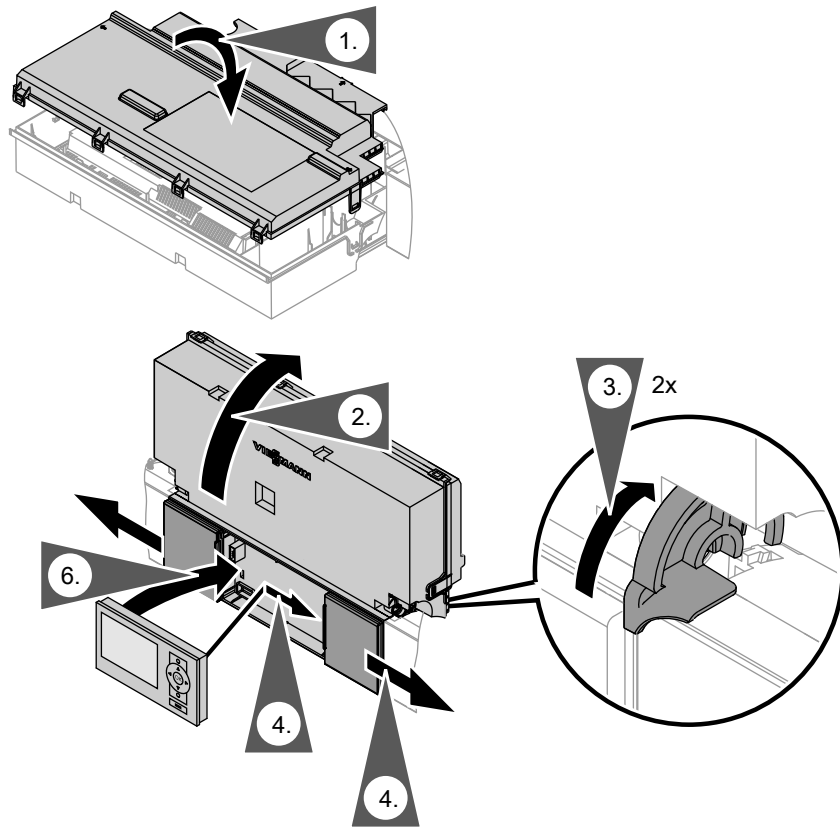



Fig. 15

Insert programming unit (packed separately) into the control unit support.

Note

The programming unit can also be inserted into a wall mounting base (accessories) near the boiler.

 Wall mounting base installation instructions



Steps - commissioning, inspection and maintenance

| | | | Page |
|---|---|---|---|
| | | | |
| • | • | • | 1. Opening the boiler..... 22 |
| • | | | 2. Filling the heating system..... 22 |
| • | | | 3. Venting the boiler by flushing..... 23 |
| • | | | 4. Selecting the language (if required) - only for weather-compensated control units... 23 |
| • | • | | 5. Setting the time and date (if required) - only for weather-compensated control units..... 24 |
| • | | | 6. Note on automatic testing of the flue gas temperature sensor..... 24 |
| • | | | 7. Venting the heating system..... 24 |
| • | | | 8. Filling the siphon with water..... 25 |
| • | • | • | 9. Checking all connections on the heating water side and DHW side for leaks |
| • | | | 10. Checking the power supply |
| • | | | 11. Designating heating circuits - only for weather-compensated control units..... 25 |
| • | • | | 12. Checking the gas type..... 25 |
| • | | | 13. Gas type conversion (only for operation with LPG)..... 26 |
| • | • | • | 14. Function sequence and possible faults..... 26 |
| • | • | • | 15. Checking the static and supply pressure..... 27 |
| • | | | 16. Max. heating output setting..... 29 |
| • | | | 17. Checking the balanced flue system for tightness (annular gap check)..... 29 |
| • | • | | 18. Removing the burner and checking the burner gasket..... 30 |
| • | • | | 19. Checking the burner gauze assembly and replacing it if required..... 31 |
| • | • | | 20. Checking the flue gas non-return device..... 32 |
| • | • | | 21. Checking and adjusting the ignition and ionisation electrodes..... 32 |
| • | • | | 22. Cleaning the heating surfaces..... 33 |
| • | • | | 23. Burner installation..... 33 |
| • | • | | 24. Checking the condensate drain and cleaning the siphon..... 33 |
| • | • | | 25. Checking the neutralising system (if installed) |
| • | • | | 26. Checking the diaphragm expansion vessel and system pressure..... 34 |
| • | • | • | 27. Checking the function of safety valves |
| • | • | • | 28. Checking firm seating of electrical connections |
| • | • | • | 29. Checking all gas equipment for tightness at operating pressure 34 |
| • | • | • | 30. Checking combustion quality..... 34 |
| • | • | • | 31. Checking the flue system for unrestricted flow and tightness |
| • | • | • | 32. Checking the external LPG safety valve (if installed) |
| • | | | 33. Matching the control unit to the heating system 35 |
| • | | | 34. Adjusting the heating curves (only for weather-compensated control units)..... 40 |
| • | | | 35. Connecting the control unit to the LON..... 42 |
| • | • | | 36. Scanning and resetting the "Service" display..... 43 |
| • | • | • | 37. Fitting the front panel..... 44 |
| • | | | 38. Instructing the system user..... 44 |





Opening the boiler

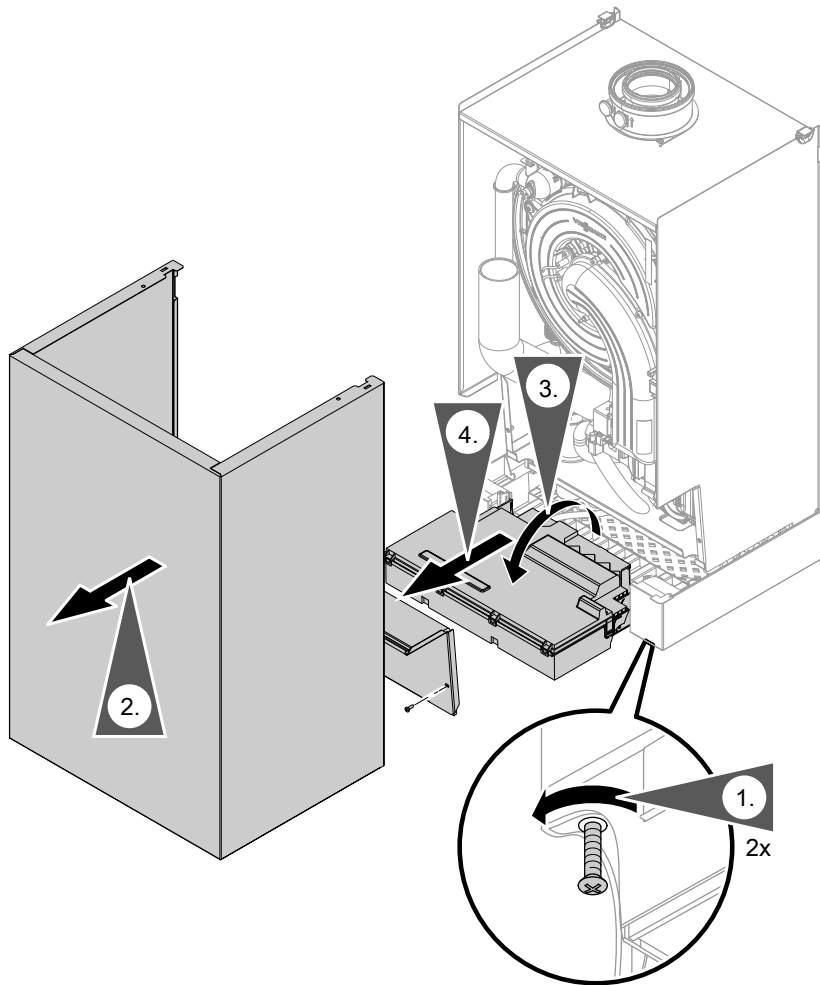


Fig. 16



Filling the heating system

Fill water



Please note

- Unsuitable fill water increases the level of deposits and corrosion and may lead to boiler damage.
 - Flush the heating system thoroughly before filling.
 - Only use fill water of potable quality.
 - An antifreeze additive suitable for heating systems can be added to the fill water. The antifreeze manufacturer must verify its suitability.
 - Fill and top-up water with a water hardness in excess of the following values must be softened, e.g. with a small softening system for heating water.



Filling the heating system (cont.)

Total permissible hardness of the fill and top-up water

| Total heating output kW | Specific system volume (Conversion rate 1 mol/m ³ = 100 ppm) | | |
|----------------------------|---|---------------------------|---------------------------|
| | < 20 l/kW | ≥ 20 l/kW to < 50 l/kW | ≥ 50 l/kW |
| ≤ 50 | ≤ 3.0 mol/m ³ | ≤ 2.0 mol/m ³ | < 0.02 mol/m ³ |
| > 50 to ≤ 200 | ≤ 2.0 mol/m ³ | ≤ 1.5 mol/m ³ | < 0.02 mol/m ³ |
| > 200 to ≤ 600 | ≤ 1.5 mol/m ³ | ≤ 0.02 mol/m ³ | < 0.02 mol/m ³ |
| > 600 | < 0.02 mol/m ³ | < 0.02 mol/m ³ | < 0.02 mol/m ³ |

Conversion rate 1 mol/m³ = 100ppm

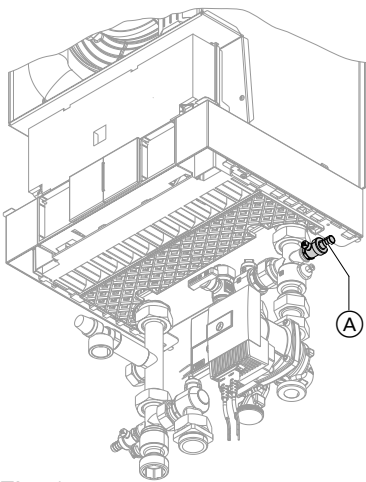


Fig. 17

1. Check the pre-charge pressure of the diaphragm expansion vessel.
2. Close the gas shut-off valve.
3. Fill the heating system at boiler drain & fill valve (A) (on the connection set, accessories or on-site). Minimum system pressure > 1.0 bar (0.1 MPa).
4. Close boiler drain & fill valve (A).



Venting the boiler by flushing

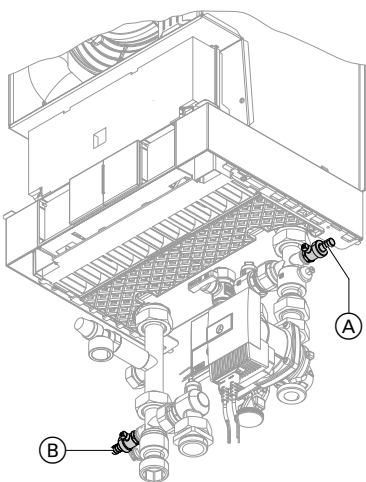


Fig. 18

1. Close the shut-off valves on the heating water side.
2. Connect the drain hose at boiler drain & fill valve (B) (on the connection set, accessories or on-site).
3. Open taps (A) and (B) and vent at mains pressure, until no sound of escaping air can be heard.
4. Close taps (A) and (B); open the shut-off valves on the heating water side.



Selecting the language (if required) - only for weather-compensated control units

At the commissioning stage, the display is in German (factory setting).

Extended menu:

- 1.
2. "Einstellungen"

3. "Sprache"
4. Select the required language with



Selecting the language (if required) - only for... (cont.)



Fig. 19



Setting the time and date (if required) - only for weather-compensated control units

The time and date need to be reset during commissioning or after a prolonged time out of use.

3. **"Time / Date"**
4. Set current time and date.

Extended menu:

- 1.
2. **"Settings"**



Note on automatic testing of the flue gas temperature sensor

Weather-compensated control unit

As soon as the time and date have been set, the control unit automatically checks the function of the flue gas temperature sensor.
The display shows: **"Flue gas temp sensor test"** and **"Active"**.

Note

If the flue gas temperature sensor is incorrectly positioned, commissioning will be cancelled and fault message A3 will be shown (see page 88).

Constant temperature control unit

Immediately after being switched on, the control unit automatically checks the function of the flue gas temperature sensor.
The display shows: **"A"**.

Note

If the flue gas temperature sensor is incorrectly positioned, commissioning will be cancelled and fault message A3 will be shown (see page 88).



Venting the heating system

1. Close the gas shut-off valve and switch the control unit ON.
2. Activate venting program (see following steps).
3. Check the system pressure.

Note

For function and sequence of the venting program, see page 98.



Venting the heating system (cont.)

Activating the venting function

Weather-compensated control unit

Service menu

1. Press **OK** and **≡** simultaneously for approx. 4 s.
2. **"Service functions"**
3. **"Venting"**
Venting function is enabled.
4. Ending venting function:
Press **OK** or ↶.

Constant temperature control unit

Service menu


1. Press **OK** and **≡** simultaneously for approx. 4 s.
2. Select **"⑤"** with ▶ and confirm with **OK**.
"ON" flashes.
3. Activate the venting function with **OK**.
"EL on" is shown constantly.
4. Ending venting function:
Press ↶.



Filling the siphon with water

Multi-boiler system:

Fill the siphon in the flue gas header with water as well.

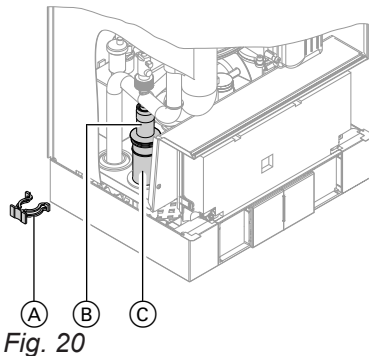

1. Remove retaining clip **Ⓐ** and pull out insert **Ⓑ**.
2. Fill siphon **Ⓒ** with water and reassemble.

Note

Never twist the supply hose during assembly. Route the drain hose without any bends and with a constant fall.



Checking all connections on the heating water side and DHW side for leaks



Checking the power supply



Designating heating circuits - only for weather-compensated control units

In the delivered condition, the heating circuits are designated "Heating circuit 1", "Heating circuit 2" and "Heating circuit 3" (if installed).
If the system user prefers, the heating circuits can be designated differently to suit the specific system.

To enter names for heating circuits:



Operating instructions



Checking the gas type

The boiler is equipped with an electronic combustion controller that adjusts the burner for optimum combustion in accordance with the prevailing gas quality.



Checking the gas type (cont.)

- For operation with natural gas no adjustment is therefore required across the entire Wobbe index range.
The boiler can be operated in the Wobbe index range 9.5 to 15.2 kWh/m³ (34.2 to 54.7 MJ/m³).
- For operation with LPG the burner must be converted (see "Gas type conversion" on page 26).

1. Determine the gas type and Wobbe index by asking your local gas supply utility or LPG supplier.
2. For operation with LPG, convert the burner (see page 26).
3. Record the gas type in the report on page 112.



Gas type conversion (only for operation with LPG)


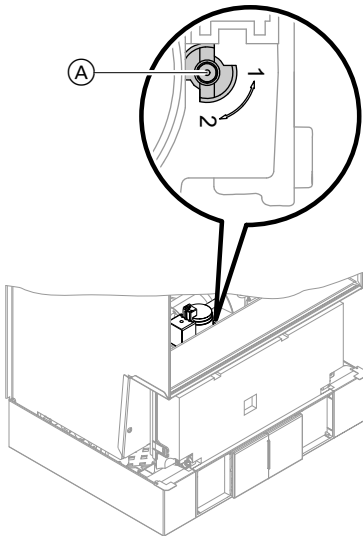


Fig. 21


1. Set adjusting screw (A) on the gas train to "2".
2. Turn on the ON/OFF switch "I".
3. Select the gas type in coding address "82":
 - Call up code 2
 - Call up **"General"** (control unit for weather-compensated operation)
or
Group **"1"** (constant temperature control unit)
 - In coding address "11", select value "9"
 - In coding address "82", select value "1" (LPG operation)
 - In code "11", select value ≠ "9".
 - End service functions.
4. Open the gas shut-off valve.
5. Affix label "G 31" (included with the technical documentation) in a clearly visible position near the gas train on the cover panel.



Function sequence and possible faults

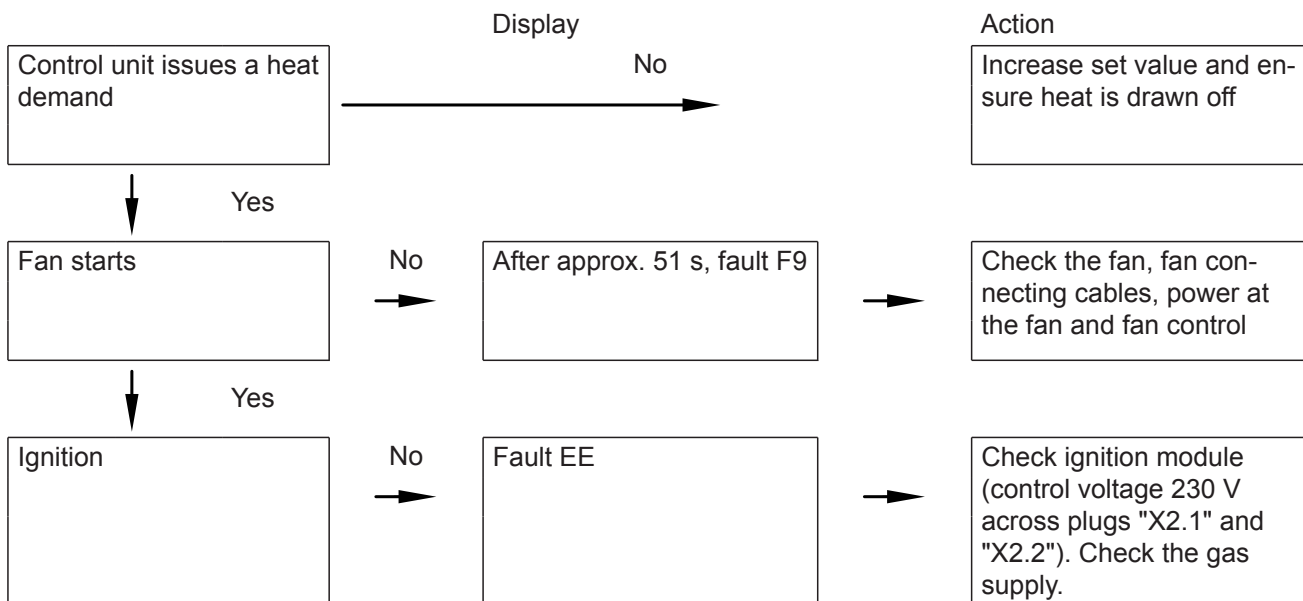


   **Function sequence and possible faults** (cont.)

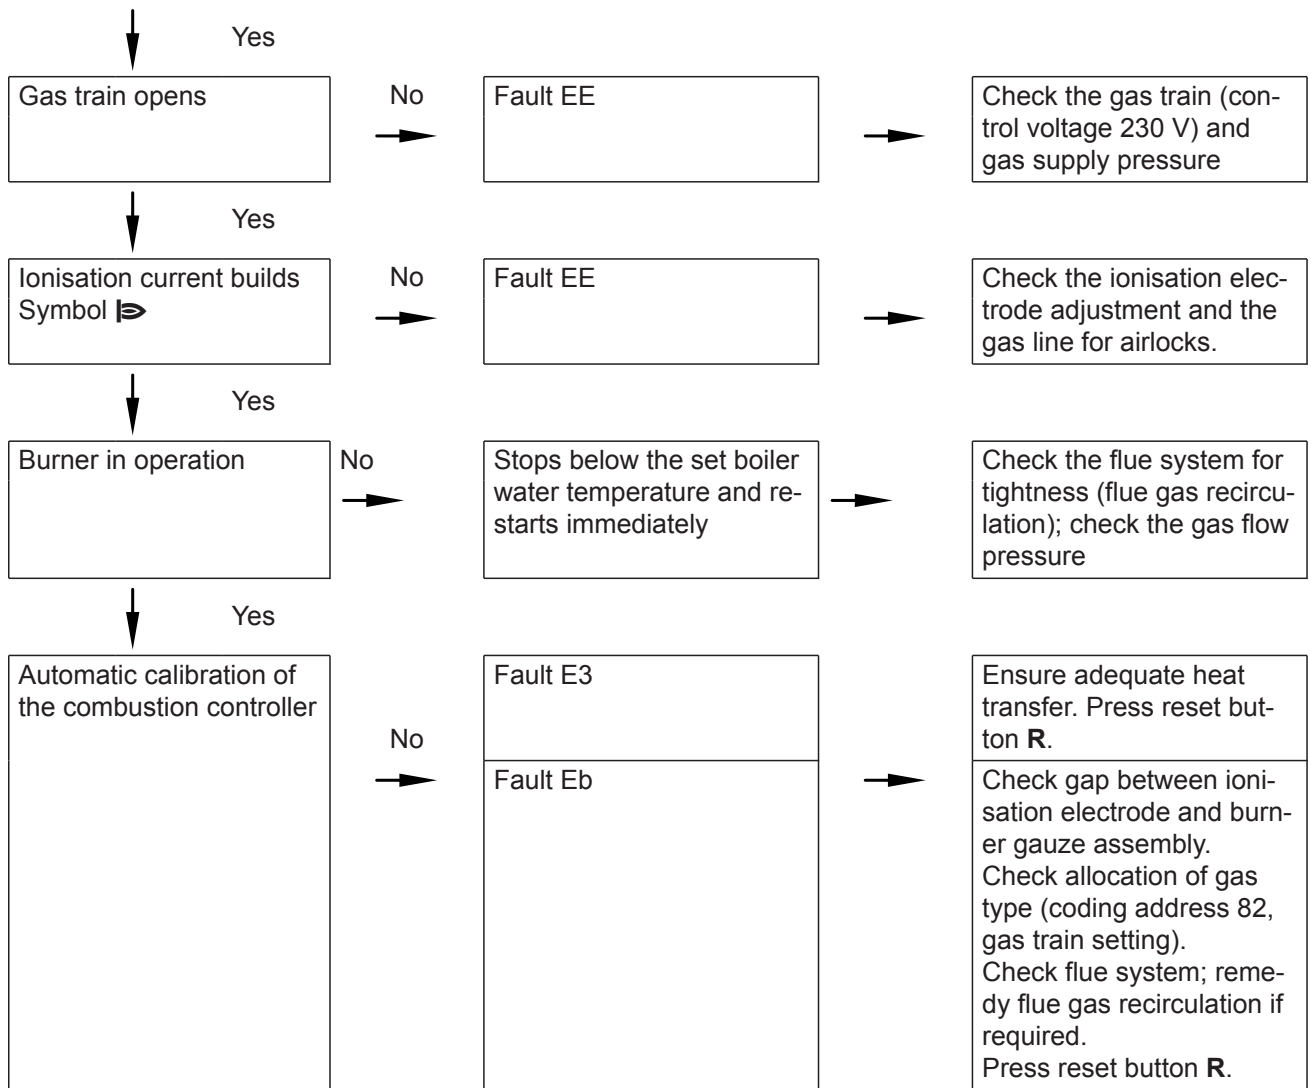

For further details regarding faults, see page 76.

   **Checking the static and supply pressure**

 **Danger**
CO build-up as a result of incorrect burner adjustment can have serious health implications. Carry out a CO test before and after work on gas appliances.

Operation with LPG
Flush the LPG tank twice during commissioning or replacement. Vent the tank and gas connection line thoroughly after flushing.

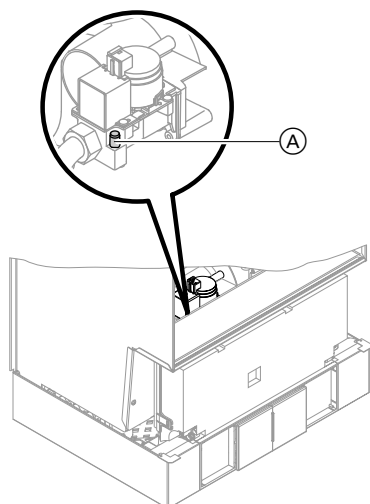


Fig. 22

1. Close the gas shut-off valve.
2. Undo screw (A) inside test nipple "PE" on the gas train, but do not remove it, and connect the pressure gauge.
3. Open the gas shut-off valve.
4. Check the static pressure and record the actual value in the report on page 112.
Set value: max. 57.5 mbar (5.75 kPa).
5. Start the boiler.


Note

During commissioning, the boiler can enter a fault state because of airlocks in the gas line. After approx. 5 s, press **R** to reset the burner.

6. Check the supply (flow) pressure. Set values:
 - Natural gas 20 mbar (2 kPa)
 - LPG 50 mbar (5 kPa)

Note

Use a suitable measuring device with a resolution of at least 0.1 mbar (0.01 kPa) to check the supply pressure.

7. Record the actual value in the service report.
Take the action shown in the following table.
8. Shut down the boiler, close the gas shut-off valve, remove the pressure gauge and tighten the screw in test connector (A).
9.  **Danger**
Gas escaping from the test nipple leads to a risk of explosion.
Check for gas tightness.

Open the gas shut-off valve, start the boiler and check for tightness at test nipple (A).

| Supply (flow) pressure for natural gas | Supply (flow) pressure for LPG | Action |
|--|--------------------------------------|--|
| Below 15 mbar (1.5 kPa) | Below 42.5 mbar (4.25 kPa) | Do not start the boiler. Notify your gas supply utility or LPG supplier. |
| 15 to 25 mbar (1.5 to 2.5 kPa) | 42.5 to 57.5 mbar (4.25 to 5.75 kPa) | Start the boiler. |
| Above 25 mbar (2.5 kPa) | Above 57.5 mbar (5.75 kPa) | Position a separate gas pressure governor upstream of the system and regulate the pre-charge pressure to 20 mbar (2 kPa) for natural gas or 50 mbar (5 kPa) for LPG. Notify your gas supply utility or LPG supplier. |



Max. heating output setting

The maximum output for **heating operation** can be limited. The limit is set via the modulation range. The max. adjustable heating output is limited upwards by the boiler coding card.

Weather-compensated control unit

Service menu

1. Press **OK** and **≡** simultaneously for approx. 4 s.
2. **"Service functions"**
3. **"Max. output"**
4. **"Change?"** Select **"Yes"**.
A value is shown on the display (e.g. **"85"**). In the delivered condition, this value represents 100 % of rated heating output.
5. Set the required value.

Constant temperature control unit

Service menu

1. Press **OK** and **≡** simultaneously for approx. 4 s.
2. Select **"③"** with **▶** and confirm with **OK**.
A value flashes on the display (e.g. **"85"**) and **"▶"** appears. In the delivered condition, this value represents 100 % of rated heating output.
3. Select required value and confirm with **OK**.



Checking the balanced flue system for tightness (annular gap check)

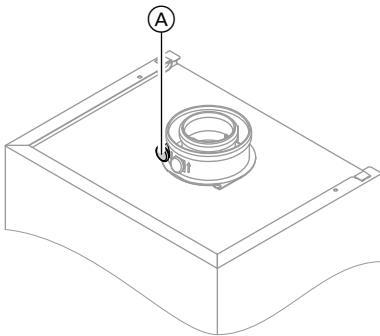


Fig. 23

Ⓐ Combustion air aperture

For balanced flue systems tested together with the wall mounted gas fired boiler, the requirement for a tightness test during commissioning by the flue gas inspector is not applicable.

We recommend that your heating engineer carries out a simple leak/tightness test during the commissioning of your system. For this, it would be sufficient to check the CO₂ or O₂ concentration in the combustion air at the annular gap of the balanced flue pipe.

The flue pipe is deemed to be gas-tight if the CO₂ concentration in the combustion air is no higher than 0.2 % or the O₂ concentration is at least 20.6 %.

If actual CO₂ values are higher or O₂ values are lower, then pressure test the flue pipe with a static pressure of 200 Pa.



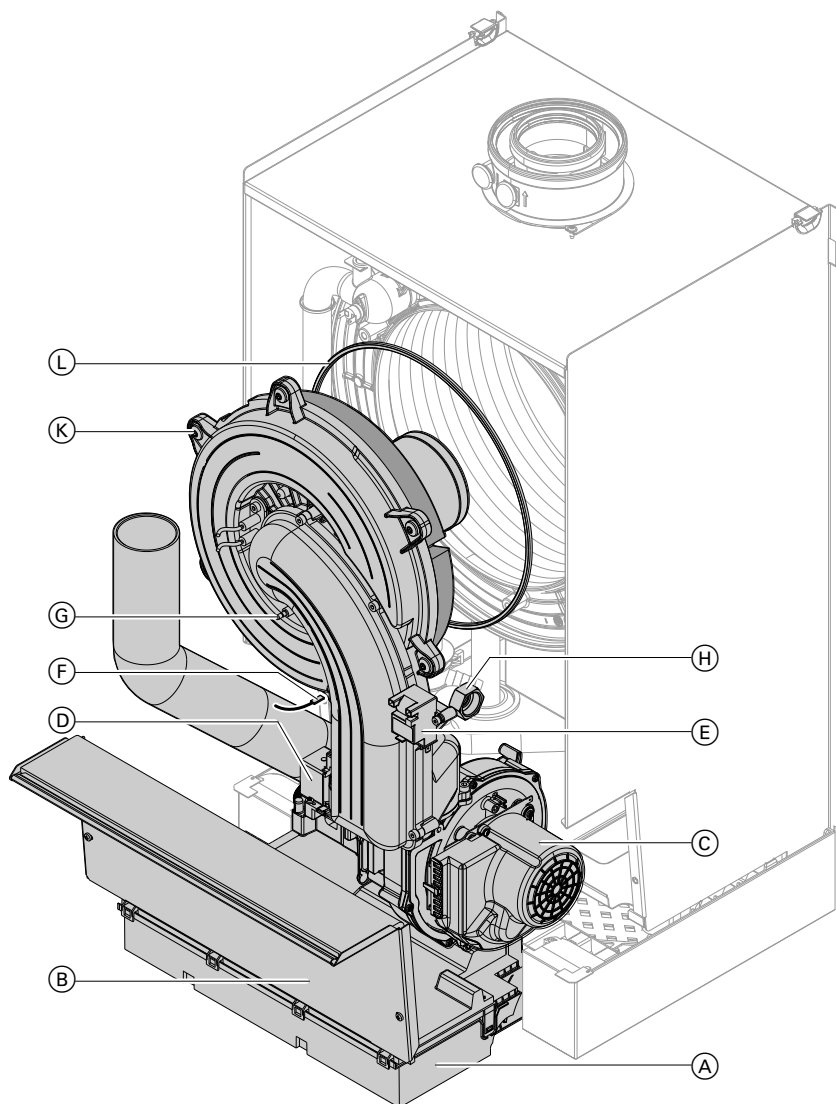


Fig. 24

1. Switch OFF the power supply and the ON/OFF switch at the control unit.
 2. Close the gas shut-off valve and safeguard against reopening.
 3. Pivot control unit (A) forwards.
 4. Remove cover panel (B).
 5. Pull cables from fan motor (C), gas train (D), ignition unit (E), earthing point (F) and ionisation electrode (G).
 6. Undo gas supply pipe fitting (H).
 7. Undo six screws (K) and remove the burner.
- !** **Please note**
To prevent damage, never touch the mesh of the burner gauze assembly.
8. Check burner gasket (L) for damage and replace if required.



Checking the burner gauze assembly and replacing it if required

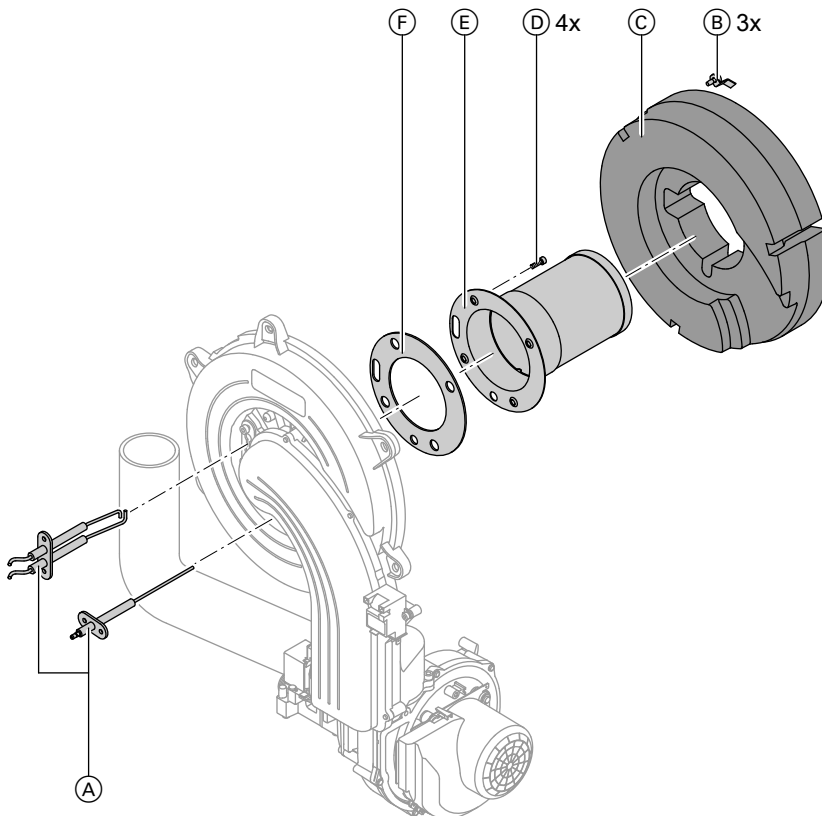


Fig. 25

1. Remove electrodes (A).
2. Undo three retaining clips (B) on thermal insulation ring (C) and then remove thermal insulation ring (C).
3. Undo four Torx screws (D) and remove burner gauze assembly (E).
4. Remove old burner gauze assembly gasket (F).
5. Insert a new burner gauze assembly with a new gasket and secure with four Torx screws.
6. Refit thermal insulation ring (C) and electrodes (A).

Note

Torque: 4.5 Nm



Checking the flue gas non-return device

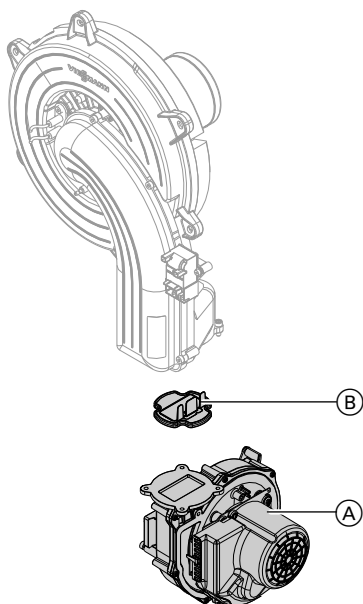


Fig. 26

1. Undo three screws and remove fan (A).
2. Remove flue gas non-return device (B).
3. Check the damper and gasket for dirt and damage. Replace if required.
4. Refit flue gas non-return device (B).
5. Refit fan (A) and secure with three screws. Torque: 3.0 Nm.



Checking and adjusting the ignition and ionisation electrodes

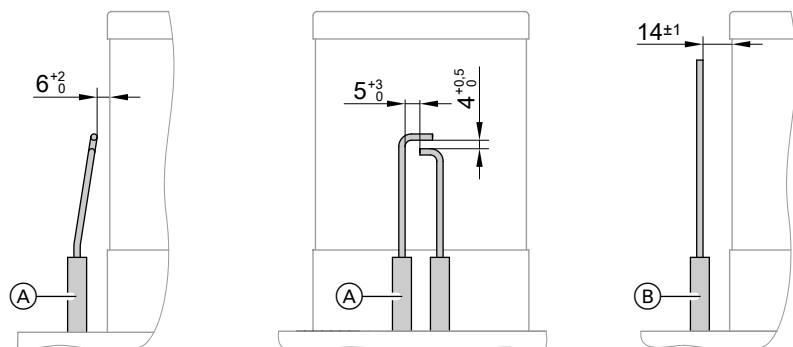


Fig. 27

- (A) Ignition electrodes
- (B) Ionisation electrode

1. Check the electrodes for wear and contamination.
2. Clean the electrodes with a small brush (not with a wire brush) or sandpaper.
3. Check the electrode gaps. If the gaps are not as specified or the electrodes are damaged, replace the electrodes and gaskets and adjust them as required. Tighten the electrode fixing screws with a torque of 2 Nm.



Please note

Wire mesh:
Do not damage.



Cleaning the heating surfaces



Please note

There should be no scratches or other damage on the heat exchanger surface that comes into contact with hot gases. This could lead to corrosion damage.

Never use brushes to clean the heating surfaces.

Brushing can cause existing deposits to get stuck in the coil gaps.

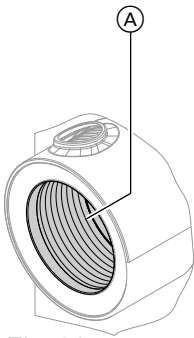


Fig. 28

Note

Discolouration of the heat exchanger surface is a normal sign of usage. It has no impact on the function and service life of the heat exchanger.

The use of chemical cleaning agents is not necessary.

1. Use a vacuum cleaner to remove deposits from heating surfaces (A) of the heat exchanger.
2. If required, rinse heating surfaces (A) with water.
3. Check condensate drain and clean siphon. See the following chapter.



Burner installation

1. Install the burner and tighten the screws diagonally with 8.5 Nm torque.
2. Fit the gas supply pipe with a new gasket. Tighten the fitting with a torque of 15 Nm.

3. Check the gas connections for tightness.



Danger

Escaping gas leads to a risk of explosion. Check all fittings for gas tightness.

4. Connect the electrical cables/leads to the corresponding components.



Checking the condensate drain and cleaning the siphon

Multi-boiler system:

Clean the siphon in the flue gas header as well.

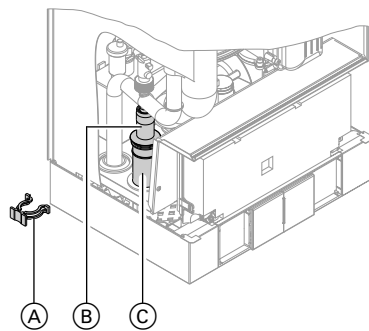


Fig. 29

1. Remove retaining clip (A) and pull out insert (B).
2. Clean siphon (C) and check that the condensate can drain freely.
3. Fill siphon (C) with water and reassemble.

Note

Never twist the supply hose during assembly. Route the drain hose without any bends and with a constant fall.



Checking the neutralising system (if installed)



Checking the diaphragm expansion vessel and system pressure

Note

Carry out this test on a cold system.

1. Drain the system or close the cap valve on the diaphragm expansion vessel and reduce the pressure until the pressure gauge indicates "0".
2. If the pre-charge pressure of the diaphragm expansion vessel is lower than the static system pressure, top up with nitrogen until the pre-charge pressure is 0.1 to 0.2 bar (10 to 20 kPa) higher.

3. Top up with water until the charge pressure of the cooled system is 0.1 to 0.2 bar (10 to 20 kPa) higher than the pre-charge pressure of the diaphragm expansion vessel.
Permiss. operating pressure: 4 bar (0.4 MPa)



Checking the function of safety valves



Checking firm seating of electrical connections



Checking all gas equipment for tightness at operating pressure



Danger

Escaping gas leads to a risk of explosion.
Check all gas equipment for tightness.

Note

Only use suitable and approved leak detection agents (EN 14291) and devices for the tightness test. Leak detection agents with unsuitable constituents (e.g. nitrites, sulphides) can cause material damage. Remove residues of the leak detection agent after testing.



Checking combustion quality

The electronic combustion controller automatically ensures optimum combustion quality. During commissioning/maintenance, only the combustion values need to be checked. For this, measure the CO content plus the CO₂ or O₂ content. For a description of the electronic combustion controller functions, see page 102.

Note

Operate the appliance with uncontaminated combustion air to prevent operating faults and damage.

CO content

- The CO content must be < 1000 ppm for all gas types.

CO₂ or O₂ content

- The CO₂ content must be within the following limits (for upper and lower heating output respectively):
 - 7.5 to 9.5 % for natural gas E and LL
 - 8.8 to 11.1 % for LPG P
- For all gas types, the O₂ content must be between 4.0 and 7.6 %.

If the actual CO₂ or O₂ values lie outside their respective ranges, check the balanced flue system for tightness, see page 29.

Note

During commissioning, the combustion controller carries out an automatic calibration. Only test the emissions approx. 30 s after the burner has started.



Checking combustion quality (cont.)

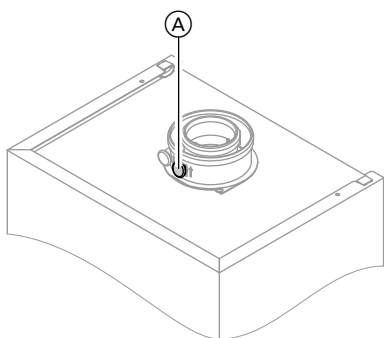


Fig. 30

1. Connect a flue gas analyser at flue gas port (A) on the boiler flue connection.
2. Open the gas shut-off valve, start the boiler and create a heat demand.
3. Set the lower heating output (see page 35).
4. Check the CO₂ content. Should the actual value deviate from the aforementioned ranges by more than 1 %, implement steps on page 34.
5. Enter actual values into the report.
6. Set the upper heating output (see page 35).
7. Check the CO₂ content. Should the actual value deviate from the aforementioned ranges by more than 1 %, implement steps on page 34.
8. After testing, press **OK**.
9. Enter actual values into the report.

Select higher/lower heating output

Weather-compensated control unit

Service menu

1. Press **OK** and simultaneously for approx. 4 s.
2. **"Actuator test"**
3. Select the lower heating output:
Select **"Base load OFF"**. Then **"Base load ON"** appears and the burner operates at its lower heating output.
4. Select the upper heating output:
Select **"Full load OFF"**. Then **"Full load ON"** appears and the burner operates at its upper heating output.
5. Ending output selection:
Press .

Constant temperature control unit

Service menu

1. Press **OK** and simultaneously for approx. 4 s.
2. Select with and confirm with **OK**.
The display shows **"I"** and **"ON"** flashes.
3. Select the lower heating output:
Press **OK**, **"ON"** will be displayed constantly.
4. Select the upper heating output:
Press .
5. Select **"2"** with ; **"ON"** flashes.
6. Press **OK**, **"ON"** will be displayed constantly.
7. Ending output selection:
Press .



Checking the flue system for unrestricted flow and tightness



Checking the external LPG safety valve (if installed)



Matching the control unit to the heating system

The control unit must be matched to the equipment level of the system. Various system components are recognised automatically by the control unit and the relevant codes are adjusted automatically.

- For the selection of an appropriate scheme, see the following diagrams.
- For individual coding steps, see page 45.



System version 1

One heating circuit without mixer A1, with/without DHW heating, with low loss header

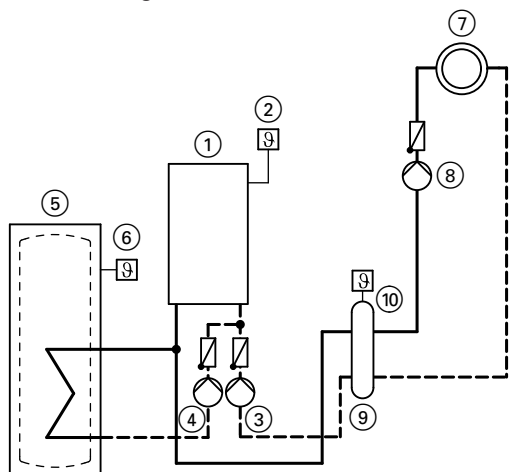


Fig. 31 ID: 4605139_1103_02

- ① Vitodens 200-W
- ② Outside temperature sensor (only for weather-compensated control units)
or
Vitotrol 100 (only for constant temperature control units)
- ③ Boiler circuit pump
- ④ Circulation pump for cylinder heating
- ⑤ DHW cylinder
- ⑥ Cylinder temperature sensor
- ⑦ Heating circuit without mixer A1 (heating circuit 1)
- ⑧ Heating circuit pump A1
- ⑨ Low loss header
- ⑩ Flow temperature sensor, low loss header

| Function/system components | Code | |
|--|--------|-------------|
| | Adjust | Group |
| Operation with LPG | 82:1 | "General"/1 |
| System with low loss header and without DHW circulation pump: Heating circuit pump A1 connection at extension AM1, terminal A1 | — | |
| System with low loss header and with DHW circulation pump: Heating circuit pump A1 connection at extension AM1, terminal A1 DHW circulation pump connection at internal extension H1 or H2 | — | |
| System with low loss header | 04:0 | "Boiler"/1 |



Matching the control unit to the heating system (cont.)

System version 2

One heating circuit with mixer M2, with/without DHW heating, with low loss header

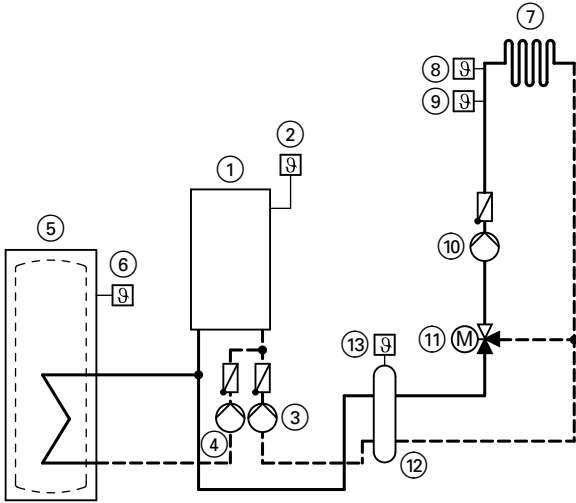


Fig. 32 ID: 4605140_1103_02

- ① Vitodens 200-W
- ② Outside temperature sensor
- ③ Boiler circuit pump
- ④ Circulation pump for cylinder heating
- ⑤ DHW cylinder
- ⑥ Cylinder temperature sensor
- ⑦ Heating circuit with mixer M2 (heating circuit 2)
- ⑧ Temperature limiter to restrict the maximum temperature of underfloor heating systems
- ⑨ Flow temperature sensor M2
- ⑩ Heating circuit pump M2
- ⑪ Extension kit for one heating circuit with mixer M2
- ⑫ Low loss header
- ⑬ Flow temperature sensor, low loss header

| Function/system components | Code | |
|---|--------|-----------|
| | Adjust | Group |
| Operation with LPG | 82:1 | "General" |
| System only with one heating circuit with mixer with extension kit for mixer (without unregulated heating circuit) | | |
| ▪ With DHW cylinder | 00:4 | "General" |
| ▪ Without DHW cylinder | 00:3 | "General" |
| System with DHW circulation pump | | |
| DHW circulation pump connection at internal extension H1 or H2 | — | |
| System with low loss header | 04:0 | "Boiler" |



System version 3

One heating circuit with mixer M2, with system separation, with/without DHW heating

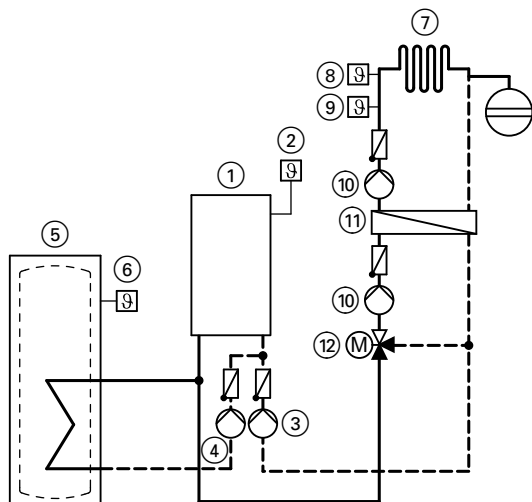


Fig. 33 ID: 4605141_1103_02

- ① Vitodens 200-W
- ② Outside temperature sensor
- ③ Boiler circuit pump
- ④ Circulation pump for cylinder heating
- ⑤ DHW cylinder
- ⑥ Cylinder temperature sensor
- ⑦ Heating circuit with mixer M2 (heating circuit 2)
- ⑧ Temperature limiter to restrict the maximum temperature of underfloor heating systems
- ⑨ Flow temperature sensor M2
- ⑩ Heating circuit pump M2
- ⑪ Heat exchanger for system separation
- ⑫ Extension kit for one heating circuit with mixer M2

| Function/system components | Code | |
|---|--------|-----------|
| | Adjust | Group |
| Operation with LPG | 82:1 | "General" |
| System only with one heating circuit with mixer with extension kit for mixer (without unregulated heating circuit) | | |
| ▪ With DHW cylinder | 00:4 | "General" |
| ▪ Without DHW cylinder | 00:3 | "General" |
| System with DHW circulation pump | | |
| DHW circulation pump connection at internal extension H1 or H2 | — | |


Matching the control unit to the heating system (cont.)

System version 4

One heating circuit without mixer, one heating circuit with mixer M2 (with extension kit), one heating circuit with mixer M3 (with extension kit) and low loss header (with/without DHW heating)

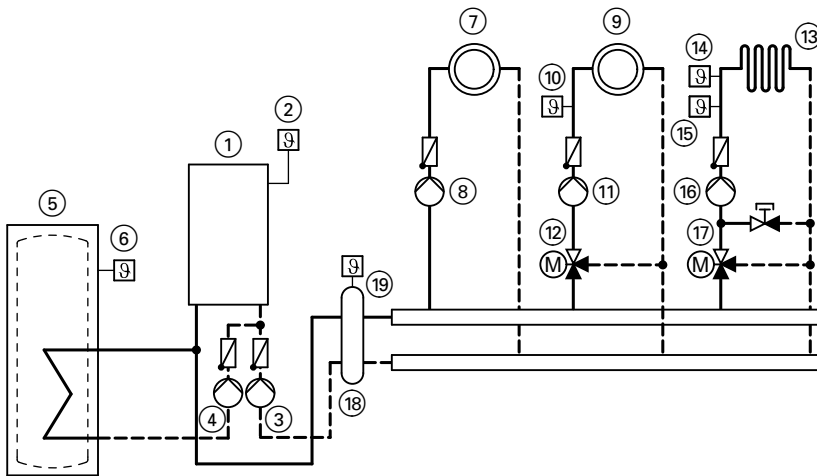


Fig. 34 ID: 4605142_1103_02

- | | |
|--|---|
| ① Vitodens 200-W | ⑪ Heating circuit pump M2 |
| ② Outside temperature sensor | ⑫ Extension kit for one heating circuit with mixer M2 |
| ③ Boiler circuit pump | ⑬ Heating circuit with mixer M3 (heating circuit 3) |
| ④ Circulation pump for cylinder heating | ⑭ Temperature limiter to restrict the maximum temperature of underfloor heating systems |
| ⑤ DHW cylinder | ⑮ Flow temperature sensor M3 |
| ⑥ Cylinder temperature sensor | ⑯ Heating circuit pump M3 |
| ⑦ Heating circuit without mixer A1 (heating circuit 1) | ⑰ Extension kit for one heating circuit with mixer M3 |
| ⑧ Heating circuit pump A1 | ⑱ Low loss header |
| ⑨ Heating circuit with mixer M2 (heating circuit 2) | ⑲ Flow temperature sensor, low loss header |
| ⑩ Flow temperature sensor M2 | |

| Function/system components | Code | |
|--|--------|-----------|
| | Adjust | Group |
| Operation with LPG | 82:1 | "General" |
| System only with two heating circuits with mixer with extension kit for mixer (without unregulated heating circuit) | | |
| ▪ With DHW cylinder | 00:8 | "General" |
| ▪ Without DHW cylinder | 00:7 | "General" |
| System without DHW circulation pump | | |
| Heating circuit pump A1 connection at internal extension H1 or H2 | — | |
| System with DHW circulation pump | | |
| Heating circuit pump A1 connection at extension AM1, terminal A1 | — | |
| DHW circulation pump connection at internal extension H1 or H2 | — | |
| System with low loss header | 04:0 | "Boiler" |



System version 5

Multi boiler system with several heating circuits with mixer and low loss header (with/without DHW heating)

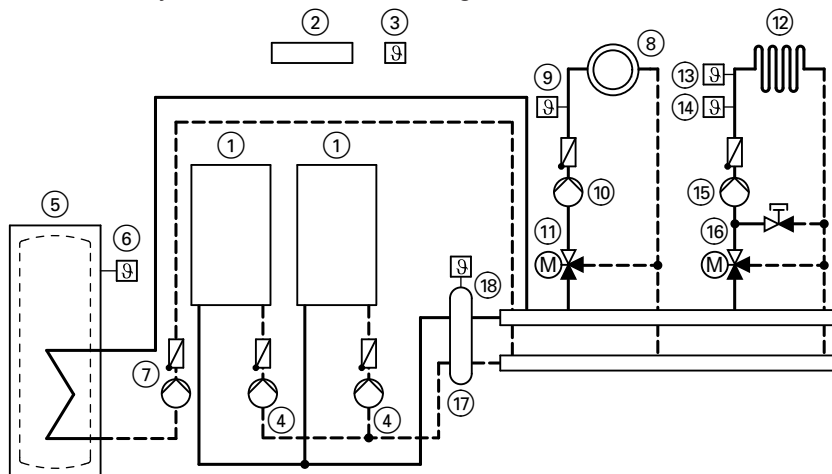


Fig. 35 ID: 4605016_1103_04

- ① Vitodens 200-W
- ② Vitotronic 300-K
- ③ Outside temperature sensor
- ④ Boiler circuit pump
- ⑤ DHW cylinder
- ⑥ Cylinder temperature sensor
- ⑦ Circulation pump for cylinder heating
- ⑧ Heating circuit with mixer M2 (heating circuit 2)
- ⑨ Flow temperature sensor M2
- ⑩ Heating circuit pump M2
- ⑪ Extension kit for one heating circuit with mixer M2
- ⑫ Heating circuit with mixer M3 (heating circuit 3)
- ⑬ Temperature limiter to restrict the maximum temperature of underfloor heating systems
- ⑭ Flow temperature sensor M3
- ⑮ Heating circuit pump M3
- ⑯ Extension kit for one heating circuit with mixer M3
- ⑰ Low loss header
- ⑱ Flow temperature sensor, low loss header

| Required codes | Address |
|---|---------|
| Multi boiler system with Vitotronic 300-K | 01:2 |

Note

For codes for multi boiler systems, see Vitotronic 300-K installation and service instructions.



Adjusting the heating curves (only for weather-compensated control units)

The heating curves illustrate the relationship between the outside temperature and the boiler water or flow temperature.

To put it simply, the lower the outside temperature, the higher the boiler water or flow temperature.

The boiler water or flow temperature in turn affects the room temperature.

Settings in the delivered condition:

- Slope = 1.4
- Level = 0

Note

If the heating system includes heating circuits with mixers, then the flow temperature of the heating circuit without mixer is higher by a selected differential (8 K in the delivered condition) than the flow temperature of the heating circuits with mixers.

The differential temperature is adjustable via coding address "9F" in the "General" group.



Adjusting the heating curves (only for... (cont.))

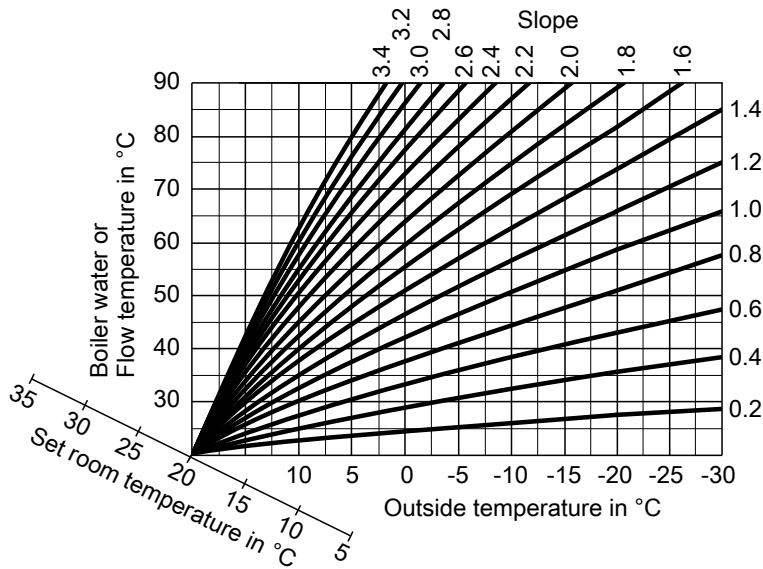


Fig. 36

Slope setting ranges:

- Underfloor heating systems: 0.2 to 0.8
- Low temperature heating systems: 0.8 to 1.6

Selecting the set room temperature

Individually adjustable for each heating circuit. The heating curve is offset along the axis of the set room temperature. With the heating circuit pump logic function enabled, the curve modifies the starting and stopping characteristics of the heating circuit pump.

Standard set room temperature

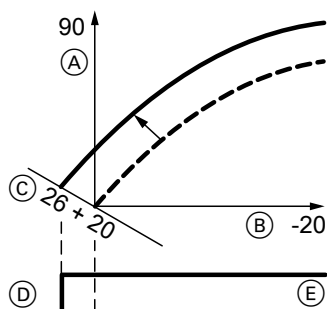


Fig. 37 Example 1: Adjustment of the standard set room temperature from 20 to 26 °C

- (A) Boiler water temperature or flow temperature in °C
- (B) Outside temperature in °C
- (C) Set room temperature in °C
- (D) Heating circuit pump "OFF"
- (E) Heating circuit pump "ON"

Changing the standard set room temperature

Operating instructions

Reduced set room temperature

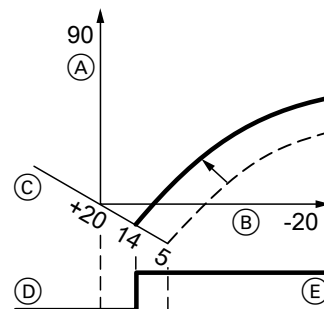


Fig. 38 Example 2: Adjustment of the reduced set room temperature from 5 °C to 14 °C

- (A) Boiler water temperature or flow temperature in °C
- (B) Outside temperature in °C
- (C) Set room temperature in °C
- (D) Heating circuit pump "OFF"
- (E) Heating circuit pump "ON"

Changing the reduced set room temperature

Operating instructions

Changing the slope and level

Individually adjustable for each heating circuit.



Adjusting the heating curves (only for... (cont.))

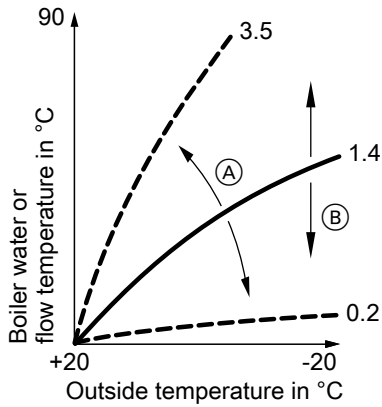


Fig. 39

- (A) Changing the slope
- (B) Changing the level (vertical parallel offset of the heating curve)

Extended menu:

- 1.
2. "Heating"
3. Select heating circuit.
4. "Heating curve"
5. "Slope" or "Level"
6. Select heating curve according to the system requirements.



Connecting the control unit to the LON

The LON communication module (accessories) must be plugged in.

- Installation instructions
- LON communication module

Note

In the same LON system, the same subscriber number must **not** be allocated twice.

Only one Vitotronic may be programmed as fault manager.

Note

The data transfer via LON can take several minutes.

Single boiler system with Vitotronic 200-H and Vitocom 200 (example)

Set the LON subscriber numbers and further functions via code 2 (see the following table).

All coding addresses in the table are listed in the "General" group.

| Boiler control unit | Vitotronic 200-H | Vitotronic 200-H | Vitocom |
|--|---|---|---------------------------|
| | | | |
| Subscriber no. 1, Code "77:1". | Subscriber no. 10, Code "77:10". | Subscriber no. 11, Set code "77:11". | Subscriber no. 99. |
| Control unit is fault manager, Code "79:1". | Control unit is not fault manager, Code "79:0". | Control unit is not fault manager, Code "79:0". | Device is fault manager. |
| Control unit transmits the time, Code "7b:1". | Control unit receives the time, Set code "81:3". | Control unit receives the time, Set code "81:3". | Device receives the time. |
| Control unit transmits outside temperature, Set code "97:2". | Control unit receives outside temperature, Set code "97:1". | Control unit receives outside temperature, Set code "97:1". | — |



Connecting the control unit to the LON (cont.)

| Boiler control unit | Vitotronic 200-H | Vitotronic 200-H | Vitocom |
|--|--|--|---------|
| Viessmann system number, Code "98:1". | Viessmann system number, Code "98:1". | Viessmann system number, Code "98:1". | — |
| LON subscriber fault monitoring, Code "9C:20". | LON subscriber fault monitoring, Code "9C:20". | LON subscriber fault monitoring, Code "9C:20". | — |

Carrying out a LON subscriber check

The subscriber check is used to test communication with the system devices connected to the fault manager.

Preconditions:

- The control unit must be programmed as **fault manager** (code "79:1" in the **"General"** group).
- The LON subscriber number must be programmed in all control units.
- The LON subscriber list in the fault manager must be up to date.

Service menu:

1. Press **OK** and simultaneously for approx. 4 s.
2. **"Service functions"**

3. "Subscriber check"

4. Select subscriber (e.g. subscriber 10).
5. Start the subscriber check with **"OK"**.

- Successfully tested subscribers are designated with **"OK"**.
- Unsuccessfully tested subscribers are designated with **"Not OK"**.

Note

To carry out a new subscriber check, create a new subscriber list with **"Delete list?"** (subscriber list is updated).

Note

During the subscriber check, the display for the relevant subscriber shows the subscriber no. and **"Wink"** for approx. 1 min.



Scanning and resetting the "Service" display

The red fault indicator flashes when the limits set in coding addresses "21" and "23" have been reached. (Coding address in group **"Boiler"** (weather-compensated control unit) or group 2 (constant temperature control unit).)

Weather-compensated control unit

Constant temperature control unit

Display

"Service" and

The specified hours run or the specified interval with calendar symbol (subject to setting) and

Acknowledging a service

Press **OK**.
Service the appliance.

Press **OK**.
Service the appliance.

Note

An acknowledged service message that was not reset appears again the following Monday.

Note

An acknowledged service message that was not reset appears again after 7 days.

After the service has been carried out: Reset the codes

- Service menu:
1. Press **OK** and simultaneously for approx. 4 s.
 2. **"Service functions"**
 3. **"Service reset"**

Reset code "24:1" in group 2 to "24:0".

Note

The selected service parameters for hours run and interval restart at **"0"**.

Note

The selected service parameters for hours run and interval restart at **"0"**.



Fitting the front panel

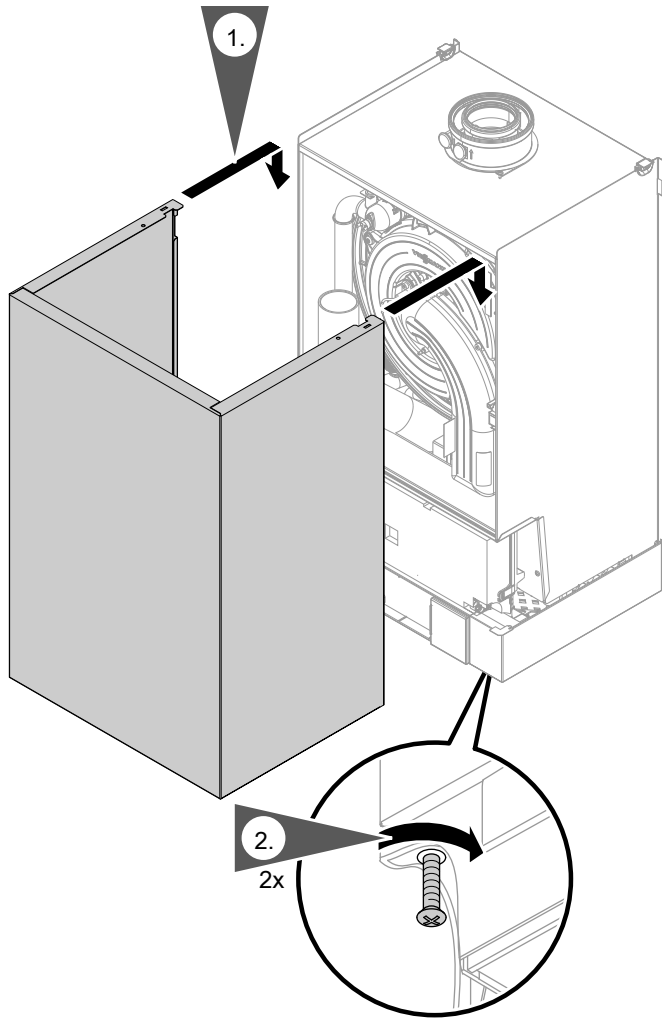


Fig. 40

Note

Ensure the locking screws are fitted before operating.



Instructing the system user

The system installer should hand the operating instructions to the system user and instruct the user in operating the system.

Calling up coding level 1

Calling up coding level 1

- On weather-compensated control units, codes are displayed as plain text.
- Codes that have not been assigned due to the heating system equipment level or the setting of other codes are not displayed.
- Heating systems with one heating circuit without mixer and one or two heating circuits with mixer: The heating circuit without mixer is designated "**Heating circuit 1**" and the heating circuits with mixer as "**Heating circuit 2**" or "**Heating circuit 3**". If the heating circuits were given individual designations, the selected designation and "**HC1**", "**HC2**" or "**HC3**" appear instead.

| Weather-compensated control unit | Constant temperature control unit |
|--|---|
| <p>The codes are divided into groups</p> <ul style="list-style-type: none"> ■ "General" ■ "Boiler" ■ "DHW" ■ "Solar" ■ "Heating circuit 1/2/3" ■ "All codes std device" <p>In this group, all coding addresses from coding level 1 (except the coding addresses from the "Solar" group) are displayed in ascending order.</p> <ul style="list-style-type: none"> ■ "Standard setting" | <ul style="list-style-type: none"> 1: "General" 2: "Boiler" 3: "DHW" 4: "Solar" 5: "Heating circuit 1" 6: "All codes std device" <p>In this group, all coding addresses are displayed in ascending order.</p> <ul style="list-style-type: none"> 7: "Standard setting" |
| <p>Call up code 1</p> <p>Service menu:</p> <ol style="list-style-type: none"> 1. Press OK and ≡ simultaneously for approx. 4 s. 2. "Coding level 1" 3. Select group of required coding address. 4. Select coding address. 5. Select value according to the following tables and confirm with OK. | <p>Service menu:</p> <ol style="list-style-type: none"> 1. Press OK and ≡ simultaneously for approx. 4 s. 2. Select "①" with ▶ for coding level 1 and confirm with OK. 3. "I" flashes on the display for the coding addresses in group 1. 4. Select the group of required coding address with ▲/▼ and confirm with OK. 5. Select coding address with ▲/▼. 6. Set value according to the following tables with ▲/▼ and confirm with OK. |
| <p>Resetting all codes to their delivered condition</p> <p>Select "Standard setting".</p> <p>Note <i>This also resets the codes at coding level 2.</i></p> | <p>Select "7" with ▶ and confirm with OK. When "✚" flashes, confirm with OK.</p> <p>Note <i>This also resets the codes at coding level 2.</i></p> |

General/group "1"

Select "**General**" for weather-compensated control units (see page 45).

Select "**1**" for constant temperature control unit (see page 45).

General/group "1" (cont.)**Coding**

| Coding in the delivered condition | | Possible change | |
|-----------------------------------|--|---------------------|--|
| System design | | | |
| 00:1 | System version 1: One heating circuit without mixer A1 (heating circuit 1), without DHW heating | 00:2 to 00:10 | For system schemes, see the following table: |

| Value address 00: ... | System version | Description |
|-----------------------|----------------|---|
| 2 | 1 | One heating circuit without mixer A1 (heating circuit 1), with DHW heating (code is adjusted automatically) |
| 3 | 2,3 | One heating circuit with mixer M2 (heating circuit 2), without DHW heating |
| 4 | 2,3 | One heating circuit with mixer (heating circuit 2), with DHW heating |
| 5 | 2,3 | One heating circuit without mixer A1 (heating circuit 1) and one heating circuit with mixer M2 (heating circuit 2), without DHW heating (code is adjusted automatically) |
| 6 | 2,3 | One heating circuit without mixer A1 (heating circuit 1) and one heating circuit with mixer M2 (heating circuit 2), with DHW heating (code is adjusted automatically) |
| 7 | 4 | One heating circuit with mixer M2 (heating circuit 2) and one heating circuit with mixer M3 (heating circuit 3), without DHW heating |
| 8 | 4 | One heating circuit with mixer M2 (heating circuit 2) and one heating circuit with mixer M3 (heating circuit 3), with DHW heating |
| 9 | 4 | One heating circuit without mixer A1 (heating circuit 1), one heating circuit with mixer M2 (heating circuit 2) and one heating circuit with mixer M3 (heating circuit 3), without DHW heating (code is adjusted automatically) |
| 10 | 4 | One heating circuit without mixer A1 (heating circuit 1), one heating circuit with mixer M2 (heating circuit 2) and one heating circuit with mixer M3 (heating circuit 3), with DHW heating (code is adjusted automatically) |

| Coding in the delivered condition | | Possible change | |
|---|---|-----------------|--|
| Internal circulation pump function | | | |
| 51:0 | System with low loss header: Internal circulation pump always starts when there is a heat demand | 51:1 | System with low loss header: When there is a heat demand, the internal circulation pump is only started if the burner is operational. Circulation pump is switched off on expiry of run-on time. |
| | | 51:2 | System with heating water buffer cylinder: When there is a heat demand, the internal circulation pump is only started if the burner is operational. |

General/group "1" (cont.)

| Coding in the delivered condition | | Possible change | |
|---|--|-----------------|--|
| Subscriber no. | | | |
| 77:1 | LON subscriber number (only for weather-compensated control units) | 77:2 to 77:99 | LON subscriber number, adjustable from 1 to 99: 1 - 4 = Boiler 5 = Cascade 10 - 97 = Vitotronic 200-H 98 = Vitogate 99 = Vitocom Note <i>Allocate each number only once.</i> |
| Detached house/apartment building | | | |
| 7F:1 | Detached house (only for weather-compensated control units) | 7F:0 | Apartment building Separate adjustment of holiday program and time program for DHW heating possible. |
| Lock out controls | | | |
| 8F:0 | Operation in the standard menu and extended menu enabled. Note <i>The respective code is only activated when you exit the service menu.</i> | 8F:1 | Operation in standard menu and extended menu blocked. Emissions test mode can be enabled. |
| | | 8F:2 | Operation enabled in the standard menu and blocked in the extended menu. Emissions test mode can be enabled. |
| Set flow temperature for external demand | | | |
| 9b:70 | Set flow temperature for external demand 70 °C | 9b:0 to 9b:127 | Set flow temperature for external demand adjustable from 0 to 127 °C (limited by boiler-specific parameters) |

Boiler/group "2"

Select **"Boiler"** for weather-compensated control units (see page 45).

Select **"2"** for constant temperature control unit (see page 45).

Coding

| Coding in the delivered condition | | Possible change | |
|-----------------------------------|---|-----------------|--|
| Single/multi-boiler system | | | |
| 01:1 | Single boiler system (only for constant temperature control units) | 01:2 | Multi boiler system with Vitotronic 300-K |
| Boiler number | | | |
| 07:1 | Boiler number in multi boiler systems (only for constant temperature control units) | 07:2 to 07:4 | Boiler number 2 to 4 in multi boiler systems |

Boiler/group "2" (cont.)

| Coding in the delivered condition | | Possible change | |
|------------------------------------|--|----------------------|--|
| Burner service in 100 hours | | | |
| 21:0 | No service interval (hours run) selected | 21:1 to 21:100 | The number of hours run before the burner should be serviced is adjustable from 100 to 10,000 h One step \pm 100 h |
| Service interval in months | | | |
| 23:0 | No interval for burner service | 23:1 to 23:24 | Interval adjustable from 1 to 24 months |
| Service status | | | |
| 24:0 | "Service" not shown on display | 24:1 | "Service" is shown on display (the address is automatically set and must be manually reset after a service has been carried out) |
| Filling/Venting | | | |
| 2F:0 | Venting program/fill program disabled | 2F:1 | Venting program enabled |
| | | 2F:2 | Fill program enabled |

DHW/group "3"

Select **"DHW"** for weather-compensated control units (see page 45).

Select **"3"** for constant temperature control unit (see page 45).

Coding

| Coding in the delivered condition | | Possible change | |
|--|---|---------------------|--|
| Set DHW temperature reheating suppression | | | |
| 67:40 | For solar DHW heating: Set DHW temperature 40 °C. Reheating is suppressed above the selected set temperature (boiler is only started as backup if the rise in the cylinder temperature is too low). Cannot be adjusted on gas condensing combi boilers. | 67:0 to 67:95 | Set DHW temperature adjustable from 0 to 95 °C (limited by boiler-specific parameters). |
| Enable DHW circulation pump | | | |
| 73:0 | DHW circulation pump: "ON" in accordance with the time program (only for weather-compensated control units) | 73:1 to 73:6 | "ON" from once per hour for 5 min up to 6 times per hour for 5 min"" during the time program |
| | | 73:7 | Constantly "ON" |

Solar/group "4"

Select **"Solar"** for weather-compensated control units (see page 45).

Select **"4"** for constant temperature control unit (see page 45).

Note

The solar group is only displayed if a solar control module, type SM1, is connected.

Solar/group "4" (cont.)**Coding**

| Coding in the delivered condition | | Possible change | |
|---|--|-----------------|--|
| Speed control solar circuit pump | | | |
| 02:0 | Solar circuit pump is not speed-controlled. | 02:1 | Solar circuit pump is speed-controlled with wave packet control. |
| | | 02:2 | Solar circuit pump is speed-controlled with PWM control. |
| Cylinder maximum temperature | | | |
| 08:60 | Set DHW temperature (maximum cylinder temperature) 60 °C. | 08:10 to 08:90 | Set DHW temperature adjustable from 10 to 90 °C. |
| Stagnation time reduction | | | |
| 0A:5 | Temperature differential for stagnation time reduction (reduction in the speed of the solar circuit pump to protect system components and heat transfer medium) 5 K. | 0A:0 | Stagnation time reduction disabled. |
| | | 0A:1 to 0A:40 | Temperature differential adjustable from 1 to 40 K. |
| Flow rate solar circuit | | | |
| 0F:70 | Solar circuit flow rate at the maximum pump speed 7 l/min. | 0F:1 to 0F:255 | Flow rate adjustable from 0.1 to 25.5 l/min; 1 step \pm 0.1 l/min. |
| Extended solar control functions | | | |
| 20:0 | No extended control function enabled. | 20:1 | Additional function for DHW heating. |
| | | 20:2 | Differential temperature control 2. |
| | | 20:3 | Differential temperature control 2 and auxiliary function. |
| | | 20:4 | Differential temperature control 2 for central heating backup. |
| | | 20:5 | Thermostat function. |
| | | 20:6 | Thermostat function and auxiliary function. |
| | | 20:7 | Solar heating via external heat exchanger without additional temperature sensor. |
| | | 20:8 | Solar heating via external heat exchanger with additional temperature sensor. |
| 20:9 | Solar heating of two DHW cylinders. | | |

Heating circuit 1, heating circuit 2, heating circuit 3/group "5"

Select **"Heating circuit ..."** for weather-compensated control units (see page 45).

Select **"5"** for constant temperature control unit (see page 45).

Heating circuit 1, heating circuit 2, heating... (cont.)

Coding

| Coding in the delivered condition | | Possible change | |
|---|---|---|---|
| Priority DHW heating | | | |
| A2:2 | Cylinder priority applicable to heating circuit pump and mixer | A2:0 | Without cylinder priority applicable to heating circuit pump and mixer |
| | | A2:1 | Cylinder priority only applicable to mixer |
| | | A2:3 to A2:15 | Reduced priority applicable to mixer (the heating circuit receives a reduced amount of energy) |
| Economy function outside temperature | | | |
| A5:5 | With heating circuit pump logic function (economy control): Heating circuit pump "OFF" if outside temperature (OT) is 1 K higher than the set room temperature (RT_{set}) $OT > RT_{set} + 1 \text{ K}$ (only for weather-compensated control units) | A5:0 | Without heating circuit pump logic function |
| | | A5:1 to A5:15 | With heating circuit pump logic function: Heating circuit pump "OFF"; see following table |
| Parameter address A5:... | | With heating circuit pump logic function: Heating circuit pump "OFF" | |
| 1 | | $OT > RT_{set} + 5 \text{ K}$ | |
| 2 | | $OT > RT_{set} + 4 \text{ K}$ | |
| 3 | | $OT > RT_{set} + 3 \text{ K}$ | |
| 4 | | $OT > RT_{set} + 2 \text{ K}$ | |
| 5 | | $OT > RT_{set} + 1 \text{ K}$ | |
| 6 | | $OT > RT_{set}$ | |
| 7 to 15 | | $OT > RT_{set} - 1 \text{ K}$ $OT > RT_{set} - 9 \text{ K}$ | |
| Coding in the delivered condition | | Possible change | |
| Extended economy function adjusted outside temperature | | | |
| A6:36 | Extended economy control disabled (only for weather-compensated control units) | A6:5 to A6:35 | Extended economy control enabled; i.e. the burner and heating circuit pump will stop and the mixer will be closed at a variable value, adjustable between 5 and 35 °C plus 1 °C. The base value is the adjusted outside temperature. This value is based on the actual outside temperature and a time constant, which takes the cooling down of an average building into consideration. |

Heating circuit 1, heating circuit 2, heating... (cont.)

| Coding in the delivered condition | | Possible change | |
|---|---|-----------------|---|
| Extended economy function mixer | | | |
| A7:0 | Without mixer economy function (only for weather-compensated control units and heating circuit with mixer) | A7:1 | With mixer economy function (extended heating circuit pump logic): Heating circuit pump also "OFF": <ul style="list-style-type: none"> ▪ If the mixer has been attempting to close for longer than 20 min. Heating circuit pump "ON": <ul style="list-style-type: none"> ▪ If the mixer changes to control function ▪ If there is a risk of frost |
| Pump idle time, transition reduced mode | | | |
| A9:7 | With pump idle time: Heating circuit pump "OFF" if the set value is altered through a change in operating mode or through a change in the set room temperature (only for weather-compensated control units) | A9:0 | Without pump idle time |
| | | A9:1 to A9:15 | With pump idle time, adjustable from 1 to 15. The higher the value, the longer the pump idle time. |
| Weather-compensated/room temperature hook-up | | | |
| b0:0 | With remote control: Heating mode/reduced mode: weather-compensated (only for weather-compensated control units; only change the code for the heating circuit with mixer) | b0:1 | Heating mode: weather-compensated Reduced mode: with room temperature hook-up |
| | | b0:2 | Heating mode: with room temperature hook-up Reduced mode: weather-compensated |
| | | b0:3 | Heating mode/reduced mode: with room temperature hook-up |
| Economy function room temperature | | | |
| b5:0 | With remote control: No room temperature-dependent heating circuit pump logic function (only for weather-compensated control units; only change the code for the heating circuit with mixer) | b5:1 to b5:8 | For heating circuit pump logic function, see the following table: |

| Parameter address b5:... | With heating circuit pump logic function: | |
|-----------------------------|--|--|
| | Heating circuit pump "OFF" | Heating circuit pump "ON" |
| 1 | $RT_{\text{actual}} > RT_{\text{set}} + 5 \text{ K}$ | $RT_{\text{actual}} < RT_{\text{set}} + 4 \text{ K}$ |
| 2 | $RT_{\text{actual}} > RT_{\text{set}} + 4 \text{ K}$ | $RT_{\text{actual}} < RT_{\text{set}} + 3 \text{ K}$ |
| 3 | $RT_{\text{actual}} > RT_{\text{set}} + 3 \text{ K}$ | $RT_{\text{actual}} < RT_{\text{set}} + 2 \text{ K}$ |
| 4 | $RT_{\text{actual}} > RT_{\text{set}} + 2 \text{ K}$ | $RT_{\text{actual}} < RT_{\text{set}} + 1 \text{ K}$ |
| 5 | $RT_{\text{actual}} > RT_{\text{set}} + 1 \text{ K}$ | $RT_{\text{actual}} < RT_{\text{set}}$ |
| 6 | $RT_{\text{actual}} > RT_{\text{set}}$ | $RT_{\text{actual}} < RT_{\text{set}} - 1 \text{ K}$ |
| 7 | $RT_{\text{actual}} > RT_{\text{set}} - 1 \text{ K}$ | $RT_{\text{actual}} < RT_{\text{set}} - 2 \text{ K}$ |
| 8 | $RT_{\text{actual}} > RT_{\text{set}} - 2 \text{ K}$ | $RT_{\text{actual}} < RT_{\text{set}} - 3 \text{ K}$ |

Heating circuit 1, heating circuit 2, heating... (cont.)

| Coding in the delivered condition | | Possible change | |
|---|--|-----------------------|---|
| Min. flow temperature heating circuit | | | |
| C5:20 | Electronic minimum flow temperature limit 20 °C (only for weather-compensated control units) | C5:1 to C5:127 | Minimum limit adjustable from 1 to 127 °C (limited by boiler-specific parameters) |
| Max. flow temperature heating circuit | | | |
| C6:74 | Electronic maximum flow temperature limited to 74 °C (only for weather-compensated control units) | C6:10 to C6:127 | Maximum limit adjustable from 10 to 127 °C (limited by boiler-specific parameters) |
| Heating program - changeover | | | |
| d5:0 | The external operating program changeover switches the operating program to "Constant operation with reduced room temperature" or "Standby mode" (only for weather-compensated control units) | d5:1 | The external operating program changeover switches to "Constant operation with standard room temperature" (subject to coding address 3A, 3b and 3C) |
| Ext. heating program changeover to heating circuit | | | |
| d8:0 | No operating program changeover via extension EA1 | d8:1 | Operating program changeover via input DE1 at extension EA1 |
| | | d8:2 | Operating program changeover via input DE2 at extension EA1 |
| | | d8:3 | Operating program changeover via input DE3 at extension EA1 |
| Max. pump speed in standard mode | | | |
| E6:... | Maximum speed of the variable speed heating circuit pump in % of the max. speed in standard mode. Value is specified by boiler-specific parameters (only for weather-compensated control units). | E6:0 to E6:100 | Maximum speed adjustable from 0 to 100 % |
| Min. pump speed | | | |
| E7:30 | Minimum speed of the variable speed heating circuit pump: 30 % of the max. speed (only for weather-compensated control units) | E7:0 to E7:100 | Minimum speed adjustable from 0 to 100 % of the maximum speed |
| Screed function | | | |
| F1:0 | Screed drying disabled (only for weather-compensated control units). | F1:1 to F1:6 | Screed drying adjustable in accordance with 6 selectable temperature/time profiles (see page 98) |
| | | F1:15 | Constant flow temperature 20 °C |
| Party mode time limit | | | |
| F2:8 | Time limit for party mode or external operating program changeover via button: 8 h (only for weather-compensated control units) ^{*1} | F2:0 | No time limit for party mode ^{*1} |
| | | F2:1 to F2:12 | Time limit adjustable from 1 to 12 h ^{*1} |

^{*1} In the "Heating and DHW" program, party mode ends **automatically** when the system changes over to operation with standard room temperature.

Heating circuit 1, heating circuit 2, heating... (cont.)

| Coding in the delivered condition | | Possible change | |
|---|--|------------------|---|
| Pump control in "Only DHW" | | | |
| F6:25 | In the "Only DHW" operating mode, the circulation pump in the heating circuit connection set is constantly on (only for constant temperature control units) | F6:0 | In the "Only DHW" operating mode, the circulation pump in the heating circuit connection set is constantly off |
| | | F6:1 to F6:24 | In the "Only DHW" operating mode, the circulation pump in the heating circuit connection set is started 1 to 24 times per day for 10 min each time. |
| Pump control in "Standby mode" | | | |
| F7:25 | In "standby mode" the circulation pump in the heating circuit connection set is constantly on (only for constant temperature control units) | F7:0 | In "standby mode" the circulation pump in the heating circuit connection set is constantly off |
| | | F7:1 to F7:24 | In "Standby mode", the circulation pump in the heating circuit connection set is started 1 to 24 times per day for 10 min each time. |
| Start temperature raising | | | |
| F8:-5 | Temperature limit for terminating reduced mode -5 °C, see example on page 100. Observe the setting of coding address "A3". (only for weather-compensated control units) | F8:+10 to F8:-60 | Temperature limit adjustable from +10 to -60 °C |
| | | F8:-61 | Function disabled |
| End temperature raising | | | |
| F9:-14 | Temperature limit for raising the reduced set room temperature -14 °C, see example on page 100. (only for weather-compensated control units) | F9:+10 to F9:-60 | Temperature limit for raising the set room temperature to the value selected for standard mode adjustable from +10 to -60 °C |
| Set flow temperature increase | | | |
| FA:20 | Raising the set boiler water temperature or set flow temperature by 20 % when changing from operation with reduced room temperature to operation with standard room temperature. See example on page 100 (only for weather-compensated control units). | FA:0 to FA:50 | Temperature rise adjustable from 0 to 50 % |
| Duration set flow temperature increase | | | |
| Fb:60 | Duration for raising the set boiler water temperature or set flow temperature (see coding address "FA") 60 min. See example on page 100 (only for weather-compensated control units). | Fb:0 to Fb:300 | Duration adjustable from 0 to 300 min; |

Calling up coding level 2

Calling up coding level 2

- All codes are accessible in coding level 2.
- Codes that have not been assigned due to the heating system equipment level or the setting of other codes are not displayed.
- The heating circuit without mixer is designated "**Heating circuit 1**" and the heating circuits with mixer as "**Heating circuit 2**" or "**Heating circuit 3**". If the heating circuits were given individual designations, the selected designation and "**HC1**", "**HC2**" or "**HC3**" appear instead.

Weather-compensated control unit

The codes are divided into groups



- "General"
- "Boiler"
- "DHW"
- "Solar"
- "Heating circuit 1/2/3"
- "All codes std device"
In this group, all coding addresses (except the coding addresses from the "Solar" group) are displayed in ascending order.
- "Standard setting"

Constant temperature control unit










- 1: "General"
- 2: "Boiler"
- 3: "DHW"
- 4: "Solar"
- 5: "Heating circuit 1"
- 6: "All codes std device"
In this group, all coding addresses are displayed in ascending order.
- 7: "Standard setting"

Call up code 2

Service menu:

1. Press **OK** and  simultaneously for approx. 4 s.
2. Press **OK** and  simultaneously for approx. 4 s.
3. "**Coding level 2**"
4. Select group of required coding address.
5. Select coding address.
6. Select value according to the following tables and confirm with **OK**.

Service menu:


1. Press **OK** and  simultaneously for approx. 4 s.
2. Press **OK** and  simultaneously for approx. 4 s.
3. Select "**2**" with  for coding level 2 and confirm with **OK**.
4. "**1**" flashes on the display for the coding addresses in group 1.
5. Select the group of required coding address with / and confirm with **OK**.
6. Select coding address with /.
7. Set value according to the following tables with / and confirm with **OK**.

Resetting all codes to their delivered condition

Select "**Standard setting**".

Note

This also resets codes at coding level 1.

Select "**7**" with  and confirm with **OK**.
When "**7**" flashes, confirm with **OK**.

Note

This also resets codes at coding level 1.

General/group "1"

Select "**General**" for weather-compensated control units (see page 54).

Select "**1**" for constant temperature control unit (see page 54).

General/group "1" (cont.)

Coding

| Coding in the delivered condition | | Possible change | |
|-----------------------------------|--|---------------------|--|
| 00:1 | System version 1: One heating circuit without mixer A1 (heating circuit 1), without DHW heating | 00:2 to 00:10 | For system schemes, see the following table: |


| Value address 00: ... | System version | Description |
|-----------------------|----------------|---|
| 2 | 1 | One heating circuit without mixer A1 (heating circuit 1), with DHW heating (code is adjusted automatically) |
| 3 | 2,3 | One heating circuit with mixer M2 (heating circuit 2), without DHW heating |
| 4 | 2,3 | One heating circuit with mixer (heating circuit 2), with DHW heating |
| 5 | 2,3 | One heating circuit without mixer A1 (heating circuit 1) and one heating circuit with mixer M2 (heating circuit 2), without DHW heating (code is adjusted automatically) |
| 6 | 2,3 | One heating circuit without mixer A1 (heating circuit 1) and one heating circuit with mixer M2 (heating circuit 2), with DHW heating (code is adjusted automatically) |
| 7 | 4 | One heating circuit with mixer M2 (heating circuit 2) and one heating circuit with mixer M3 (heating circuit 3), without DHW heating |
| 8 | 4 | One heating circuit with mixer M2 (heating circuit 2) and one heating circuit with mixer M3 (heating circuit 3), with DHW heating |
| 9 | 4 | One heating circuit without mixer A1 (heating circuit 1), one heating circuit with mixer M2 (heating circuit 2) and one heating circuit with mixer M3 (heating circuit 3), without DHW heating (code is adjusted automatically) |
| 10 | 4 | One heating circuit without mixer A1 (heating circuit 1), one heating circuit with mixer M2 (heating circuit 2) and one heating circuit with mixer M3 (heating circuit 3), with DHW heating (code is adjusted automatically) |

| Coding in the delivered condition | | Possible change | |
|-----------------------------------|---|-----------------|--|
| 11:≠9 | No access to the coding addresses for the combustion controller parameters | 11:9 | Access open to the coding addresses for the combustion controller parameters |
| 25:0 | Without outside temperature sensor (for constant temperature control units) | 25:1 | With outside temperature sensor (automatic recognition) |
| 2A:0 | Without wireless outside temperature sensor | 2A:1 | With wireless outside temperature sensor (automatic recognition) |
| | | 2A:2 | Wireless outside temperature sensor not used |
| 2d:0 | Do not adjust | | |
| 32:0 | Without extension AM1 | 32:1 | With extension AM1 (automatic recognition) |
| 33:1 | Function output A1 at extension AM1: Heating circuit pump | 33:0 | Function output A1: DHW circulation pump |
| | | 33:2 | Function output A1: Circulation pump for cylinder heating |
| 34:0 | Function output A2 at extension AM1: DHW circulation pump | 34:1 | Function output A2: Heating circuit pump |
| | | 34:2 | Function output A2: Circulation pump for cylinder heating |
| 35:0 | Without extension EA1 | 35:1 | With extension EA1 (automatic recognition) |

General/group "1" (cont.)

| Coding in the delivered condition | | Possible change | |
|-----------------------------------|---|-----------------|---|
| 36:0 | Function output [157] at extension EA1: Fault message | 36:1 | Function output [157]: Feed pump |
| | | 36:2 | Function output [157]: DHW circulation pump |
| 39:2 | Function output [21]: Circulation pump for cylinder heating | 39:0 | Function output [21]: DHW circulation pump |
| | | 39:1 | Function output [21]: Heating circuit pump |
| 3A:0 | Function input DE1 at extension EA1: Not assigned | 3A:1 | Function input DE1: Heating program - changeover |
| | | 3A:2 | Function input DE1: External demand with set flow temperature. Flow temperature setting: Coding address 9b. Internal circulation pump function: Coding address 3F |
| | | 3A:3 | Function input DE1: External blocking. Internal circulation pump function: Coding address 3E |
| | | 3A:4 | Function input DE1: External blocking with fault message input. Internal circulation pump function: Coding address 3E |
| | | 3A:5 | Function input DE1: Fault message input |
| | | 3A:6 | Function input DE1: Brief operation, DHW circulation pump (pushbutton function). DHW circulation pump runtime adjustment: Coding address 3d |
| 3b:0 | Function input DE2 at extension EA1: Not assigned | 3b:1 | Function input DE2: Heating program - changeover |
| | | 3b:2 | Function input DE2: External demand with set flow temperature. Flow temperature setting: Coding address 9b. Internal circulation pump function: Coding address 3F |
| | | 3b:3 | Function input DE2: External blocking. Internal circulation pump function: Coding address 3E |
| | | 3b:4 | Function input DE2: External blocking with fault message input. Internal circulation pump function: Coding address 3E |
| | | 3b:5 | Function input DE2: Fault message input |
| | | 3b:6 | Function input DE2: Brief operation, DHW circulation pump (pushbutton function). DHW circulation pump runtime adjustment: Coding address 3d |

General/group "1" (cont.)

| Coding in the delivered condition | | Possible change | |
|-----------------------------------|--|-----------------|---|
| 3C:0 | Function input DE3 at extension EA1: Not assigned | 3C:1 | Function input DE3: Heating program - changeover |
| | | 3C:2 | Function input DE3: External demand with set flow temperature. Flow temperature setting: Coding address 9b. Internal circulation pump function: Coding address 3F |
| | | 3C:3 | Function input DE3: External blocking. Internal circulation pump function: Coding address 3E |
| | | 3C:4 | Function input DE3: External blocking with fault message input. Internal circulation pump function: Coding address 3E |
| | | 3C:5 | Function input DE3: Fault message input |
| | | 3C:6 | Function input DE3: Brief operation, DHW circulation pump (pushbutton function). DHW circulation pump runtime adjustment: Coding address 3d |
| 3d:5 | DHW circulation pump runtime for brief operation: 5 min | 3d:1 to 3d:60 | DHW circulation pump runtime adjustable from 1 to 60 min |
| 3E:0 | Boiler circuit pump stays in control mode on "External blocking" signal | 3E:1 | Boiler circuit pump is stopped on "External blocking" signal |
| | | 3E:2 | Boiler circuit pump is started on "External blocking" signal |
| 3F:0 | Boiler circuit pump stays in control mode on "External demand" signal | 3F:1 | Boiler circuit pump is stopped on "External demand" signal |
| | | 3F:2 | Boiler circuit pump is started on "External demand" signal |
| 4b:0 | Function input  : Room thermostat (Vitolrol 100, only for constant temperature control units) | 4b:1 | External demand (for constant temperature and weather-compensated control units) |
| | | 4b:2 | External blocking (for constant temperature and weather-compensated control units) |
| 51:0 | System with low loss header: Boiler circuit pump is always started when there is a heat demand | 51:1 | System with low loss header: When there is heat demand, the boiler circuit pump will only be started if the burner is running. Circulation pump is switched off on expiry of run-on time. |
| | | 51:2 | System with heating water buffer cylinder: When there is heat demand, the boiler circuit pump will only be started if the burner is running. |
| 52:0 | Without flow temperature sensor for low loss header | 52:1 | With flow temperature sensor for low loss header (automatic recognition) |

General/group "1" (cont.)

| Coding in the delivered condition | | Possible change | |
|-----------------------------------|--|-----------------|--|
| 53:1 | Function connection $\square{28}$ of the internal extension: DHW circulation pump | 53:0 | Function connection $\square{28}$: Central fault message |
| | | 53:2 | Function connection $\square{28}$: External heating circuit pump (heating circuit 1) |
| | | 53:3 | Function connection $\square{28}$: External circulation pump for cylinder heating |
| 54:0 | Without solar thermal system | 54:1 | With Vitosolic 100 (automatic recognition) |
| | | 54:2 | With Vitosolic 200 (automatic recognition) |
| | | 54:4 | With solar control module SM1 with auxiliary function, e.g. central heating backup (automatic recognition) |
| 6E:50 | No measured outside temperature correction | 6E:0 to 6E:100 | Outside temperature correction in 0.1 K steps 0 to 49 = -5 K to -0.1 K 51 to 100 = 0.1 K to 5 K |
| 76:0 | Without communication module | 76:1 | With LON communication module (automatic recognition; only for weather-compensated control units) |
| | | 76:2 | With cascade communication module (automatic recognition; only for constant temperature control units) |
| 77:1 | LON subscriber number (only for weather-compensated control units) | 77:2 to 77:99 | LON subscriber number, adjustable from 1 to 99: 1 - 4 = Boiler 5 = Cascade 10 - 97 = Vitotronic 200-H 98 = Vitogate 99 = Vitocom Note <i>Allocate each number only once.</i> |
| 79:1 | With LON communication module: Control unit is fault manager (only for weather-compensated control units). | 79:0 | Control unit is not fault manager |
| 7b:1 | With LON communication module: Control unit transmits the time (only for weather-compensated control units). | 7b:0 | Does not transmit time |
| 7F:1 | Detached house (only for weather-compensated control units) | 7F:0 | Apartment building Separate adjustment of holiday program and time program for DHW heating possible. |
| 80:6 | If a fault occurs for at least 30 s, a fault message is displayed | 80:0 | Immediate fault message |
| | | 80:2 to 80:199 | Minimum fault duration until fault message occurs, adjustable from 10 s to 995 s; 1 step \triangleq 5 s |
| 81:1 | Automatic summer/wintertime changeover | 81:0 | Manual summer/wintertime changeover |

General/group "1" (cont.)

| Coding in the delivered condition | | Possible change | |
|-----------------------------------|---|-----------------|---|
| | | 81:2 | Use of the radio clock receiver (automatic recognition) |
| | | 81:3 | With LON communication module: The control unit receives the time |
| 82:0 | Operation with natural gas | 82:1 | Operation with LPG (only adjustable if coding address 11:9 has been set) |
| 88:0 | Temperature displayed in °C (Celsius) | 88:1 | Temperature displayed in °F (Fahrenheit) |
| 8A:175 | Do not adjust | | |
| 8F:0 | Operation in the standard menu and extended menu enabled. Note <i>The respective code is only activated when you exit the service menu.</i> | 8F:1 | Operation in the standard menu and extended menu blocked. Emissions test mode can be enabled. |
| | | 8F:2 | Operation enabled in the standard menu; blocked in the extended menu. Emissions test mode can be enabled. |
| 90:128 | Time constant for calculating adjusted outside temperature 21.3 h | 90:1 to 90:199 | Fast (low values) or slow (high values) matching of the flow temperature, subject to the set value when the outside temperature changes; 1 step \triangleq 10 min |
| 94:0 | Without OpenTherm extension | 94:1 | With OpenTherm extension (automatic recognition) |
| 95:0 | Without communication interface Vitocom 100, type GSM | 95:1 | With communication interface Vitocom 100, type GSM (automatic recognition) |
| 97:0 | With LON communication module: The outside temperature of the sensor connected to the control unit is utilised internally (only for weather-compensated control units) | 97:1 | Control unit receives outside temperature |
| | | 97:2 | The control unit transmits the outside temperature to the Vitotronic 200-H |
| 98:1 | Viessmann system number (in conjunction with monitoring several systems via Vitocom 300) | 98:1 to 98:5 | System number adjustable from 1 to 5 |
| 99:0 | Do not adjust | | |
| 9b:70 | Set flow temperature for external demand 70 °C | 9b:0 to 9b:127 | Set flow temperature for external demand adjustable from 0 to 127 °C (limited by boiler-specific parameters) |
| 9C:20 | Monitoring LON subscribers. If a subscriber fails to respond, the control unit's internal default values will be used after 20 min. Only then will a fault message be issued (only for weather-compensated control units) | 9C:0 | No monitoring |
| | | 9C:5 to 9C:60 | Time adjustable from 5 to 60 min |
| 9F:8 | Differential temperature 8 K; only in conjunction with mixer circuit (only for weather-compensated control units) | 9F:0 to 9F:40 | Differential temperature adjustable from 0 to 40 K |
| 9 A:0 | Do not adjust | | |

Boiler/group "2"

Select **"Boiler"** for weather-compensated control units (see page 54).

Select **"2"** for constant temperature control unit (see page 54).

Coding

| Coding in the delivered condition | | Possible change | |
|-----------------------------------|--|-----------------|---|
| 01:1 | Single boiler system (only for constant temperature control units) | 01:2 | Multi boiler system with Vitotronic 300-K |
| 04:1 | Minimum burner pause time subject to the boiler load (specified by boiler coding card) | 04:0 | Minimum burner pause time set permanently (specified by boiler coding card) |
| 06:... | Maximum limit of the boiler water temperature, defaulted in °C by the boiler coding card | 06:20 to 06:127 | Maximum limit of the boiler water temperature within the ranges specified by the boiler |
| 07:1 | Boiler number in multi boiler systems (only for constant temperature control units) | 07:2 to 07:4 | Boiler number 2 to 4 in multi boiler systems |
| 08:... | Maximum burner heating output in kW in the case of a multi boiler system | 08:0 to 08:199 | Maximum burner heating output adjustable from 0 to 199 kW (limited by boiler-specific parameters) in steps of 1 kW |
| 0d:0 | Do not adjust | | |
| 0E:0 | Do not adjust | | |
| 13:1 | Do not adjust | | |
| 14:1 | Do not adjust | | |
| 15:1 | Do not adjust | | |
| 21:0 | No service interval (hours run) selected | 21:1 to 21:100 | The number of hours run before the burner should be serviced is adjustable from 100 to 10,000 h One step \pm 100 h |
| 23:0 | No interval for burner service | 23:1 to 23:24 | Interval adjustable from 1 to 24 months |
| 24:0 | "Service" not shown on display | 24:1 | "Service" is shown on display (the address is automatically set and must be manually reset after a service has been carried out) |
| 28:0 | No burner interval ignition | 28:1 to 28:24 | Interval adjustable from 1 h to 24 h. The burner is force-started for 30 s (only when operating with LPG). |
| 2E:0 | Do not adjust | | |
| 2F:0 | Venting program/fill program disabled | 2F:1 | Venting program enabled |
| | | 2F:2 | Fill program enabled |
| 30:3 | Boiler circuit pump speed-controlled via 0-10 V interface | 30:0 | Boiler circuit pump multi stage |
| | | 30:1 | Boiler circuit pump speed-controlled (Settings are made automatically if 0 was previously set.) |
| | | 30:2 | Boiler circuit pump speed-controlled with flow rate (Settings are made automatically if 0 was previously set.) |
| 38:0 | Status burner control unit: Operational (no fault) | 38:≠0 | Status burner control unit: Fault |

DHW/group "3"

Select "DHW" for weather-compensated control units (see page 54).

Select "3" for constant temperature control unit (see page 54).

Coding

| Coding in the delivered condition | | Possible change | |
|-----------------------------------|---|----------------------|--|
| 56:0 | Set DHW temperature adjustable from 10 to 60 °C | 56:1 | Set DHW temperature adjustable from 10 to above 60 °C Note Max. value subject to boiler coding card. Observe the max. permissible DHW temperature. |
| 58:0 | Without auxiliary function for DHW heating | 58:10 to 58:60 | Input of a second set DHW temperature, adjustable from 10 to 60 °C (observe coding addresses "56" and "63") |
| 59:0 | Cylinder heating: Start point -2.5 K Stop point +2.5 K | 59:1 to 59:10 | Start point adjustable from 1 to 10 K below the set value |
| 5b:0 | DHW cylinder directly connected to the boiler | 5b:1 | DHW cylinder connected downstream of the low loss header |
| 5E:0 | Circulation pump for cylinder heating stays in control mode at signal "External blocking" | 5E:1 | Circulation pump for cylinder heating stops at signal "External blocking" |
| | | 5E:2 | Circulation pump for cylinder heating starts at signal "External blocking" |
| 5F:0 | Circulation pump for cylinder heating stays in control mode at signal "External demand" | 5F:1 | Circulation pump for cylinder heating stops at signal "External demand" |
| | | 5F:2 | Circulation pump for cylinder heating starts at signal "External demand" |
| 60:20 | During DHW heating, the boiler water temperature is max. 20 K higher than the set DHW temperature. | 60:5 to 60:25 | Differential between the boiler water temperature and the set DHW temperature adjustable from 5 to 25 K |
| 62:2 | Circulation pump with 2 min run-on time after cylinder heating | 62:0 | Circulation pump without run-on time |
| | | 62:1 to 62:15 | Run-on time adjustable from 1 to 15 min |
| | | | |
| 63:0 | Without auxiliary function for DHW heating (only for constant temperature control units) | 63:1 | Auxiliary function: 1 x daily |
| | | 63:2 to 63:14 | Every 2 days to every 14 days |
| | | 63:15 | 2 x daily |
| 65:0 | Do not adjust | | |
| 67:40 | For solar DHW heating: Set DHW temperature 40 °C. Reheating is suppressed above the selected set temperature (boiler is only started as backup if the rise in the cylinder temperature is too low). | 67:0 to 67:95 | Set DHW temperature adjustable from 0 to 95 °C (limited by boiler-specific parameters). |

DHW/group "3" (cont.)

| Coding in the delivered condition | | Possible change | |
|-----------------------------------|---|----------------------|---|
| 6F:... | Max. heating output for DHW heating in %, specified by the boiler coding card | 6F:0 to 6F:100 | Max. heating output for DHW heating adjustable from min. heating output to 100 % |
| 71:0 | DHW circulation pump: "ON" in accordance with the time program (only for weather-compensated control units) | 71:1 | "OFF" during DHW heating to set value 1 |
| | | 71:2 | "ON" during DHW heating to set value 1 |
| 72:0 | DHW circulation pump: "ON" in accordance with the time program (only for weather-compensated control units) | 72:1 | "OFF" during DHW heating to set value 2 |
| | | 72:2 | "ON" during DHW heating to set value 2 |
| 73:0 | DHW circulation pump: "ON" in accordance with the time program (only for weather-compensated control units) | 73:1 to 73:6 | "ON" from once per hour for 5 min up to 6 times per hour for 5 min" during the time program |
| | | 73:7 | Constantly "ON" |

Solar/group "4"

Select **"Solar"** for weather-compensated control units (see page 54).

Select **"4"** for constant temperature control unit (see page 54).

Note

The solar group is only displayed if a solar control module, type SM1, is connected.

Coding

| Coding in the delivered condition | | Possible change | |
|-----------------------------------|---|----------------------|---|
| 00:8 | Start temperature differential for solar circuit pump 8 K. | 00:2 to 00:30 | Start temperature differential adjustable from 2 to 30 K. |
| 01:4 | Stop temperature differential for solar circuit pump 4 K. | 01:1 to 01:29 | Stop temperature differential adjustable from 1 to 29 K. |
| 02:0 | Solar circuit pump is not speed-controlled. | 02:1 | Solar circuit pump is speed-controlled with wave packet control. |
| | | 02:2 | Solar circuit pump is speed-controlled with PWM control. |
| 03:10 | Temperature differential for the start of the speed control 10 K. | 03:5 to 03:20 | Temperature differential adjustable from 5 to 20 K. |
| 04:4 | Controller amplification of the speed control 4 %/K. | 04:1 to 04:10 | Controller amplification adjustable from 1 to 10 %/K. |
| 05:10 | Minimum speed of the solar circuit pump 10 % of the maximum speed. | 05:2 to 05:100 | Min. speed of the solar circuit pump is adjustable from 2 to 100 %. |
| 06:75 | Max. speed of the solar circuit pump 75 % of the max. possible speed. | 06:1 to 06:100 | Max. speed of the solar circuit pump is adjustable from 1 to 100 %. |
| 07:0 | Interval function of the solar circuit pump switched off. | 07:1 | Interval function of the solar circuit pump switched on. |

Solar/group "4" (cont.)

| Coding in the delivered condition | | Possible change | |
|-----------------------------------|--|-----------------------|---|
| | | | To capture the collector temperature more accurately, the solar circuit pump starts for short cycles. |
| 08:60 | Set DHW temperature (maximum cylinder temperature) 60 °C. | 08:10 to 08:90 | Set DHW temperature adjustable from 10 to 90 °C. |
| 09:130 | Maximum collector temperature (to protect the system components) 130 °C. | 09:20 to 09:200 | Temperature adjustable from 20 to 200 °C. |
| 0A:5 | Temperature differential for stagnation time reduction (reduction in the speed of the solar circuit pump to protect system components and heat transfer medium) 5 K. | 0A:0 | Stagnation time reduction is disabled. |
| | | 0A:1 to 0A:40 | Temperature differential adjustable from 1 to 40 K. |
| 0b:0 | Frost protection function for solar circuit switched off. | 0b:1 | Frost protection function for solar circuit switched on (not required with Viessmann heat transfer medium). |
| 0C:1 | Delta T monitoring switched on. No flow rate captured in the solar circuit, or flow rate too low. | 0C:0 | Delta T monitoring switched off. |
| 0d:1 | Night circulation monitoring switched on. Unintentional flow rate is captured in the solar circuit (e.g. at night). | 0d:0 | Night circulation monitoring switched off. |
| 0E:1 | Heat statement in conjunction with Viessmann heat transfer medium. | 0E:2 | Do not adjust |
| | | 0E:0 | No heat statement. |
| 0F:70 | Solar circuit flow rate at the maximum pump speed 7 l/min. | 0F:1 to 0F:255 | Flow rate adjustable from 0.1 to 25.5 l/min. 1 step \pm 0.1 l/min |
| 10:0 | Target temperature control switched off (see coding address "11"). | 10:1 | Target temperature control switched on. |
| 11:50 | Set solar DHW temperature 50 °C. <ul style="list-style-type: none"> ▪ Target temperature control switched on (code "10:1"): Temperature at which the solar heated water in the DHW cylinder is to be stratified. ▪ Code "20:9" (heating of two DHW cylinders) is selected: When one DHW cylinder reaches its set DHW temperature, the second DHW cylinder is heated. | 11:10 to 11:90 | The set solar DHW temperature is adjustable from 10 to 90 °C. |
| 12:10 | Minimum collector temperature (minimum start temperature for the solar circuit pump) 10 °C. | 12:0 | No minimum limit enabled. |
| | | 12:1 to 12:90 | Minimum collector temperature adjustable from 1 to 90 °C. |
| 20:0 | No extended control functions enabled. | 20:1 | Additional function for DHW heating. |
| | | 20:2 | Differential temperature control 2. |
| | | 20:3 | Differential temperature control 2 and auxiliary function. |
| | | 20:4 | Differential temperature control 2 for central heating backup. |

Solar/group "4" (cont.)

| Coding in the delivered condition | | Possible change | |
|-----------------------------------|---|-----------------|--|
| | | 20:5 | Thermostat function. |
| | | 20:6 | Thermostat function and auxiliary function. |
| | | 20:7 | Solar heating via external heat exchanger without additional temperature sensor. |
| | | 20:8 | Solar heating via external heat exchanger with additional temperature sensor. |
| | | 20:9 | Solar heating of two DHW cylinders. |
| 22:8 | Start temperature differential with central heating backup (code "20:4" must be selected) 8 K. | 22:2 to 22:30 | Start temperature differential adjustable from 2 to 30 K. |
| 23:4 | Stop temperature differential with central heating backup (code "20:4" must be selected) 4 K. | 23:2 to 23:30 | Stop temperature differential adjustable from 1 to 29 K. |
| 24:40 | Start temperature for thermostat function (code "20:5" or "20:6" must be selected) 40 °C. | 24:0 to 24:100 | Start temperature for thermostat function adjustable from 0 to 100 K. |
| 25:50 | Stop temperature for thermostat function (code "20:5" or "20:6" must be selected) 50 °C. | 25:0 to 25:100 | Stop temperature for thermostat function adjustable from 0 to 100 K. |
| 26:1 | Priority for DHW cylinder 1 with cyclical heating. (Code "20:9" must be selected). | 26:0 | Priority for DHW cylinder 1 without cyclical heating. |
| | | 26:2 | Priority for DHW cylinder 2 without cyclical heating. |
| | | 26:3 | Priority for DHW cylinder 2 with cyclical heating. |
| | | 26:4 | Cyclical heating without priority for either DHW cylinder. |
| 27:15 | Cyclical heating time 15 min. The DHW cylinder without priority is heated at most for the duration of the set cyclical heating time if the DHW cylinder with priority is heated up. | 27:5 to 27:60 | The cyclical heating time is adjustable from 5 to 60 min. |
| 28:3 | Cyclical pause time 3 min. After the selected cyclical heating time for the DHW cylinder without priority has expired, the rise in collector temperature is captured during the cyclical pause time. | 28:1 to 28:60 | Cyclical pause time adjustable from 1 to 60 min. |

Heating circuit 1, heating circuit 2, heating circuit 3/group "5"

Select **"Heating circuit ..."** for weather-compensated control units (see page 54).

Select **"5"** for constant temperature control unit (see page 54).

Heating circuit 1, heating circuit 2, heating... (cont.)

Coding

| Coding in the delivered condition | | Possible change | |
|-----------------------------------|---|-----------------|--|
| A0:0 | Without remote control | A0:1 | With Vitotrol 200A/200 RF (automatic recognition) |
| | | A0:2 | With Vitotrol 300A/300 RF or Vitocomfort 200 (automatic recognition) |
| A1:0 | All possible settings at the remote control can be accessed | A1:1 | Only party mode can be set at the remote control (only for Vitotrol 200 RF) |
| A2:2 | Cylinder priority applicable to heating circuit pump and mixer | A2:0 | Without cylinder priority applicable to heating circuit pump and mixer |
| | | A2:1 | Cylinder priority only applicable to mixer |
| | | A2:3 to A2:15 | Reduced priority applicable to mixer (the heating circuit receives a reduced amount of energy) |
| A3:2 | Outside temperature below 1 °C: Heating circuit pump "ON" Outside temperature above 3 °C: Heating circuit pump "OFF" | A3:-9 to A3:15 | Heating circuit pump "ON/OFF" (see the following table) |



Please note

- If a value below 1 °C is selected, there is a risk that pipes outside the thermal envelope of the house could freeze up.
The standby mode in particular should be taken into consideration, e.g. during holidays.

| Parameter Address A3:... | Heating circuit pump | |
|-----------------------------|----------------------|-------|
| | "ON" | "OFF" |
| -9 | -10 °C | -8 °C |
| -8 | -9 °C | -7 °C |
| -7 | -8 °C | -6 °C |
| -6 | -7 °C | -5 °C |
| -5 | -6 °C | -4 °C |
| -4 | -5 °C | -3 °C |
| -3 | -4 °C | -2 °C |
| -2 | -3 °C | -1 °C |
| -1 | -2 °C | 0 °C |
| 0 | -1 °C | 1 °C |
| 1 | 0 °C | 2 °C |
| 2 | 1 °C | 3 °C |
| to | to | to |
| 15 | 14 °C | 16 °C |

| Coding in the delivered condition | | Possible change | |
|-----------------------------------|--|-----------------|---|
| A4:0 | With frost protection (only for weather-compensated control units) | A4:1 | No frost protection; this setting is only possible if code "A3:-9" has been selected. |

Heating circuit 1, heating circuit 2, heating... (cont.)

| Coding in the delivered condition | | Possible change | |
|-----------------------------------|---|-----------------|---|
| | | | Note "Important" observe for code "A3". |
| A5:5 | With heating circuit pump logic function (economy control): Heating circuit pump "OFF" if outside temperature (OT) is 1 K higher than the set room temperature (RT_{set}) $OT > RT_{set} + 1$ K (only for weather-compensated control units) | A5:0 | Without heating circuit pump logic function |
| | | A5:1 to A5:15 | With heating circuit pump logic function: Heating circuit pump "OFF"; see following table |

| Parameter address A5:... | With heating circuit pump logic function: Heating circuit pump "OFF" |
|--------------------------|--|
| 1 | $OT > RT_{set} + 5$ K |
| 2 | $OT > RT_{set} + 4$ K |
| 3 | $OT > RT_{set} + 3$ K |
| 4 | $OT > RT_{set} + 2$ K |
| 5 | $OT > RT_{set} + 1$ K |
| 6 | $OT > RT_{set}$ |
| 7 to 15 | $OT > RT_{set} - 1$ K $OT > RT_{set} - 9$ K |

| Coding in the delivered condition | | Possible change | |
|-----------------------------------|--|-----------------|--|
| A6:36 | Extended economy control disabled (only for weather-compensated control units) | A6:5 to A6:35 | Extended economy control enabled, i.e. the burner and heating circuit pump will stop and the mixer will be closed at a variable value, adjustable between 5 and 35 °C plus 1 °C. The base value is the adjusted outside temperature. This value is based on the actual outside temperature and a time constant, which takes the cooling down of an average building into consideration. |
| A7:0 | Without mixer economy function (only for weather-compensated control units and heating circuits with mixer) | A7:1 | With mixer economy function (extended heating circuit pump logic): Heating circuit pump also "OFF": <ul style="list-style-type: none"> ▪ If the mixer has been attempting to close for longer than 20 min. Heating circuit pump "ON": <ul style="list-style-type: none"> ▪ If the mixer changes to control function ▪ If there is a risk of frost |
| A8:1 | Heating circuit with mixer creates a demand for the boiler circuit pump (only for weather-compensated control units) | A8:0 | Heating circuit with mixer creates no demand for the boiler circuit pump |

Heating circuit 1, heating circuit 2, heating... (cont.)

| Coding in the delivered condition | | Possible change | |
|-----------------------------------|--|-----------------|--|
| A9:7 | With pump idle time: Heating circuit pump "OFF" if the set value is altered through a change in operating mode or through a change in the set room temperature (only for weather-compensated control units) | A9:0 | Without pump idle time |
| | | A9:1 to A9:15 | With pump idle time, adjustable from 1 to 15. The higher the value, the longer the pump idle time. |
| b0:0 | With remote control: Heating mode/reduced mode: weather-compensated (only for weather-compensated control units; only change the code for the heating circuit with mixer) | b0:1 | Heating mode: weather-compensated Reduced mode: with room temperature hook-up |
| | | b0:2 | Heating mode: with room temperature hook-up Reduced mode: weather-compensated |
| | | b0:3 | Heating mode/reduced mode: with room temperature hook-up |
| b2:8 | With remote control and for the heating circuit, operation with room temperature hook-up must be programmed: Room influence factor 8 (only for weather-compensated control units; only change the code for the heating circuit with mixer) | b2:0 | Without room influence |
| | | b2:1 to b2:64 | Room influence factor adjustable from 1 to 64. The higher the value, the greater the room influence. |
| b5:0 | With remote control: No room temperature-dependent heating circuit pump logic function (only for weather-compensated control units; only change the code for the heating circuit with mixer) | b5:1 to b5:8 | For heating circuit pump logic function, see the following table: |

| Parameter address b5:... | With heating circuit pump logic function: | |
|-----------------------------|---|---------------------------------------|
| | Heating circuit pump "OFF" | Heating circuit pump "ON" |
| 1 | $RT_{actual} > RT_{set} + 5\text{ K}$ | $RT_{actual} < RT_{set} + 4\text{ K}$ |
| 2 | $RT_{actual} > RT_{set} + 4\text{ K}$ | $RT_{actual} < RT_{set} + 3\text{ K}$ |
| 3 | $RT_{actual} > RT_{set} + 3\text{ K}$ | $RT_{actual} < RT_{set} + 2\text{ K}$ |
| 4 | $RT_{actual} > RT_{set} + 2\text{ K}$ | $RT_{actual} < RT_{set} + 1\text{ K}$ |
| 5 | $RT_{actual} > RT_{set} + 1\text{ K}$ | $RT_{actual} < RT_{set}$ |
| 6 | $RT_{actual} > RT_{set}$ | $RT_{actual} < RT_{set} - 1\text{ K}$ |
| 7 | $RT_{actual} > RT_{set} - 1\text{ K}$ | $RT_{actual} < RT_{set} - 2\text{ K}$ |
| 8 | $RT_{actual} > RT_{set} - 2\text{ K}$ | $RT_{actual} < RT_{set} - 3\text{ K}$ |

| Coding in the delivered condition | | Possible change | |
|-----------------------------------|---|-----------------|--|
| C5:20 | Electronic minimum flow temperature limit 20 °C (only for weather-compensated control units) | C5:1 to C5:127 | Minimum limit adjustable from 1 to 127 °C (limited by boiler-specific parameters) |
| C6:74 | Electronic maximum flow temperature limited to 74 °C (only for weather-compensated control units) | C6:10 to C6:127 | Maximum limit adjustable from 10 to 127 °C (limited by boiler-specific parameters) |
| d3:14 | Heating curve slope = 1.4 | d3:2 to | Heating curve slope adjustable from 0.2 to 3.5 (see page 40) |

Heating circuit 1, heating circuit 2, heating... (cont.)

| Coding in the delivered condition | | Possible change | |
|-----------------------------------|---|-----------------------|---|
| | | d3:35 | |
| d4:0 | Heating curve level = 0 | d4:–13 to d4:40 | Heating curve level adjustable from –13 to 40 (see page 40) |
| d5:0 | The external operating program changeover switches the operating program to "Constant operation with reduced room temperature" or "Standby mode" (only for weather-compensated control units) | d5:1 | The external operating program changeover switches to "Constant operation with standard room temperature" (subject to coding address 3A, 3b and 3C) |
| d6:0 | Heating circuit pump stays in control mode at signal "External blocking" | d6:1 | Heating circuit pump stops at signal "External blocking" (subject to coding addresses 3A, 3b and 3C) |
| | | d6:2 | Heating circuit pump starts at signal "External blocking" (subject to coding addresses 3A, 3b and 3C) |
| d7:0 | Heating circuit pump stays in control mode at signal "External demand" | d7:1 | Heating circuit pump stops at signal "External demand" (subject to coding addresses 3A, 3b and 3C) |
| | | d7:2 | Heating circuit pump starts at signal "External demand" (subject to coding addresses 3A, 3b and 3C) |
| d8:0 | No operating program changeover via extension EA1 | d8:1 | Operating program changeover via input DE1 at extension EA1 |
| | | d8:2 | Operating program changeover via input DE2 at extension EA1 |
| | | d8:3 | Operating program changeover via input DE3 at extension EA1 |
| E1:1 | Do not adjust | | |
| E2:50 | With remote control: No display correction for the actual room temperature (only for weather-compensated control units) | E2:0 to E2:49 | Display correction –5 K to Display correction –0.1 K |
| | | E2:51 to E2:99 | Display correction +0.1 K to Display correction +4.9 K |
| E5:0 | Do not adjust | | |
| F1:0 | Screed drying disabled (only for weather-compensated control units). | F1:1 to F1:6 | Screed drying adjustable in accordance with 6 selectable temperature/time profiles (see page 98) |
| | | F1:15 | Constant flow temperature 20 °C |
| F2:8 | Time limit for party mode or external operating program changeover via button: 8 h (only for weather-compensated control units)* ¹ | F2:0 | No time limit for party mode* ¹ |
| | | F2:1 to F2:12 | Time limit adjustable from 1 to 12 h* ¹ |
| F5:12 | Boiler circuit pump run-on time in heating mode: 12 min (only for constant temperature control units) | F5:0 | No boiler circuit pump run-on time |
| | | F5:1 to F5:20 | Boiler circuit pump run-on time adjustable from 1 to 20 min |
| | | | |

*¹ In the "Heating and DHW" program, party mode ends **automatically** when the system changes over to operation with standard room temperature.

Heating circuit 1, heating circuit 2, heating... (cont.)

| Coding in the delivered condition | | Possible change | |
|-----------------------------------|--|------------------|--|
| F6:25 | In "Only DHW" operating mode, the boiler circuit pump is constantly on (only for constant temperature control units) | F6:0 | In "Only DHW" mode, the boiler circuit pump is constantly off |
| | | F6:1 to F6:24 | In "Only DHW" mode, the boiler circuit pump is started 1 to 24 times per day for 10 min each time. |
| F7:25 | In "Standby mode", the boiler circuit pump is constantly on (only for constant temperature control units) | F7:0 | In "Standby mode", the boiler circuit pump is constantly off |
| | | F7:1 to F7:24 | In "Standby mode", the boiler circuit pump is started 1 to 24 times per day for 10 min each time. |
| F8:-5 | Temperature limit for terminating the reduced mode -5 °C, see example on page 100. Observe the setting of coding address "A3". (only for weather-compensated control units) | F8:+10 to F8:-60 | Temperature limit adjustable from +10 to -60 °C |
| | | F8:-61 | Function disabled |
| F9:-14 | Temperature limit for raising the reduced set room temperature -14 °C, see example on page 100. (only for weather-compensated control units) | F9:+10 to F9:-60 | Temperature limit for raising the set room temperature to the value selected for standard mode adjustable from +10 to -60 °C |
| FA:20 | Raising the set boiler water temperature or set flow temperature by 20 % when changing from operation with reduced room temperature to operation with standard room temperature. See example on page 100 (only for weather-compensated control units). | FA:0 to FA:50 | Temperature rise adjustable from 0 to 50 % |
| Fb:60 | Duration for raising the set boiler water temperature or set flow temperature (see coding address "FA") 60 min. See example on page 100 (only for weather-compensated control units). | Fb:0 to Fb:300 | Duration adjustable from 0 to 300 min; |

Service level

Weather-compensated control unit

Constant temperature control unit

Calling up the service level

Service menu:

1. Press **OK** and **≡**: simultaneously for approx. 4 s.
2. Select required menu. See the following diagram.

Service menu:

1. Press **OK** and **≡**: simultaneously for approx. 4 s. "⚙" flashes on the display.
2. Select required function. See the following pages.

Exiting the service level

Service menu:

1. Select **"Terminate service?"**.
2. Select **"Yes"**.
3. Confirm with **OK**.

Service menu:

1. Select **"Serv"** ⑦ with **▶**.
2. Confirm with **OK**. "OFF" flashes.
3. Confirm with **OK**.

Note

The system exits the service level automatically after 30 min.

Note

The system exits the service level automatically after 30 min.

Overview of service menu for weather-compensated mode

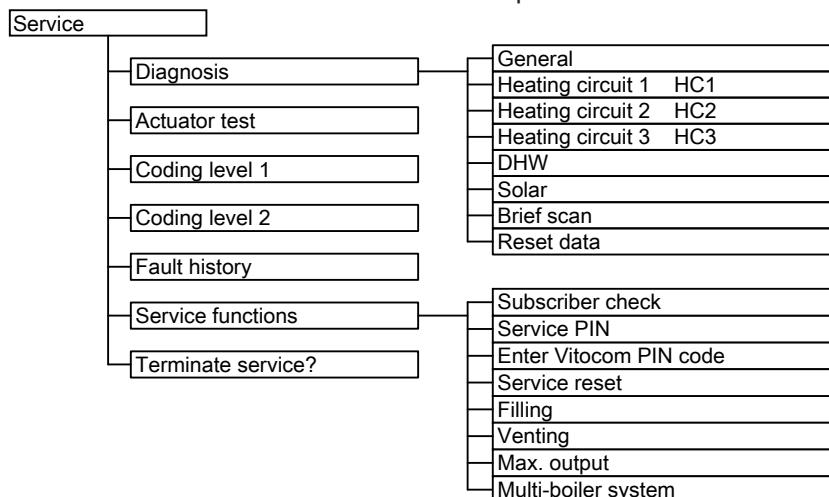


Fig. 41

Note

Do **not** adjust menu item **"Multi-boiler system"**. The menu item turns a weather-compensated control unit into a constant temperature control unit.

Diagnosis

Operating data

Weather-compensated control unit

Constant temperature control unit

Calling up operating data

- Operating data can be scanned in six areas. See **"Diagnosis"** in the service menu overview.
- Operating data on heating circuits with mixers and solar can only be called up if the components are installed in the system.
- For further information on operating data, see chapter "Brief scan".

- Operating data can be called up in the **"i"** menu.
- For further information on operating data, see chapter "Brief scan".

Diagnosis (cont.)

Weather-compensated control unit

Constant temperature control unit

Calling up operating data

- Service menu:
1. Press **OK** and **≡** simultaneously for approx. 4 s.
 2. **"Diagnosis"**
 3. Select required group, e.g. **"General"**.

Note
 "- - -" appears on the display if a sensor that has been scanned is faulty.

- Service menu:
1. Press **OK** and **≡** simultaneously for approx. 4 s.
 2. Select required information with **▲/▼**.

Note
 "- - -" appears on the display if a sensor that has been scanned is faulty.

Resetting operating data

- Saved operating data (e.g. hours run) can be reset to **"0"**.
 The value "Adjusted outside temp" is reset to the actual value.
- Service menu:
1. Press **OK** and **≡** simultaneously for approx. 4 s.
 2. **"Diagnosis"**
 3. **"Reset data"**
 4. Select required value (e.g. **"Burner starts"**) or **"All details"**.

- Saved operating data (e.g. hours run) can be reset to **"0"**.
- Service menu:
1. Press **OK** and **≡** simultaneously for approx. 4 s.
 2. Select required information with **▲/▼**.
 3. Confirm with **OK**; "⚡" flashes.
 4. Confirm with **OK**; the value is reset.

Brief scan

In the brief scan, you can scan temperatures, software versions and connected components, for example.

Weather-compensated control unit

1. Press **OK** and **≡** simultaneously for approx. 4 s.
2. **"Diagnosis"**
3. **"Brief scan"**.
4. Press **OK**.
 The display shows 9 lines with 6 fields each.

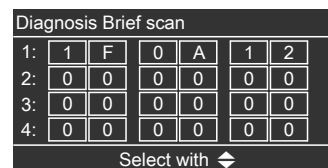


Fig. 42


For an explanation of the relevant values in the individual lines and fields, see the following table:

| Line (brief scan) | Field | | | | | |
|-------------------|---------------------------------------|---|--------------------------------|---|--|---------------------------------|
| | 1 | 2 | 3 | 4 | 5 | 6 |
| 1: | System scheme 01 to 10 | | Software version, control unit | | Software version, programming unit | |
| 2: | 0 | 0 | Appliance version | | Device identification ZE-ID | |
| 3: | 0 | | Number of KM BUS subscribers | | Software version, solar control module SM1 | |
| 4: | Software version, burner control unit | | Type Burner control unit | | Burner control unit version | |
| 5: | Internal details for calibration | | | 0 | Software version, extension AM1 | Software version, extension EA1 |



Diagnosis (cont.)

| Line (brief scan) | Field | | | | | |
|-------------------|---|--|--|---|--|---|
| | 1 | 2 | 3 | 4 | 5 | 6 |
| 6: | 0 | 0 | 0 | Flow rate sensor switching state 1: Flow rate too low or not present | 0 | 0 |
| 7: | LON Subnet address/system number | | LON Node address | | 0 | |
| 8: | LON SBVT configuration | LON Software version communication coprocessor | LON Neuron chip software version | | Number of LON subscribers | |
| 9: | Heating circuit A1 (without mixer) Remote control 0: w/o 1: Vitotrol 200A/ 200 RF 2: Vitotrol 300 A/ 300 RF or Vitocomfort | | Heating circuit M2 (with mixer) Remote control 0: w/o 1: Vitotrol 200A/ 200 RF 2: Vitotrol 300 A/ 300 RF or Vitocomfort | | Heating circuit M3 (with mixer) Remote control 0: w/o 1: Vitotrol 200A/ 200 RF 2: Vitotrol 300 A/ 300 RF or Vitocomfort | |
| 10: | 0 | 0 | 0 | 0 | 0 | 0 |
| 11: | 0 | 0 | Software version, mixer extension heating circuit M2 0: No mixer extension | 0 | Software version, mixer extension heating circuit M3 0: No mixer extension | 0 |

Constant temperature control unit







1. Press **OK** and  simultaneously for approx. 4 s. "P" flashes on the display.

2. Confirm with **OK**.

3. Select the required scan with /. For example, "b" for "Max. heating output" (see following table):

4. Confirm selected scan with **OK**.

For explanations of individual scans, see the following table:

| Brief scan | Display | | | | |
|---|---|---|---|---|---|
|  |  |  |  |  |  |
| 0 | | System scheme 1 to 2 | Software version, control unit | | Software version, programming unit |
| 1 | | | Adjusted outside temperature | | |
| 3 | | | Set boiler water temperature | | |
| 4 | | | Common demand temperature | | |
| 5 | | | Set cylinder temperature | | |

Diagnosis (cont.)

| Brief scan | Display | | | | |
|---------------------------------|--|--|---|---|---|
| 6 | | Number of KM BUS subscribers | | Number of LON subscribers | |
| 7 | SNVT configuration 0: Auto 1: Tool | Software version, communication coprocessor | | Software version, LON module | |
| 8 | | Subnet address/system number | Node address | | |
| 9 | | Burner control unit type | Device type | | |
| A | | Flow switch switching state 1: Flow rate too low or not present | Max. heating output in % | | |
| b | | Boiler coding card (hexadecimal) | | | |
| c | | Flow rate (specified in l/h) | | | |
| C | | Version Device | Version Burner control unit | | |
| d | | | | 0 | 0 |
| E ① | Software version, solar control module, type SM1 | Software version, burner control unit | | | Software version, cascade module |
| F ① | Code 53 setting | Internal details for calibration | | | |
| Extension AM1 | | | | | |
| F ② | Software version | Output A1 configuration (value corresponds to code 33 setting) | Output A1 switching state 0: OFF 1: ON | Output A2 configuration (value corresponds to code 34 setting) | Output A2 switching state 0: OFF 1: ON |
| EA1 extension | | | | | |
| F ③ | Output 157 configuration (value corresponds to setting of code 36 in group 1 "General") | Output 157 switching state 0: OFF 1: ON | Input DE1 switching state 0: open 1: closed | Input DE2 switching state 0: open 1: closed | Input DE3 switching state 0: open 1: closed |
| F ④ | Software version | | External hook-up 0 - 10 V Display in % | | |
| Solar control module SM1 | | | | | |
| F ⑤ | Stagnation time of the solar thermal system in h | | | | |
| F ⑥ | Night circulation, solar thermal system (number) | | | | |
| F ⑦ | Differential temperature monitoring | | | | |
| F ⑧ | | | | Solar central heating backup 0: disabled 1: enabled | Output 22 switching state 0: OFF 1: ON |

Diagnosis (cont.)

| Brief scan | Display | | | | |
|---|-----------------------|-------------------------|---|--|--|
| | | | | | |
| OpenTherm extension (if installed) | | | | | |
| F ⑨ | Software ver- sion | DHW heating sta- tus | External hook-up 0 - 10 V Display in % | | |

Checking outputs (relay test)

Weather-compensated control unit

1. Press **OK** and simultaneously for approx. 4 s.
2. **"Actuator test"**

The following relay outputs can be controlled subject to system design:

| Display | | Explanation |
|-----------------------|-------|---|
| All actuators | Off | All actuators are off |
| Base load | On | Burner operated at minimum output; circulation pump is started |
| Full load | On | Burner operated at maximum output; circulation pump is started |
| Output, internal | On | Output active (boiler circuit pump) |
| Output 21/28 | On | Output active (circulation pump for cylinder heating) |
| Heating circ pump HC2 | On | Heating circuit pump output enabled (extension to heating circuit with mixer) |
| Mixer HC2 | Open | "Mixer open" output enabled (extension to heating circuit with mixer) |
| Mixer HC2 | Close | "Mixer close" output enabled (extension to heating circuit with mixer) |
| Heating circ pump HC3 | On | Heating circuit pump output enabled (extension to heating circuit with mixer) |
| Mixer HC3 | Open | "Mixer open" output enabled (extension to heating circuit with mixer) |
| Mixer HC3 | Close | "Mixer close" output enabled (extension to heating circuit with mixer) |
| Outp. int. exten. H1 | On | Output at internal extension enabled |
| AM1 output 1 | On | Output A1 at extension AM1 enabled |
| AM1 output 2 | On | Output A2 at extension AM1 enabled |
| EA1 output 1 | On | Contact P - S at plug of extension EA1 closed |
| Solar circuit pump | On | Solar circuit pump output on solar control module SM1 active |
| Solar circ pmp min | On | Solar circuit pump output on solar control module SM1 switched to minimum speed |
| Solar circ pmp max | On | Solar circuit pump output on solar control module SM1 switched to maximum speed |
| SM1 output 22 | On | Output on solar control module SM1 active |

Constant temperature control unit

1. Press **OK** and simultaneously for approx. 4 s.
"" flashes on the display.
2. Select "" with and confirm with **OK**.
3. Select required actuator (output) with / (see following table):
4. Confirm selected actuator with **OK**.
The display shows the number for the activated actuator and **"ON"**.

Checking outputs (relay test) (cont.)

The following actuators (relay outputs) can be controlled subject to system design:

| Display | Explanation |
|---------|---|
| 0 | All actuators are off |
| 1 | Burner operated at minimum output; circulation pump is started |
| 2 | Burner operated at maximum output; circulation pump is started |
| 3 | Output 20 active (boiler circuit pump) |
| 10 | Internal extension output enabled |
| 15 | Solar circuit pump output 24 on solar control module SM1 active |
| 16 | Solar circuit pump output on solar control module SM1 switched to minimum speed |
| 17 | Solar circuit pump output on solar control module SM1 switched to maximum speed |
| 18 | Output 22 on solar control module SM1 active |
| 19 | Contact P - S at plug 157 of extension EA1 closed |
| 20 | Output A1 at extension AM1 enabled |
| 21 | Output A2 at extension AM1 enabled |
| 22 | Output 21 active (circulation pump for cylinder heating) |

Fault display

Weather-compensated control unit

In the event of a fault, red fault indicator (A) flashes. "△" flashes on the display and "Fault" is shown.

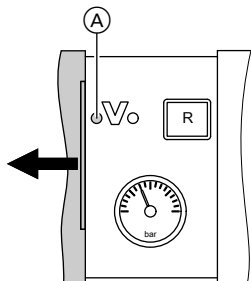


Fig. 43

The fault code is displayed with **OK**. For an explanation of the fault code, see the following pages. For some faults, the type of fault is also displayed in plain text.

Acknowledging a fault

Follow the instructions on the display.

Note

- The fault message is transferred to the standard menu.
- Any fault message facility, if connected, will be switched off.
- If an acknowledged fault is not remedied, the fault message will be re-displayed the following day and the fault message facility restarted.

Constant temperature control unit

In the event of a fault, red fault indicator (A) flashes. The two-digit fault code and (subject to the type of fault) "△" or "⚡" flash on the programming unit display.

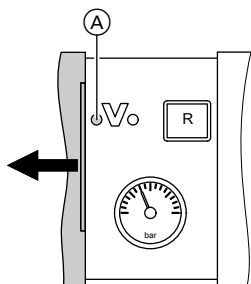


Fig. 44

Other current faults can be displayed with ▲/▼. For an explanation of the fault codes, see the following pages.

Calling up acknowledged faults

Select **"Fault"** in the standard menu. The current faults will be displayed in a list.

Calling up fault codes from the fault memory (fault history)

The 10 most recent faults (including resolved ones) are saved and can be scanned. Faults are sorted by date.

1. Press **OK** and **≡**: simultaneously for approx. 4 s.
2. **"Fault history"**
3. **"Display?"**

Deleting fault history

1. Press **OK** and **≡**: simultaneously for approx. 4 s.
2. **"Fault history"**
3. **"Delete?"**

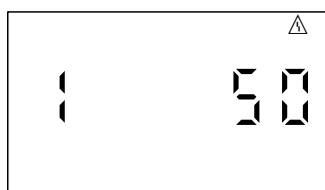


Fig. 45 Example: Fault code "50"

Acknowledge a fault

Press **OK**; the standard display is shown again. A fault message facility, if connected, will be switched OFF.

If an acknowledged fault is not remedied, the fault message will be re-displayed the following day and the fault message facility restarted.

Calling up acknowledged faults

Press **OK** for approx. 4 s.


Fault display (cont.)

The 10 most recent faults (including resolved ones) are saved and can be called up.

Calling up fault codes from the fault memory (fault history)


The 10 most recent faults (including those remedied) are saved and can be called up. Faults are sorted by date.

1. Press **OK** and  simultaneously for approx. 4 s.


2. Select "" and activate fault history with **OK**.

3. Select fault messages with /.

Deleting fault history

While the list is displayed, press **OK** until  flashes. Confirm with **OK**.


Fault codes

| Displayed fault code | Const. | Weath.-comp. | System characteristics | Cause | Measures |
|----------------------|--------|--------------|---|--|---|
| 10 | X | X | Controls as if the outside temperature were 0 °C | Short circuit, outside temperature sensor | Check outside temperature sensor (see page 86) |
| 18 | X | X | Controls as if the outside temperature were 0 °C | Lead break, outside temperature sensor | Check outside temperature sensor (see page 86) |
| 19 | X | X | Controls as if the outside temperature were 0 °C | Communication interruption, outside temperature sensor RF (outside temperature sensor RF, KM BUS to wireless base station, wireless base station or wireless repeater faulty or defective) | <p>Check wireless connection (place outside temperature sensor RF and wireless repeater close to the boiler). Check KM BUS to wireless base station. Log off outside temperature sensor and wireless repeater, then log them on again.</p> <p> Wireless base station</p> <p>Replace outside temperature sensor RF. Replace wireless repeater. Replace wireless base station.</p> |
| 20 | X | X | Regulates without flow temperature sensor (low loss header) | Short circuit, system flow temperature sensor | Check low loss header sensor (see page 87) |
| 28 | X | X | Regulates without flow temperature sensor (low loss header) | Lead break, system flow temperature sensor | Check low loss header sensor (see page 87) If no low loss header sensor is connected, set code 52:0. |
| 30 | X | X | Burner blocked | Short circuit, boiler water temperature sensor | Check boiler water temperature sensors (see page 87) |

Fault codes (cont.)

| Displayed fault code | Const. | Weath.-comp. | System characteristics | Cause | Measures |
|----------------------|--------|--------------|------------------------------|--|--|
| 38 | X | X | Burner blocked | Lead break, boiler water temperature sensor | Check boiler water temperature sensors (see page 87) |
| 40 | | X | Mixer closes | Short circuit, flow temperature sensor, heating circuit 2 (with mixer) | Check flow temperature sensor (see page 90) |
| 44 | | X | Mixer closes | Short circuit, flow temperature sensor, heating circuit 3 (with mixer) | Check flow temperature sensor (see page 90) |
| 48 | | X | Mixer closes | Lead break, flow temperature sensor, heating circuit 2 (with mixer) | Check flow temperature sensor (see page 90) |
| 4C | | X | Mixer closes | Lead break, flow temperature sensor, heating circuit 3 (with mixer) | Check flow temperature sensor (see page 90) |
| 50 | X | X | No DHW heating by the boiler | Short circuit, cylinder temperature sensor | Check cylinder temperature sensor (see page 87) |
| 58 | X | X | No DHW heating by the boiler | Lead break, cylinder temperature sensor | Check cylinder temperature sensor (see page 87) |
| 90 | X | X | Control mode | Short circuit, temperature sensor 7 | Check sensor 7 on solar control module. |
| 91 | X | X | Control mode | Short circuit, temperature sensor 10 | Check sensor 10 on solar control module. |
| 92 | X | X | No solar DHW heating | Short circuit, collector temperature sensor | Check temperature sensor 6 on solar control module or sensor on the Vitosolic. |
| 93 | X | X | Control mode | Short circuit, cylinder temperature sensor | Check temperature sensor at connection S3 on the Vitosolic. |
| 94 | X | X | No solar DHW heating | Short circuit, cylinder temperature sensor | Check temperature sensor 5 on solar control module or sensor on the Vitosolic. |
| 98 | X | X | Control mode | Lead break, temperature sensor 7 | Check sensor 7 on solar control module. |
| 99 | X | X | Control mode | Lead break, temperature sensor 10 | Check sensor 10 on solar control module. |
| 9 A | X | X | No solar DHW heating | Lead break, collector temperature sensor | Check temperature sensor 6 on solar control module or sensor on the Vitosolic. |
| 9b | X | X | Control mode | Lead break, cylinder temperature sensor | Check temperature sensor at connection S3 on the Vitosolic. |

Fault codes (cont.)

| Displayed fault code | Const. | Weath.-comp. | System characteristics | Cause | Measures |
|----------------------|--------|--------------|--|--|--|
| 9C | X | X | No solar DHW heating | Lead break, cylinder temperature sensor | Check temperature sensor  on solar control module or sensor on the Vitosolic. |
| 9E | X | X | Control mode | No flow rate in collector circuit or flow rate too low, or temperature limiter has responded | Check solar circuit pump and solar circuit. Acknowledge fault message. |
| 9F | X | X | Control mode | Solar control module or Vitosolic faulty | Replace solar control module or Vitosolic |
| A3 | | X | Burner blocked. | Flue gas temperature sensor not positioned correctly. | Install flue gas temperature sensor correctly (see page 88). |
| A4 | | X | Control mode | Max. system pressure exceeded | Check system pressure (max. system pressure 3 bar (0.3 MPa)). Check the function and sizing of the diaphragm expansion vessel. Vent the heating system. |
| A7 | | X | Control mode as per delivered condition | Programming unit faulty | Replace programming unit |
| b0 | X | X | Burner blocked | Short circuit, flue gas temperature sensor | Check flue gas temperature sensor |
| b1 | X | X | Control mode as per delivered condition | Communication error, programming unit | Check connections and replace programming unit if required |
| b5 | X | X | Control mode as per delivered condition | Internal fault | Replace the control unit |
| b7 | X | X | Burner blocked | Boiler coding card faulty | Plug in boiler coding card or replace if faulty |
| b8 | X | X | Burner blocked | Lead break, flue gas temperature sensor | Check flue gas temperature sensor |
| bA | | X | Mixer regulates to 20 °C flow temperature. | Communication error, extension kit for heating circuit 2 (with mixer) | Check extension kit connections and code. |
| bb | | X | Mixer regulates to 20 °C flow temperature. | Communication error, extension kit for heating circuit 3 (with mixer) | Check extension kit connections and code. |

Fault codes (cont.)

| Displayed fault code | Const. | Weath.-comp. | System characteristics | Cause | Measures |
|----------------------|--------|--------------|-------------------------------------|--|---|
| bC | | X | Control mode without remote control | Communication error, remote control Vitotrol heating circuit 1 (without mixer) | Check connections, cable, coding address "A0" in "Heating circuit" group and remote control settings (see page 101). For wireless remote controls: Check radio path connections, place wireless remote control and wireless repeater close to the boiler. Check KM BUS connection to wireless base station. Replace wireless components. |
| bd | | X | Control mode without remote control | Communication error, remote control Vitotrol heating circuit 2 (with mixer) | Check connections, cable, coding address "A0" in "Heating circuit" group and remote control settings (see page 101). For wireless remote controls: Check radio path connections, place wireless remote control and wireless repeater close to the boiler. Check KM BUS connection to wireless base station. Replace wireless components. |
| bE | | X | Control mode without remote control | Communication error, remote control Vitotrol heating circuit 3 (with mixer) | Check connections, cable, coding address "A0" in "Heating circuit" group and remote control settings (see page 101). For wireless remote controls: Check radio path connections, place wireless remote control and wireless repeater close to the boiler. Check KM BUS connection to wireless base station. Replace wireless components. |
| bF | | X | Control mode | Incorrect LON communication module | Replace LON communication module |
| C1 | X | X | Control mode | Communication error, extension EA1 | Check connections |
| C2 | X | X | Control mode | Communication error, solar control module or Vitosolic | Check solar control module or Vitosolic |
| C3 | X | X | Control mode | Communication error, extension AM1 | Check connections |
| C4 | X | X | Control mode | Communication error, OpenTherm extension | Check OpenTherm extension |

Fault codes (cont.)

| Displayed fault code | Const. | Weath.-comp. | System characteristics | Cause | Measures |
|----------------------|--------|--------------|-------------------------------------|---|--|
| Cd | X | X | Control mode | Communication error, Vitocom 100, type GSM | Check connections, Vitocom 100 and coding address "95" in group "General"/1 |
| CF | | X | Control mode | Communication error, LON communication module | Replace LON communication module |
| d6 | X | X | Control mode | Input DE1 reports a fault at extension EA1 | Remove fault at appliance concerned |
| d7 | X | X | Control mode | Input DE2 at extension EA1 reports a fault | Remove fault at appliance concerned |
| d8 | X | X | Control mode | Input DE3 at extension EA1 reports a fault | Remove fault at appliance concerned |
| dA | | X | Control mode without room influence | Short circuit, room temperature sensor, heating circuit 1 (without mixer) | Check room temperature sensor, heating circuit 1 |
| db | | X | Control mode without room influence | Short circuit, room temperature sensor, heating circuit 2 (with mixer) | Check room temperature sensor, heating circuit 2 |
| dC | | X | Control mode without room influence | Short circuit, room temperature sensor, heating circuit 3 (with mixer) | Check room temperature sensor, heating circuit 3 |
| dd | | X | Control mode without room influence | Lead break, room temperature sensor, heating circuit 1 (without mixer) | Check room temperature sensor for heating circuit 1 and remote control settings (see page 101) |
| dE | | X | Control mode without room influence | Lead break, room temperature sensor, heating circuit 2 (with mixer) | Check room temperature sensor for heating circuit 2 and remote control settings (see page 101) |
| dF | | X | Control mode without room influence | Lead break, room temperature sensor, heating circuit 3 (with mixer) | Check room temperature sensor for heating circuit 3 and remote control settings (see page 101) |
| E0 | | X | Control mode | Fault, external LON subscriber | Check connections and LON subscribers |
| E1 | X | X | Burner in a fault state | Ionisation current too high during calibration | Check gap between ionisation electrode and burner gauze assembly (see page 32). In open flue operation, prevent high incidence of dust in the combustion air. Press reset button R . |



Fault codes (cont.)

| Displayed fault code | Const. | Weath.-comp. | System characteristics | Cause | Measures |
|----------------------|--------|--------------|-------------------------|---|---|
| E2 | X | X | Burner in a fault state | Heating water flow rate too low during calibration. Flow switch caused shutdown. | Ensure adequate circulation volume. Check flow switch. Remove scaling, blockage. Press reset button R . |
| E3 | X | X | Burner in a fault state | Heat transfer too low during calibration. Temperature limiter caused shutdown. | Ensure adequate heat transfer. Press reset button R . |
| E4 | X | X | Burner blocked | Fault, supply voltage 24 V | Replace control unit. |
| E5 | X | X | Burner blocked | Fault, flame amplifier | Replace control unit. |
| E6 | X | X | Burner blocked | System pressure too low | Top up with water. |
| E7 | X | X | Burner in a fault state | Ionisation current too low during calibration | Check ionisation electrode: <ul style="list-style-type: none"> ▪ Distance to burner gauze assembly (see page 32) ▪ Contamination of electrode ▪ Connecting lead and plug-in connections Check flue system; remedy flue gas recirculation if required. Press reset button R . |
| E8 | X | X | Burner in a fault state | The ionisation current lies outside the permissible range | Check gas supply (gas pressure and gas flow switch), gas train and connecting lead. Check allocation of gas type (see page 26). Check ionisation electrode: <ul style="list-style-type: none"> ▪ Distance to burner gauze assembly (see page 32) ▪ Contamination of electrode Press reset button R . |

Fault codes (cont.)

| Displayed fault code | Const. | Weath.-comp. | System characteristics | Cause | Measures |
|----------------------|--------|--------------|-------------------------|---|--|
| EA | X | X | Burner in a fault state | Ionisation current outside permissible range during calibration (deviation from previous level too great) | Check flue system; remedy flue gas recirculation if required. In open flue operation, prevent high incidence of dust in the combustion air. Press reset button R . Following several unsuccessful reset attempts, replace boiler coding card and press reset button R . |
| Eb | X | X | Burner in a fault state | Repeated flame loss during calibration | Check gap between ionisation electrode and burner gauze assembly (see page 32). Check allocation of gas type (see page 26). Check flue system; remedy flue gas recirculation if required. Press reset button R . |
| EC | X | X | Burner in a fault state | Parameter fault during calibration | Press reset button R or Replace boiler coding card and Press reset button R . |
| Ed | X | X | Burner in a fault state | Internal fault | Replace control unit. |
| EE | X | X | Burner in a fault state | Flame signal is not present or too weak at burner start. | Check gas supply (gas pressure and gas flow switch). Check gas train. Check ionisation electrode and connecting cable. Check ignition: <ul style="list-style-type: none"> ▪ Connecting leads to ignition module and ignition electrode ▪ Ignition electrode gap and contamination (see page 32). Check condensate drain. Press reset button R . |



Fault codes (cont.)

| Displayed fault code | Const. | Weath.-comp. | System characteristics | Cause | Measures |
|----------------------|--------|--------------|-------------------------|--|--|
| EF | X | X | Burner in a fault state | Flame is lost immediately after it has formed (during the safety time). | Check gas supply (gas pressure and gas flow switch). Check balanced flue system for flue gas recirculation. Check ionisation electrode (replace if required): <ul style="list-style-type: none"> ▪ Distance to burner gauze assembly (see page 32) ▪ Contamination of electrode Press reset button R . |
| F0 | X | X | Burner blocked | Internal fault | Replace control unit. |
| F1 | X | X | Burner in a fault state | Flue gas temperature has exceeded limit. | Check heating system fill level. Vent the system. Press reset button R after flue system has cooled down. |
| F2 | X | X | Burner in a fault state | Boiler water temperature sensor has responded. | Check heating system fill level. Check circulation pump. Vent the system. Check boiler water temperature sensor and connecting cables. Press reset button R . |
| F3 | X | X | Burner in a fault state | Flame signal is already present at burner start. | Check ionisation electrode and connecting cable. Press reset button R . |
| F6 | X | X | Burner in a fault state | Boiler water temperature sensor temperature values vary too widely from one another. | Replace boiler water temperature sensors |
| F8 | X | X | Burner in a fault state | Fuel valve closes too late. | Check gas train. Check both control paths. Press reset button R . |
| F9 | X | X | Burner in a fault state | Fan speed too low during burner start | Check fan, fan connecting cables and power supply; check fan control. Press reset button R . |
| FA | X | X | Burner in a fault state | Fan not in idle state | Check fan, fan connecting cables and fan control. Press reset button R . |
| FC | X | X | Burner in a fault state | Gas train faulty, faulty modulation valve control or flue gas path blocked. | Check gas train. Check flue system. Press reset button R . |

Fault codes (cont.)

| Displayed fault code | Const. | Weath.-comp. | System characteristics | Cause | Measures |
|----------------------|--------|--------------|--|--|--|
| Fd | X | X | Burner in a fault state and additional fault b7 is displayed | Boiler coding card is missing | Insert the boiler coding card. Press reset button R . Replace control unit if fault persists. |
| Fd | X | X | Burner in a fault state | Fault, burner control unit | Check ignition electrodes and connecting cables. Check whether a strong interference (EMC) field exists near the appliance. Press reset button R . Replace control unit if fault persists. |
| FE | X | X | Burner blocked or in a fault state | Boiler coding card or main PCB faulty, or incorrect boiler coding card | Press reset button R . If the fault persists, check the boiler coding card and replace boiler coding card or control unit if necessary. |
| FF | X | X | Burner blocked or in a fault state | Internal fault or reset button R blocked | Start the appliance again. Replace the control unit if the appliance will not re-start. |

Faults without fault display

| Fault | Cause | Action |
|--|---|---|
| Burner blocked and 3 displayed in code 38. | Flow rate insufficient. Circulation pump or flow switch faulty, or heat exchanger blocked. | Check circulation pump and flow switch, replacing them if necessary. Flush and clean heat exchanger. |

Checking the outside temperature sensor (weather-compensated control unit)

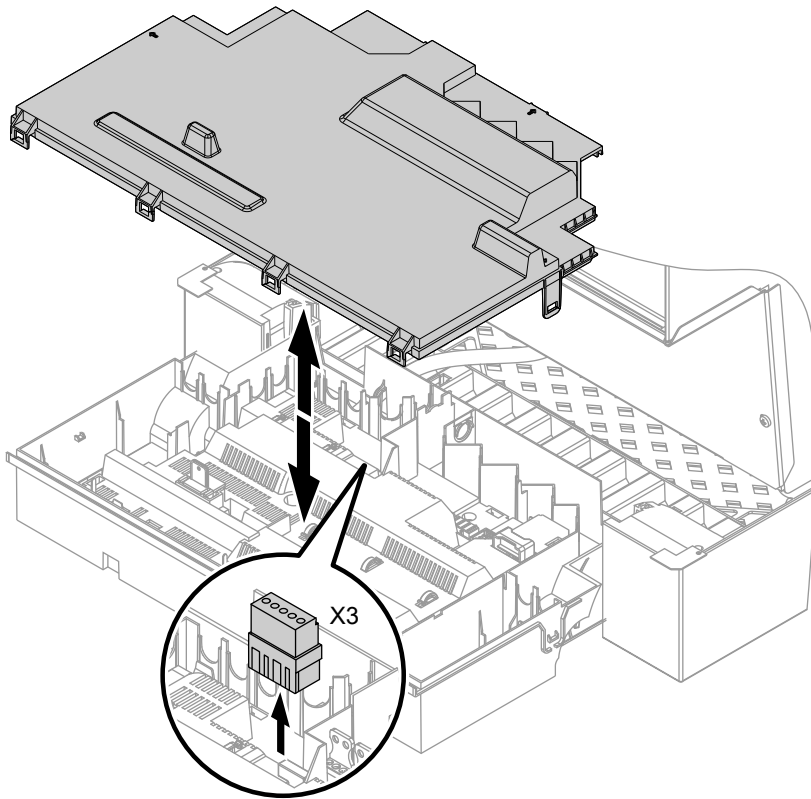


Fig. 46

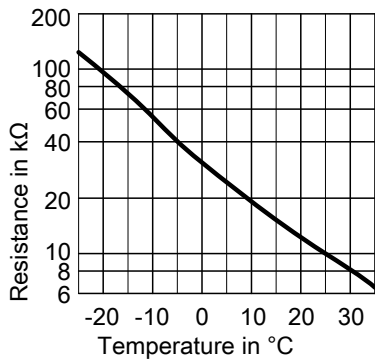


Fig. 47 Sensor type: NTC 10 kΩ

1. Pull plug "X3" from the control unit.
2. Test the resistance of the outside temperature sensor across terminals "X3.1" and "X3.2" on the disconnected plug and compare it with the curve.
3. Where actual values deviate severely from the curve values, disconnect the wires at the sensor and repeat test on the sensor itself.
4. Depending on the result, replace the lead or the outside temperature sensor.

Repair (cont.)

Checking the boiler water temperature sensors, cylinder temperature sensor or flow temperature sensor for the low loss header

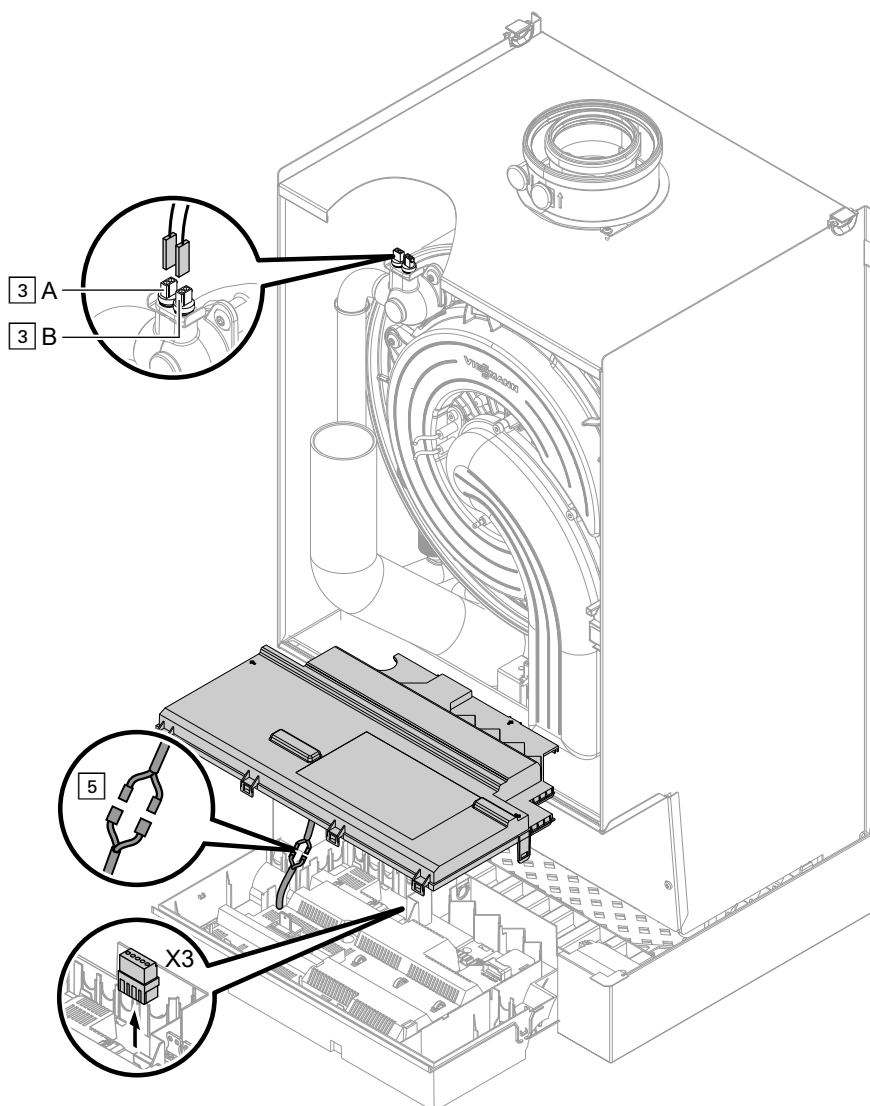


Fig. 48

1. ■ **Boiler water temperature sensor 1**
Pull the leads from boiler water temperature sensor [3]A and check the resistance.
- **Boiler water temperature sensor 2**
Pull the leads from boiler water temperature sensor [3]B and check the resistance.
- **Cylinder temperature sensor**
Pull plug [5] from the cable harness at the control unit and check the resistance.
- **Flow temperature sensor**
Pull plug "X3" from the control unit and check the resistance across terminals "X3.4" and "X3.5".



Repair (cont.)

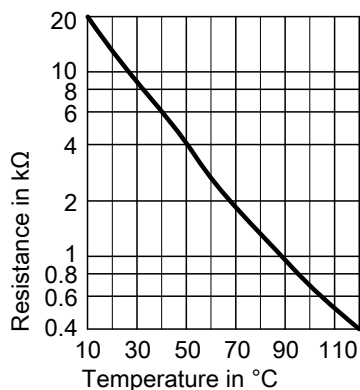


Fig. 49 Sensor type: NTC 10 kΩ

2. Check the sensor resistance and compare it with the curve.
3. Replace the sensor in the case of severe deviation.



Danger

The boiler water temperature sensor is immersed in the heating water (risk of scalding).

Drain the boiler before replacing the sensor.

Checking the flue gas temperature sensor

The flue gas temperature sensor locks out the boiler when the permissible flue gas temperature is exceeded. Reset the interlock after the flue system has cooled down by pressing reset button **R**.

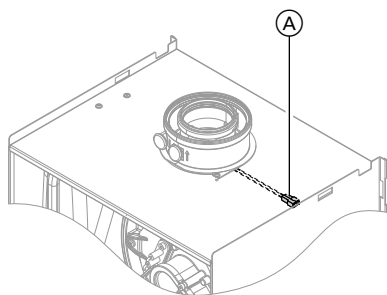


Fig. 50

1. Pull leads from flue gas temperature sensor (A).

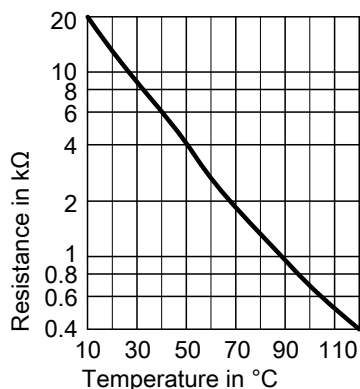


Fig. 51 Sensor type: NTC 10 kΩ

2. Check the sensor resistance and compare it with the curve.
3. Replace the sensor in the case of severe deviation.

Fault during commissioning (fault A3)

During commissioning, the control unit checks correct placement of the flue gas temperature sensor. If commissioning is terminated and fault message A3 is displayed:

1. Check whether the flue gas temperature sensor is correctly inserted. See previous diagram.

2. If necessary, correct the position of the flue gas temperature sensor or replace faulty flue gas temperature sensor.
3. Press reset button **R** and repeat commissioning. The check is repeated until it is completed successfully.

Repair (cont.)

Checking the fuse






Fig. 52

1. Switch off the power.
2. Release the side closures and pivot the control unit down.
3. Remove cover (A).
4. Check fuse F1 (see connection and wiring diagram).

Extension kit, mixer

Checking the setting of rotary selector S1

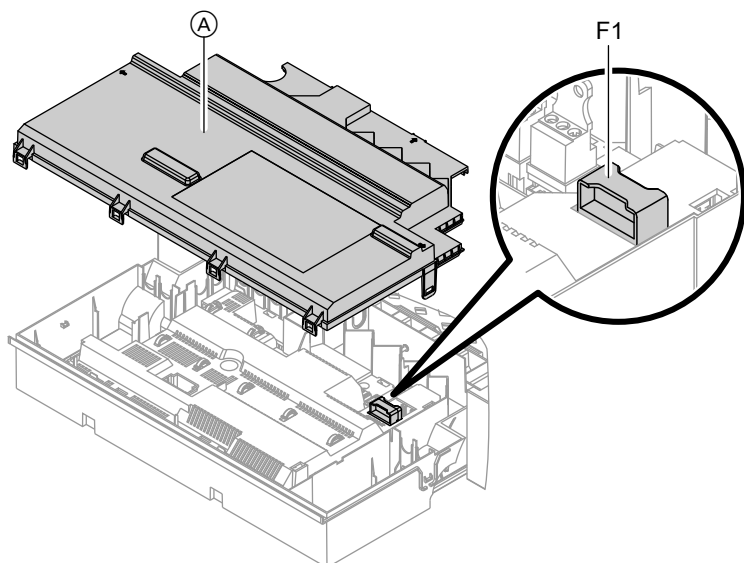The rotary selector on the PCB of the extension kit defines the assignment to the relevant heating circuit.

| Heating circuit | Rotary selector S1 setting |
|---|---|
| Heating circuit with mixer M2 (Heating circuit 2) | 2  |
| Heating circuit with mixer M3 (Heating circuit 3) | 4  |

Checking the rotational direction of the mixer motor

After being switched on, the boiler implements a self-test. During this, the mixer is opened and closed again.

Note

The mixer motor can also be started via the actuator test (see chapter "Checking outputs").

Note the rotational direction of the mixer motor during its self-test. Then set the mixer manually to "Open" again.

Note

The flow temperature sensor must now capture a higher temperature. If the temperature drops, either the motor is turning in the wrong direction or the mixer insert is incorrectly fitted.



Mixer installation instructions

Changing the rotational direction of the mixer motor (if required)




Fig. 53

1. Remove the upper casing cover of the extension kit.



Danger

An electric shock can be life-threatening. Before opening the boiler, disconnect from the mains voltage, e.g. at the fuse or the mains isolator.

2. At plug 52, swap the cores at terminals "▲" and "▼".
3. Refit the casing cover.

Check flow temperature sensor

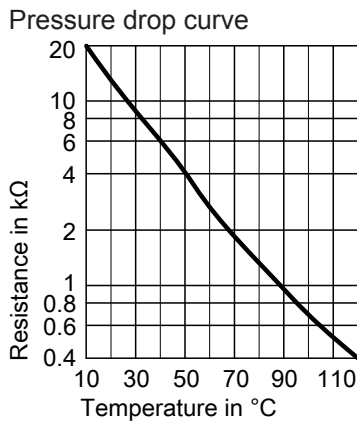


Fig. 54 Sensor type: NTC 10 kΩ

1. Disconnect plug 2 (flow temperature sensor).
2. Check the sensor resistance and compare it with the curve. Replace the sensor in the case of severe deviation.

Check Vitotronic 200-H (accessory)

The Vitotronic 200-H is connected to the control unit via the LON. To test the connection, carry out a subscriber check at the boiler control unit (see page 43).

Constant temperature control unit

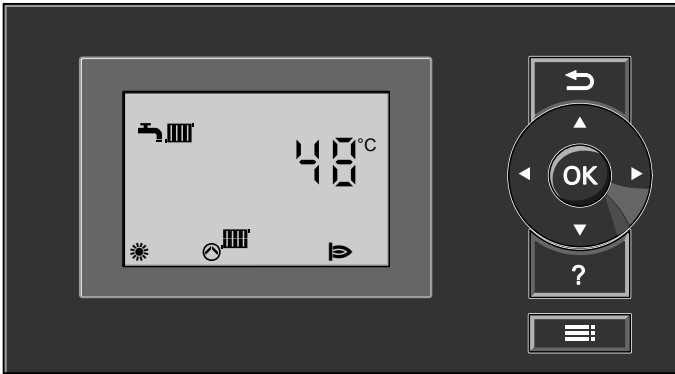


Fig. 55

Heating mode

The selected set boiler water temperature will be maintained when a demand is being raised by the room thermostat and the heating program is set to DHW and central heating "☀️🔥".

The boiler water temperature will be maintained at the default frost protection temperature when there is no demand.

The electronic temperature limiter inside the burner control unit limits the boiler water temperature. Flow temperature setting range: 20 to 74 °C.

DHW heating

The burner and the circulation pump for cylinder heating are started if the cylinder temperature lies 2.5 K below the set cylinder temperature.

In the delivered condition, the set boiler water temperature is 20 K higher than the set DHW temperature (adjustable via coding address "60"). The burner will be switched off and the circulation pump run-on time will begin, if the actual cylinder temperature exceeds the set cylinder temperature by 2.5 K.

Weather-compensated control unit

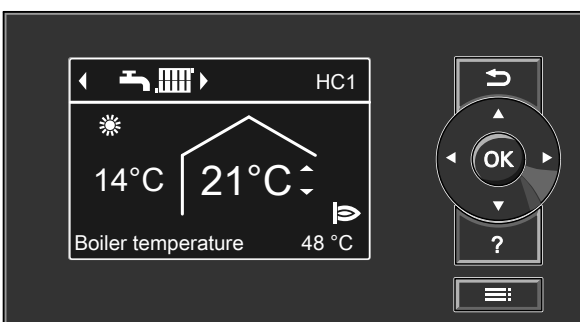


Fig. 56

Heating mode

The control unit determines a set boiler water temperature subject to outside temperature or room temperature (if a room temperature-dependent remote control is connected) and to the slope/level of the heating curve.

The determined set boiler water temperature is transferred to the burner control unit. From the set and actual boiler water temperatures, the burner control unit calculates the modulation level and regulates the burner accordingly.

Internal extensions (accessories) (cont.)

Internal extension H2

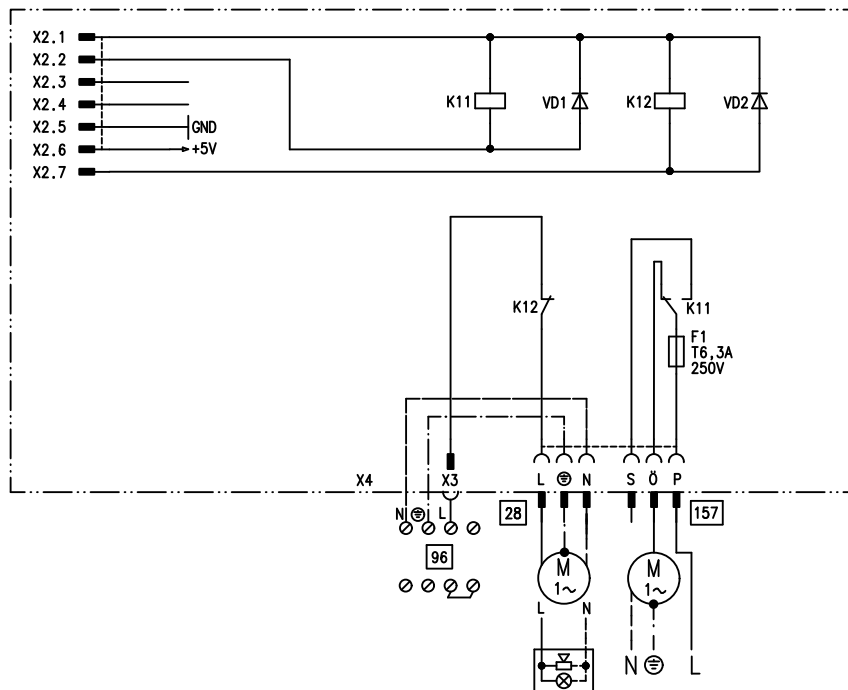


Fig. 58

The internal extension is integrated into the control unit casing. The following alternative functions can be connected to relay output [28]. The function is assigned via coding address "53" in group **"General"**:

- Central fault message (code "53:0")
 - DHW circulation pump (code "53:1") (only for weather-compensated operation)
 - Heating circuit pump for heating circuit without mixer (code "53:2")
 - Circulation pump for cylinder heating (code 53:3)
- An extractor fan can be switched off via connection [157] when the burner starts.

External extensions (accessories)

Extension AM1

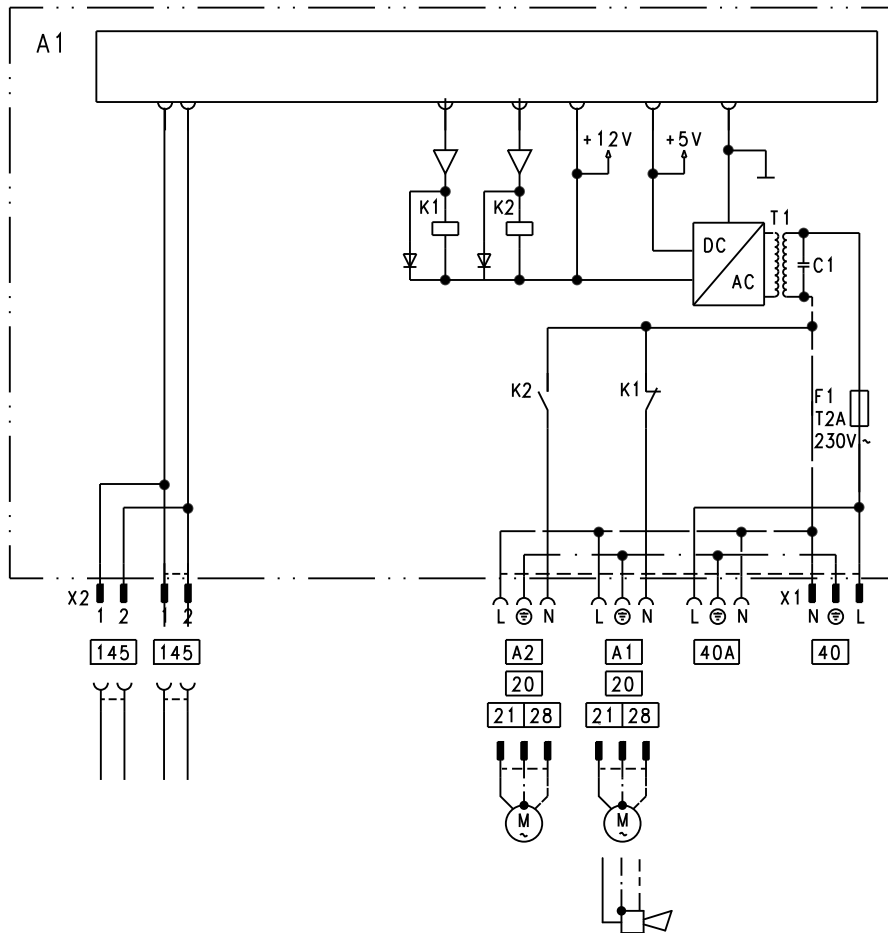


Fig. 59

- A1 Circulation pump
- A2 Circulation pump
- 40 Power supply

- 40 A Power supply for additional accessories
- 145 KM BUS

Functions

One of the following circulation pumps can be connected to each of the connections A1 and A2:

- Heating circuit pump for the heating circuit without mixer
- Circulation pump for cylinder heating
- DHW circulation pump

Select the output functions by means of the codes on the boiler control unit.

Function assignment

| Function | Code ("General" group) | |
|--|----------------------------|----------------------------|
| | Output A1 | Output A2 |
| DHW circulation pump 28 | 33:0 | 34:0 (delivered condition) |
| Heating circuit pump 20 | 33:1 (delivered condition) | 34:1 |
| Circulation pump for cylinder heating 21 | 33:2 | 34:2 |

External extensions (accessories) (cont.)

Extension EA1

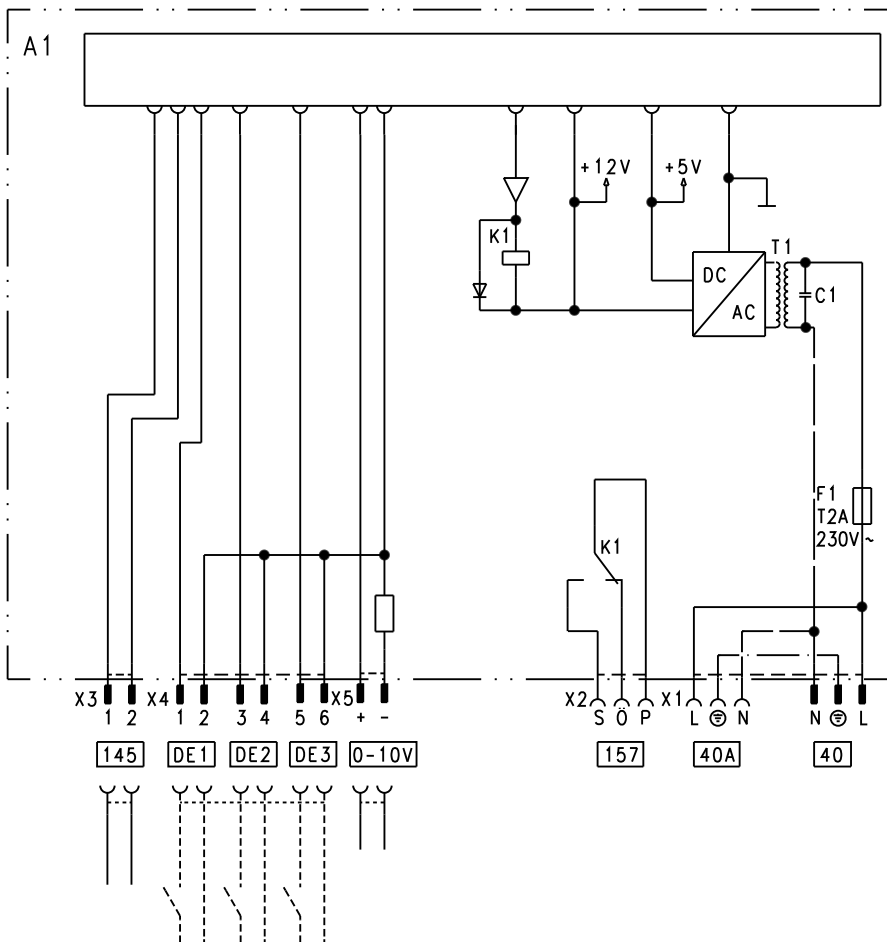


Fig. 60

- A1 PCB
- F1 Fuse/MCB
- DE1 Digital input 1
- DE2 Digital input 2
- DE3 Digital input 3
- 0 – 10 V 0 – 10 V input

- 40 Power supply
- 40 A Power supply for additional accessories
- 157 Central fault message/feed pump/DHW circulation pump (potential-free)
- 145 KM BUS

Digital data inputs DE1 to DE3

The following functions can be connected alternatively:

- External operating program changeover for each heating circuit
- External blocking
- External blocking with fault message input
- External demand with minimum boiler water temperature
- Fault message input
- Brief operation of the DHW circulation pump

External contacts must be floating. When connecting external contacts, observe the requirements of safety category II, i.e. 8.0 mm air and creep path or 2.0 mm insulation thickness to 'live' parts.

Input function assignment

Select the input functions by means of codes in the "General" group at the boiler control unit:

- DE1: Coding address 3A
- DE2: Coding address 3b
- DE3: Coding address 3C

Assigning the operating program changeover function to the heating circuits

Assign the operating program changeover function for the relevant heating circuit via coding address d8 in group "Heating circuit" at the boiler control unit:

- Changeover via input DE1: Code d8:1
- Changeover via input DE2: Code d8:2
- Changeover via input DE3: Code d8:3

Function description

External extensions (accessories) (cont.)

The effect of the operating program changeover is selected via coding address d5 in the **"Heating circuit"** group.

The duration of the changeover is set via coding address F2 in the **"Heating circuit"** group.

Effect of the external blocking function on the pumps

The effect on the internal circulation pump is selected in coding address 3E in the **"General"** group.

The effect on the respective heating circuit pump is selected in coding address d6 in the **"Heating circuit"** group.

The effect on a circulation pump for cylinder heating is selected in coding address 5E in the **"DHW"** group.

Effect of the external demand function on the pumps

The effect on the internal circulation pump is selected in coding address 3F in the **"General"** group.

The effect on the respective heating circuit pump is selected in coding address d7 in the **"Heating circuit"** group.

The effect on a circulation pump for cylinder heating is selected in coding address 5F in the **"DHW"** group.

DHW circulation pump runtime for brief operation

The DHW circulation pump is started by closing the contact at DE1, DE2 or DE3 by means of a pushbutton. The runtime is adjusted via coding address "3d" in the **"General"** group.

Analogue input 0 – 10 V

The 0 – 10 V hook-up provides an additional set boiler water temperature:

0 – 1 V is taken as "no default for set boiler water temperature".

1 V \triangleq Set value 10 °C

10 V \triangleq Set value 100 °C

Ensure DC separation between the earth conductor and the negative pole of the on-site voltage source.

Output 157

The following functions can be connected to output 157:

- Feed pump to substation
or
- DHW circulation pump
or
- Fault message facility

Function assignment

Select the function of output 157 via coding address "36" in the **"General"** group at the boiler control unit.

Control functions

External heating program changeover

The "External heating program changeover" function is connected via extension EA1. There are 3 inputs available at extension EA1 (DE1 to DE3).

The function is selected via the following coding addresses in the **"General"** group:

| Heating program - changeover | Code |
|------------------------------|------|
| Input DE1 | 3A:1 |
| Input DE2 | 3b:1 |
| Input DE3 | 3C:1 |

Select the heating program changeover function for the respective heating circuit via coding address "d8" in the **"Heating circuit"** group at the boiler control unit:

Control functions (cont.)

| Heating program - changeover | Code |
|------------------------------|------|
| Changeover via input DE1 | d8:1 |
| Changeover via input DE2 | d8:2 |
| Changeover via input DE3 | d8:3 |

You can select which direction the heating program changeover takes in coding address "d5" in the **"Heating circuit"** group:

| Heating program - changeover | Code |
|--|------|
| Changeover towards "Permanently reduced" or "Permanent standby" mode (subject to the selected set value) | d5:0 |
| Changeover towards "Constant heating mode" | d5:1 |

The duration of the heating program changeover is set via coding address "F2" in the **"Heating circuit"** group:

| Heating program - changeover | Code |
|--|------------------|
| No operating program changeover | F2:0 |
| Duration of the operating program changeover 1 to 12 hours | F2:1 to F2:12 |

The operating program changeover stays enabled for as long as the contact remains closed, but at least as long as the duration selected in coding address "F2".

External blocking

The "External blocking" and "External blocking and fault message input" functions are connected via extension EA1. There are 3 inputs available at extension EA1 (DE1 to DE3).

The function is selected via the following coding addresses in the **"General"** group:

| External blocking | Code |
|-------------------|------|
| Input DE1 | 3A:3 |
| Input DE2 | 3b:3 |
| Input DE3 | 3C:3 |

| External blocking and fault message input | Code |
|---|------|
| Input DE1 | 3A:4 |
| Input DE2 | 3b:4 |
| Input DE3 | 3C:4 |

The effect on the internal circulation pump is selected in coding address "3E" in the **"General"** group.

The effect on the respective heating circuit pump is selected in coding address "d6" in the **"Heating circuit"** group.

External demand

The "External demand" function is connected via extension EA1. There are 3 inputs available at extension EA1 (DE1 to DE3).

The function is selected via the following coding addresses in the **"General"** group:

Function description

Control functions (cont.)

| External demand | Code |
|-----------------|------|
| Input DE1 | 3A:2 |
| Input DE2 | 3b:2 |
| Input DE3 | 3C:2 |

The effect on the internal circulation pump is selected in coding address "3F" in the **"General"** group. The effect on the respective heating circuit pump is selected in coding address "d7" in the **"Heating circuit"** group.

The minimum set boiler water temperature in case of external demand is selected in coding address "9b" in the **"General"** group.

Venting program

During the venting program, the circulation pump will be alternately switched on and off for 30 s respectively over a period of 20 min.

The burner is switched off during the venting program. Activate venting program: See "Venting the heating system".

Screed drying

When activating screed drying, observe the information provided by the screed manufacturer. When screed drying is activated, the heating circuit pump of the mixer circuit is switched on and the flow temperature is held in accordance with the selected profile. After completion (30 days), the mixer circuit will again be regulated automatically via the set parameters.

Observe EN 1264. The report to be provided by the heating contractor must contain the following heat-up details:

- Heat-up data with respective flow temperatures
- Max. flow temperature achieved
- Operating conditions and outside temperature during handover

The various temperature profiles can be set via coding address "F1" in the **"Heating circuit"** group.

The function continues after power failure or after the control unit has been switched off. "Heating and DHW" is started when screed drying is finished or if code "F1:0" is set manually.

Temperature profile 1: (EN 1264-4) code "F1:1"

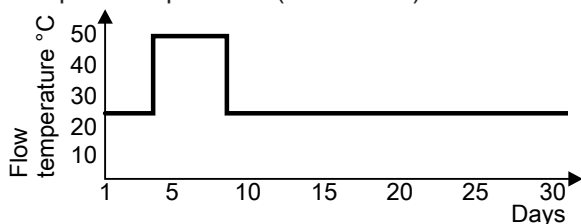


Fig. 61

Temperature profile 2: (ZV parquet and flooring technology) code "F1:2"

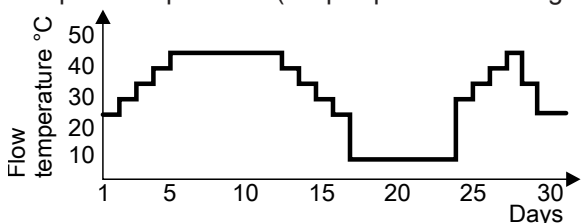


Fig. 62

Control functions (cont.)

Temperature profile 3: Code "F1:3"

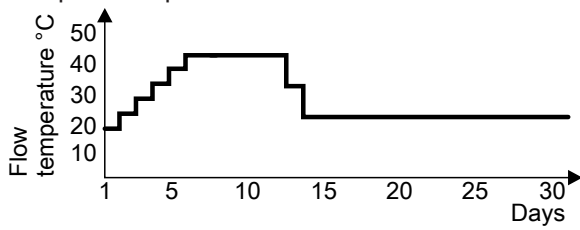


Fig. 63

Temperature profile 4: Code "F1:4"

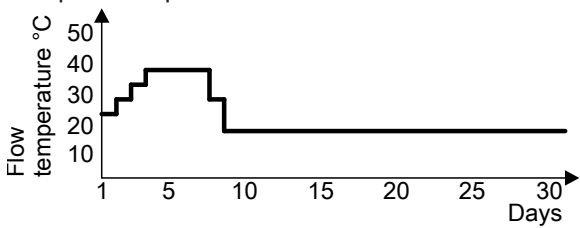


Fig. 64

Temperature profile 5: Code "F1:5"

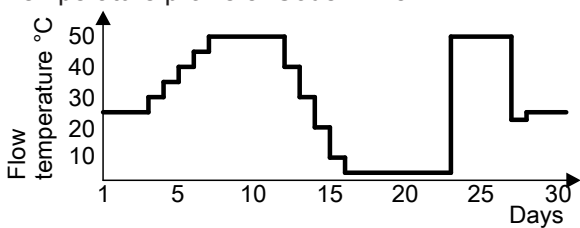


Fig. 65

Temperature profile 6: Code "F1:6"

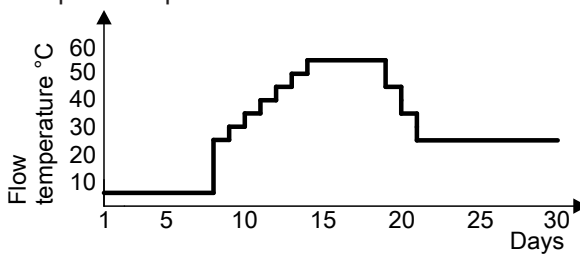


Fig. 66

Temperature profile 7: Code "F1:15"

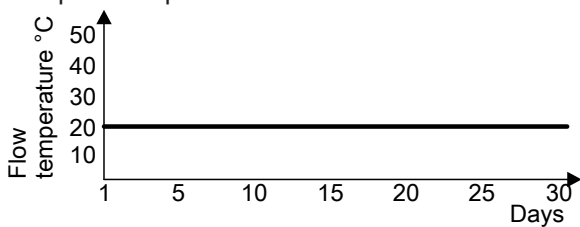


Fig. 67

Raising the reduced room temperature

During operation with reduced room temperature, the reduced set room temperature can be automatically raised subject to the outside temperature. The temperature is raised in accordance with the selected heating curve, but no higher than the set standard room temperature.

The outside temperature limits for the start and end of temperature raising can be set in coding addresses "F8" and "F9" in the **"Heating circuit"** group.

Example using the settings in the delivered condition

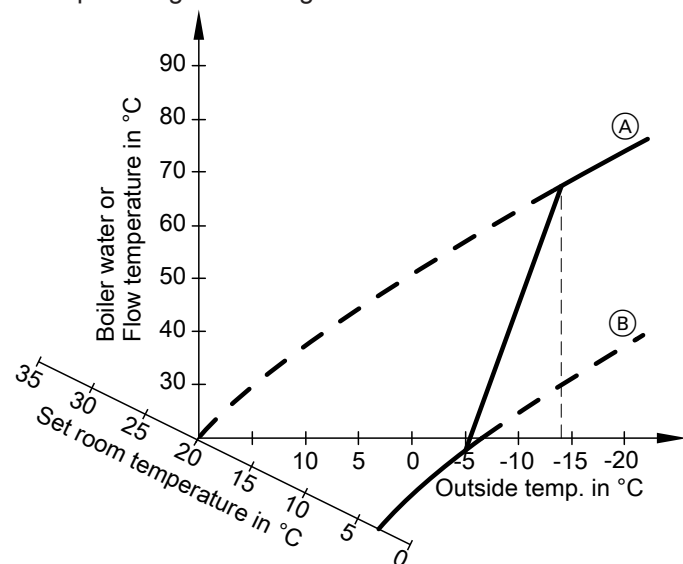


Fig. 68

- Ⓐ Heating curve for operation with standard room temperature
- Ⓑ Heating curve for operation with reduced room temperature

Reducing the heat-up time

During the transition from operation with reduced room temperature to operation with standard room temperature, the boiler water or flow temperature will be raised in accordance with the selected heating curve. The boiler water or flow temperature can be automatically increased.

The value and duration of the additional increase in the set boiler water or flow temperature can be set in coding addresses "FA" and "Fb" in the **"Heating circuit"** group.

Control functions (cont.)

Example using the settings in the delivered condition

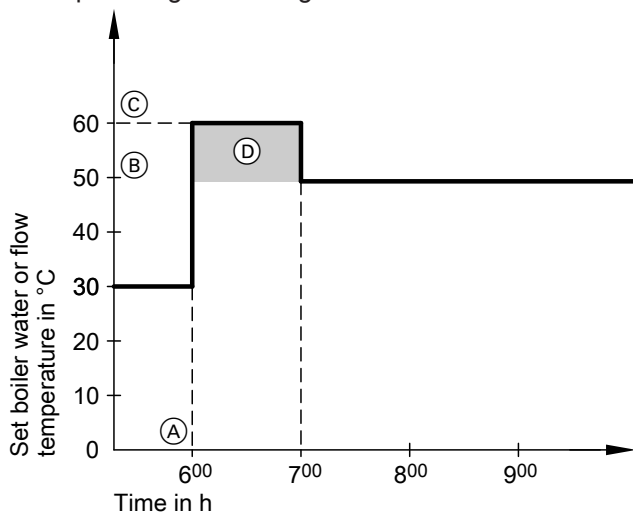


Fig. 69

- (A) Start of operation with standard room temperature
- (B) Set boiler water or flow temperature in accordance with the selected heating curve
- (C) Set boiler water or flow temperature in accordance with coding address "FA":
 $50\text{ °C} + 20\% = 60\text{ °C}$
- (D) Duration of operation with raised set boiler water or flow temperature in accordance with coding address "Fb":
 60 min

Assigning heating circuits to the remote control

The assignment of heating circuits must be configured during remote control commissioning.

| Remote control affects the following heating circuit | Configuration | |
|--|----------------------------------|----------------------------------|
| | Vitotrol 200A Vitotrol 200 RF | Vitotrol 300A Vitotrol 300 RF |
| Heating circuit without mixer A1 | H 1 | Heating circuit 1 |
| Heating circuit with mixer M2 | H 2 | Heating circuit 2 |
| Heating circuit with mixer M3 | H 3 | Heating circuit 3 |

Note

One heating circuit can be assigned to the Vitotrol 200A and 200 RF.

Up to three heating circuits can be assigned to the Vitotrol 300A and 300 RF.

A maximum of 2 hardwired remote control units or 3 wireless remote controls may be connected to the control unit.

If the assignment of a heating circuit is later cancelled, reset coding address "A0" in the "Heating circuit" group for this heating circuit to 0 (fault message bC, bd, bE).

Function description

Electronic combustion control unit

The electronic combustion controller utilises the physical correlation between the level of the ionisation current and the air ratio λ . The maximum ionisation current is achieved at an air ratio of 1 for all gas qualities. The ionisation signal is evaluated by the combustion controller and the air ratio is adjusted to a value between $\lambda=1.24$ and 1.44. This range provides for an optimum combustion quality. Thereafter, the electronic gas valve regulates the required gas volume subject to the prevailing gas quality.

To check the combustion quality, the CO₂ content or the O₂ content of the flue gas is measured. The prevailing air ratio is determined with the measured values. The relationship between the CO₂ or O₂ content and air ratio λ is illustrated in the following table.

Air ratio λ – CO₂/O₂ content

| Air ratio λ | O ₂ content (%) | CO ₂ content (%) for natural gas E | CO ₂ content (%) for natural gas LL | CO ₂ content (%) for LPG P |
|---------------------|----------------------------|---|--|---------------------------------------|
| 1.20 | 3.8 | 9.6 | 9.2 | 11.3 |
| 1.24 | 4.4 | 9.2 | 9.1 | 10.9 |
| 1.27 | 4.9 | 9.0 | 8.9 | 10.6 |
| 1.30 | 5.3 | 8.7 | 8.6 | 10.3 |
| 1.34 | 5.7 | 8.5 | 8.4 | 10.0 |
| 1.37 | 6.1 | 8.3 | 8.2 | 9.8 |
| 1.40 | 6.5 | 8.1 | 8.0 | 9.6 |
| 1.44 | 6.9 | 7.8 | 7.7 | 9.3 |
| 1.48 | 7.3 | 7.6 | 7.5 | 9.0 |

For optimum combustion control, the system regularly carries out an automatic self-calibration; also after a power failure (shutdown). For this, the combustion is briefly regulated to max. ionisation current (corresponding to air ratio $\lambda=1$). Automatic calibration is carried out shortly after the burner start and lasts approx. 5 s. During calibration, higher than normal CO emissions may occur briefly.

Connection and wiring diagram – Internal connections

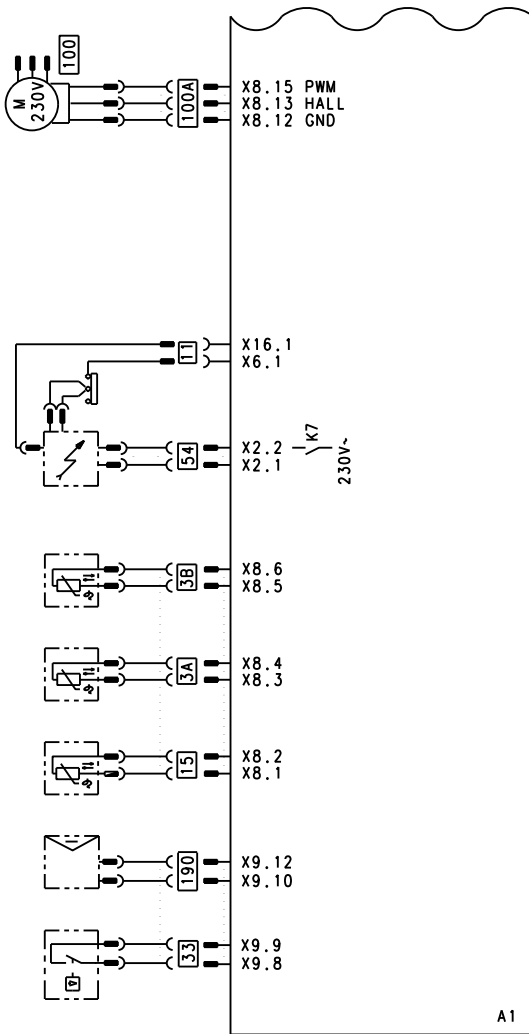


Fig. 70

- | | | | |
|------|---------------------------------|-------|-------------------|
| A1 | Main PCB | 33 | Flow switch |
| X... | Electrical interfaces | 54 | Ignition unit |
| 3A | Boiler water temperature sensor | 100 | Fan motor |
| 3B | Boiler water temperature sensor | 100 A | Fan motor control |
| 11 | Ionisation electrode | 190 | Modulation coil |
| 15 | Flue gas temperature sensor | | |

Service

Connection and wiring diagram – External connections

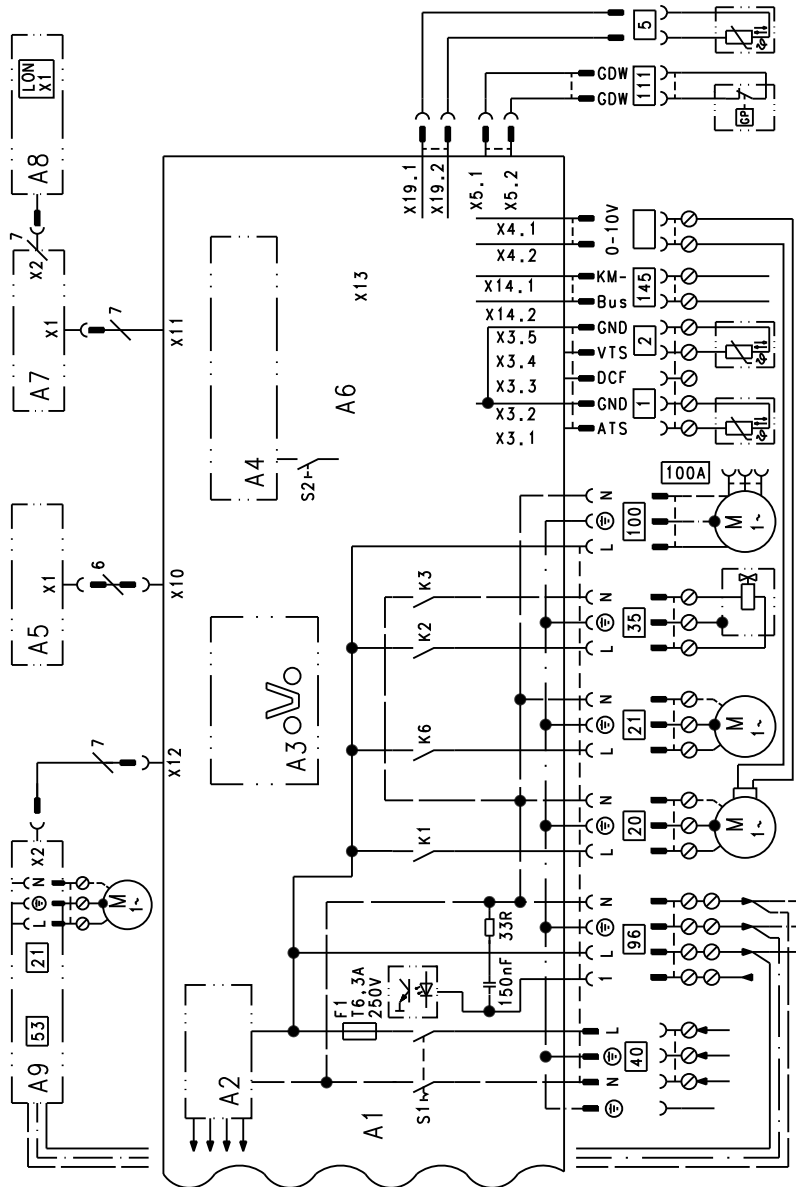


Fig. 71

- | | | | |
|------|--|-----|--|
| A1 | Main PCB | 2 | Flow temperature sensor, low loss header |
| A2 | Power supply unit | 5 | Cylinder temperature sensor (plug on the cable harness) |
| A3 | Optolink | 20 | Heating circuit pump or boiler circuit pump |
| A4 | Burner control unit | 21 | Circulation pump, optionally: <ul style="list-style-type: none"> ■ DHW circulation pump ■ External heating circuit pump ■ Circulation pump for cylinder heating |
| A5 | Programming unit | 35 | Gas solenoid valve |
| A6 | Coding card | 40 | Power supply |
| A7 | Connection adaptor | 96 | Power supply for accessories and Vitotrol 100 |
| A8 | LON communication module or cascade communication module | 100 | Fan motor |
| A9 | Internal extension (accessories) | 111 | Gas pressure switch |
| S1 | ON/OFF switch | 145 | KM BUS |
| S2 | Reset button | | |
| X... | Electrical interfaces | | |
| 1 | Outside temperature sensor | | |

Ordering parts

The following information is required:

- Serial no. (see type plate (A))
- Assembly (from this parts list)
- Position number of the individual part within the assembly (from this parts list)

Standard parts are available from your local supplier.

Overview of the assemblies

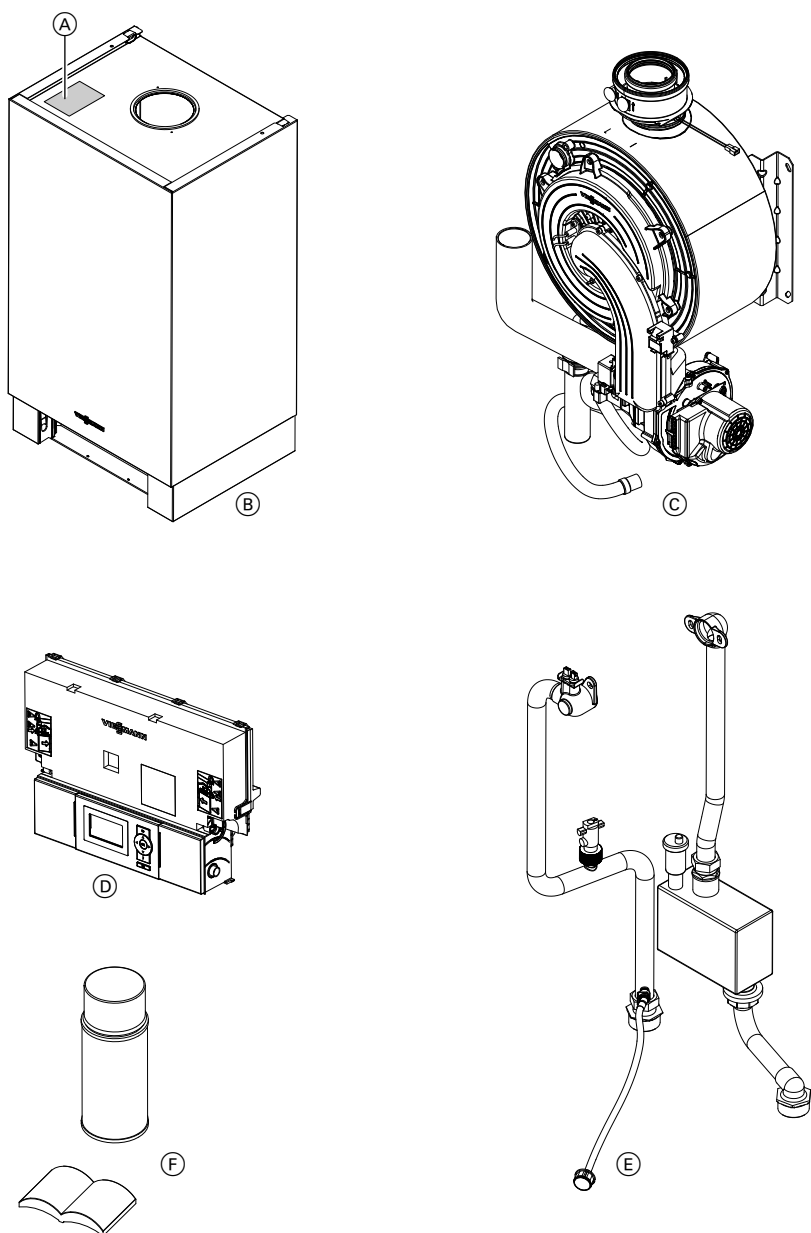


Fig. 72

- | | |
|---------------------------------------|---------------------------|
| (A) Type plate | (D) Control unit assembly |
| (B) Casing assembly | (E) Miscellaneous |
| (C) Heat cell assembly with burner | (F) Hydraulic assembly |

Parts lists

Casing assembly

- | | | | |
|------|-----------------------|------|----------------------|
| 0001 | Fixing clips | 0006 | Control unit support |
| 0002 | Viessmann logo | 0007 | Safety guard |
| 0003 | Wall mounting bracket | 0008 | Grommet set |
| 0004 | Cover panel | 0009 | Adjusting screw |
| 0005 | Front panel | | |

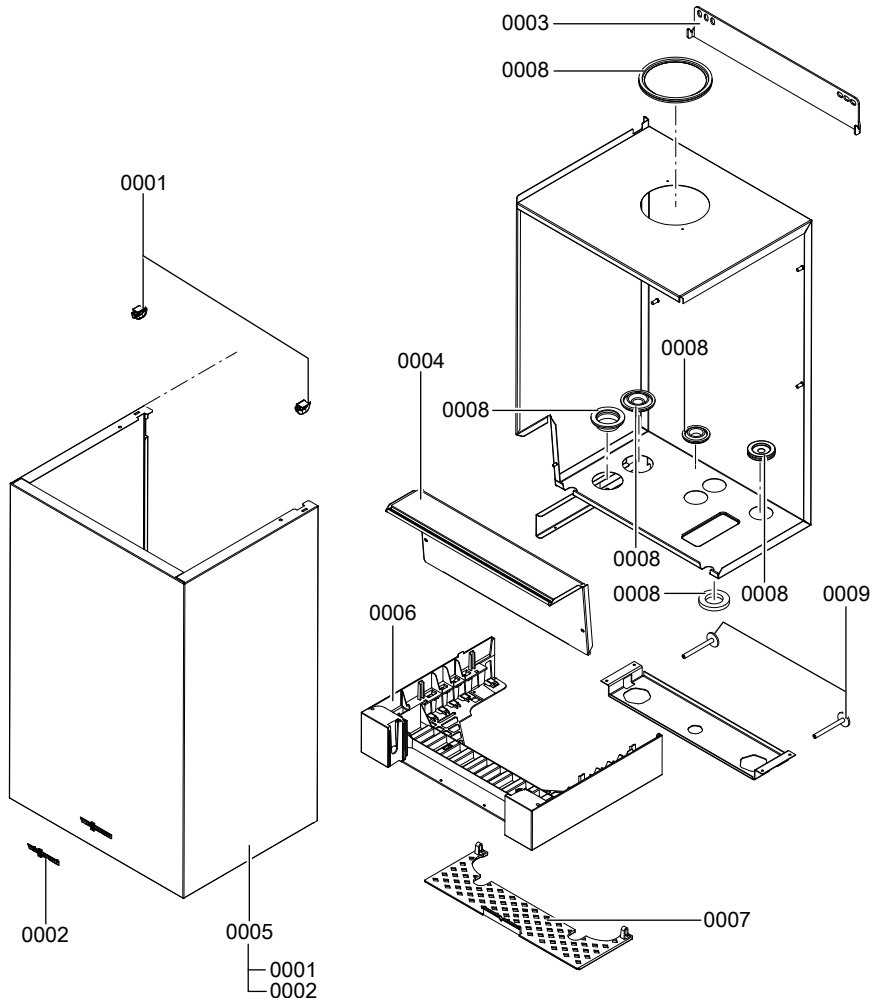


Fig. 73

Heat cell assembly

- | | | | |
|------|-------------------------------|------|-------------------------------|
| 0001 | Condensate hose | 0009 | Flue gasket |
| 0002 | Lip seal DN 80 | 0010 | Boiler flue connection 80/125 |
| 0003 | Ventilation air gasket DN 125 | 0011 | Thermal insulation block |
| 0004 | Boiler flue connection plug | 0012 | Siphon |
| 0005 | Flue gas temperature sensor | 0013 | Gasket A 16 x 24 x 2 (5 pce) |
| 0006 | Heat exchanger | 0014 | O-ring 35.4 x 3.6 (5 pce) |
| 0007 | Condensate hose | 0015 | Burner |
| 0008 | Gas pipe | | |

Heat cell assembly (cont.)

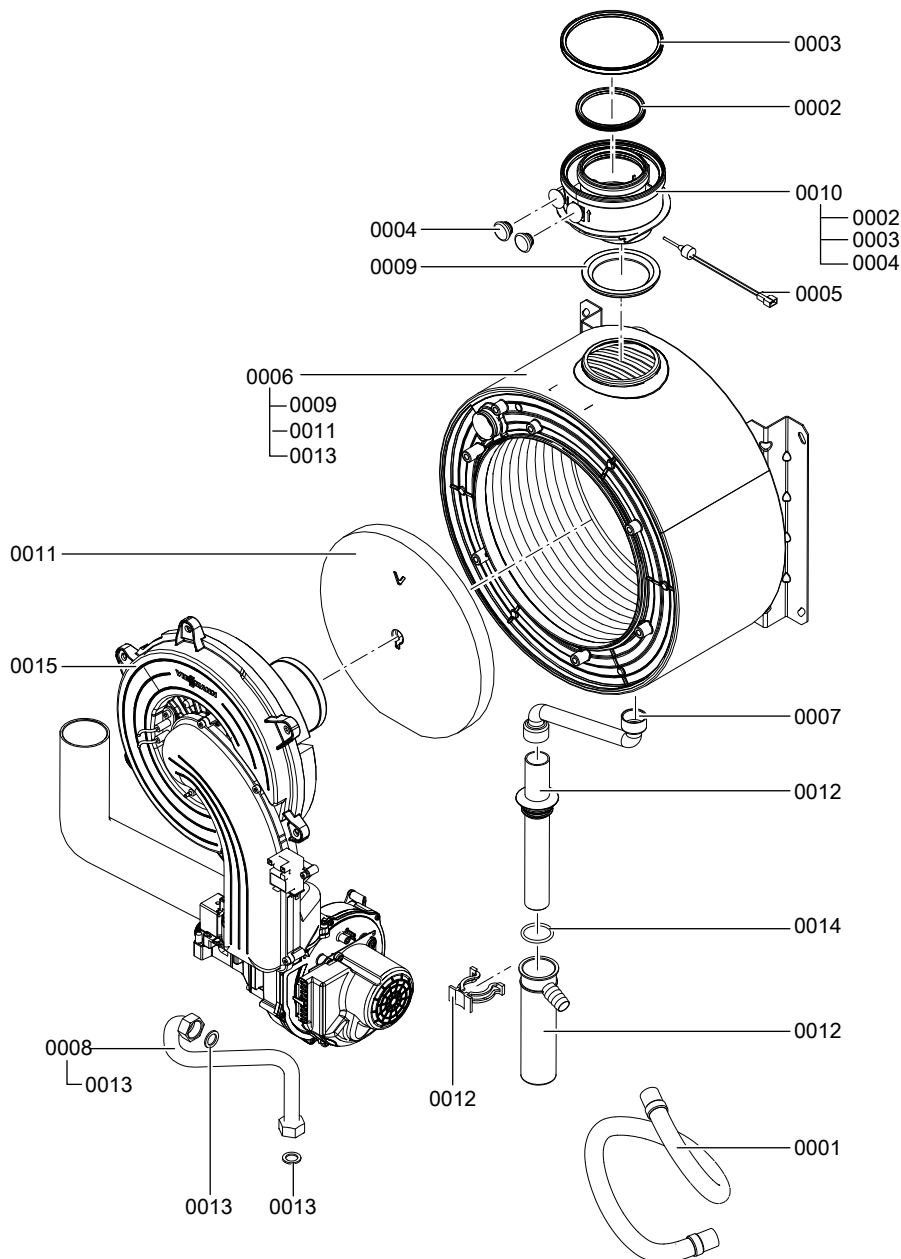


Fig. 74

Burner assembly

- | | |
|--|-------------------------------------|
| 0001 Gas train | 0009 Thermal insulation ring |
| 0002 Burner gasket | 0010 Flue gas non-return device |
| 0003 Burner gauze assembly gasket | 0011 Ignition electrode block |
| 0004 Burner door | 0012 Gas nozzle |
| 0005 Ignition electrode gasket (5 pce) | 0013 Cylinder burner gauze assembly |
| 0006 Ionisation electrode gasket (5 pce) | 0014 Radial fan |
| 0007 Ignition unit | 0015 Ionisation electrode |
| 0008 Venturi extension | 0016 Mixture restrictor |

Burner assembly (cont.)

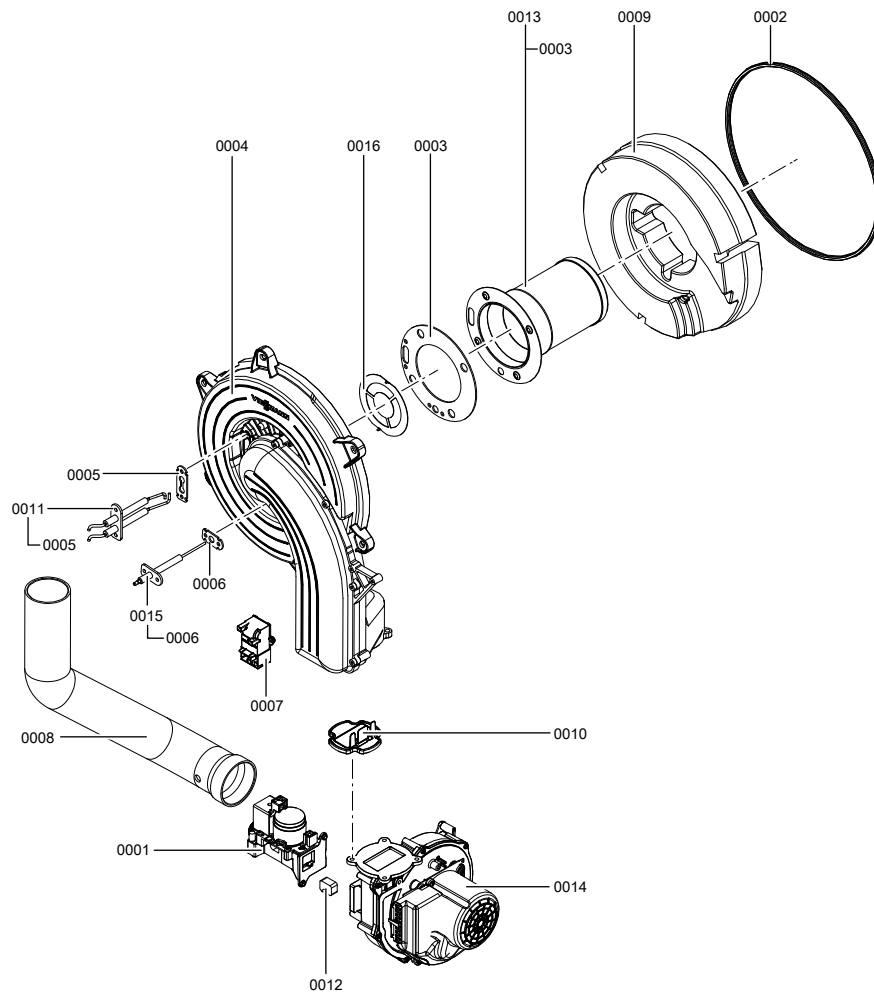


Fig. 75

Hydraulic assembly

- | | |
|---|---|
| 0001 Temperature sensor | 0008 Clip Ø 8 (5 pce) |
| 0002 Quick-action air vent valve G 3/8 | Heat exchanger connection pipe |
| 0004 O-ring 35.4 x 3.6 (5 pce) | 0009 Air vent container |
| 0005 Flow control switch | 0010 Heating water flow connection pipe |
| 0006 Heating water return connection pipe | 0011 Pressure gauge |
| 0007 Heating water return connection pipe | 0012 Gasket set 1 1/4 (5 pce) |

Hydraulic assembly (cont.)

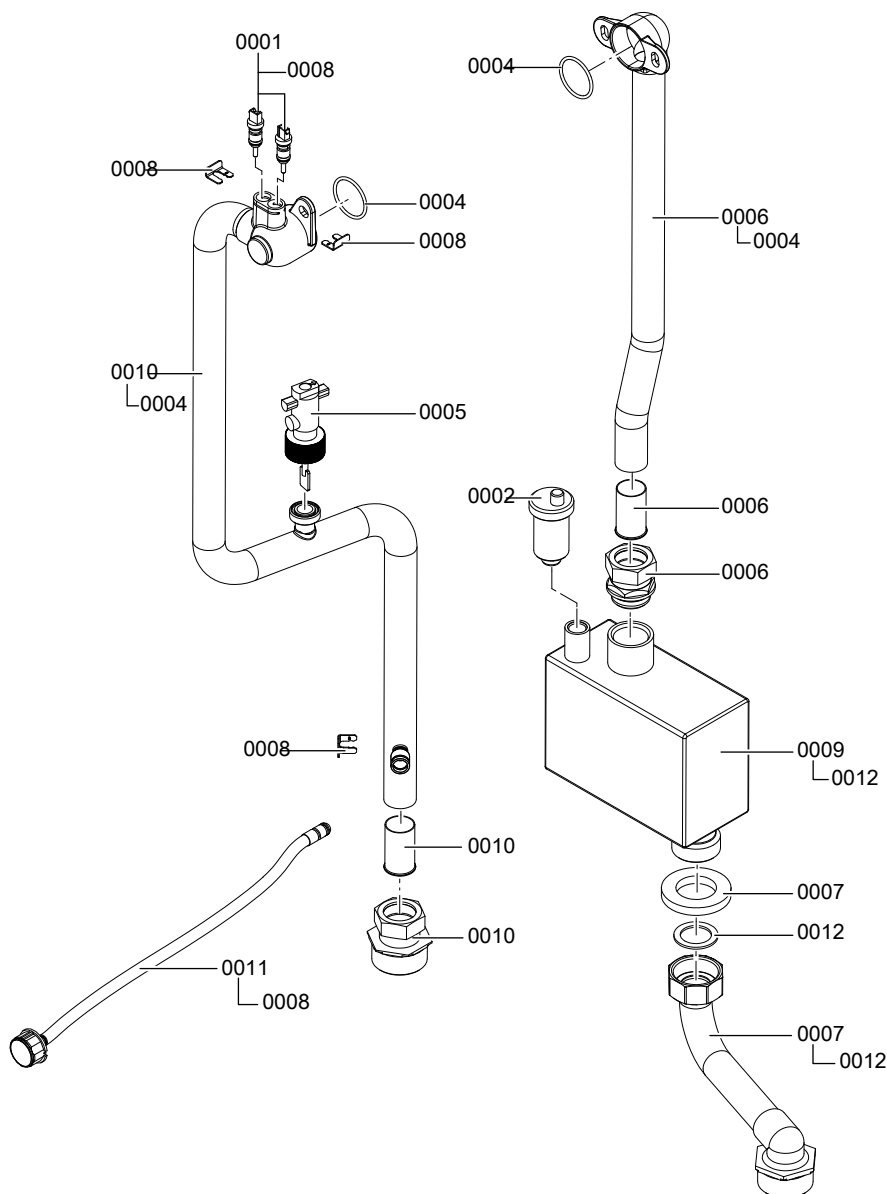


Fig. 76

Control unit assembly

- | | |
|---|---|
| 0001 Control unit | 0009 PCB adaptor |
| 0002 Control unit casing back panel | 0010 Cable harness X8/X9/ionisation |
| 0003 Coding card | 0011 Cable harness 100/35/54/earth |
| 0004 Fuse 6.3 A slow (10 pce) | 0013 Mating plug |
| 0005 Fuse holder | 0014 Cable fixing |
| 0006 Programming unit for weather-compensated mode | 0015 Locking bolts, left and right |
| 0007 Programming unit for constant temperature mode | 0017 Wireless outside temperature sensor |
| 0008 LON module | 0018 Outside temperature sensor (hardwired) |
| | 0020 Internal extension H1 |

Control unit assembly (cont.)

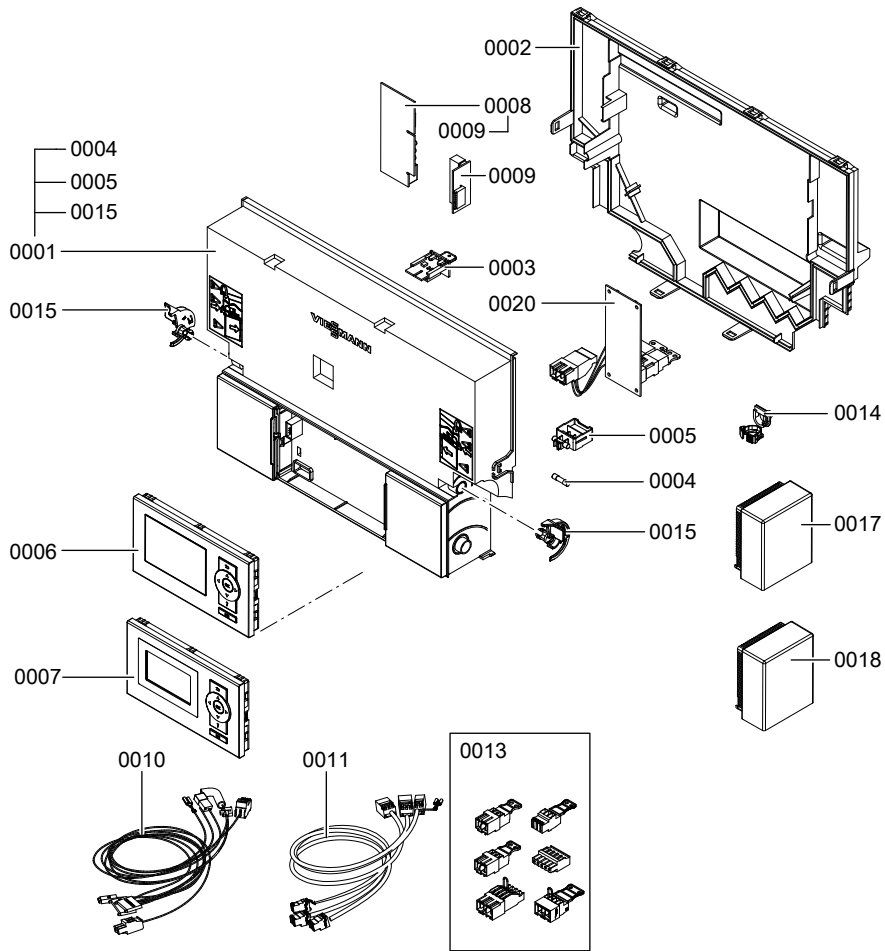


Fig. 77

Miscellaneous assembly

- 0001 Spray paint, Vitowhite
- 0002 Touch-up paint stick, Vitowhite
- 0003 Installation/service instructions
- 0004 Operating instructions for constant temperature mode
- 0005 Operating instructions for weather-compensated mode

Miscellaneous assembly (cont.)

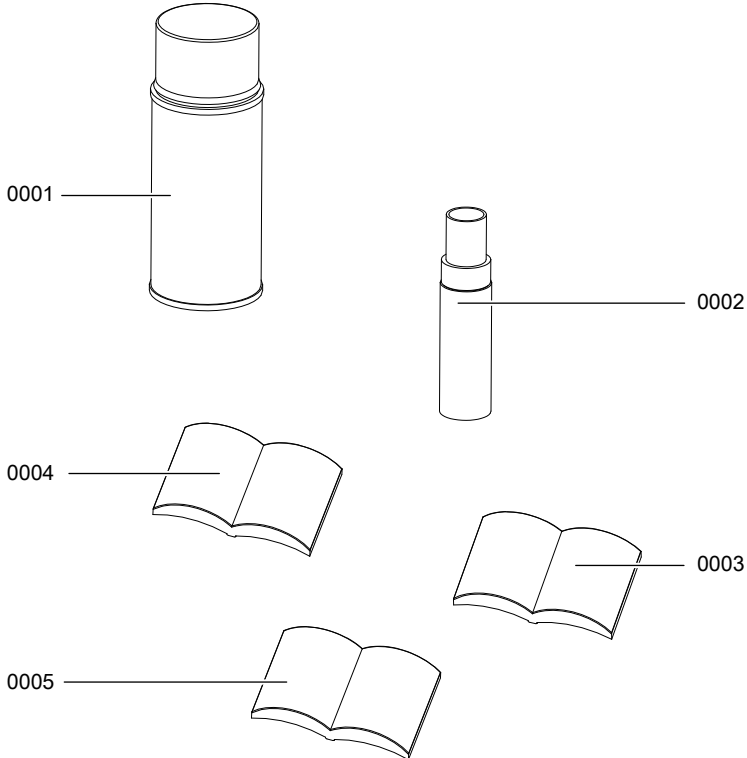


Fig. 78

Commissioning/service reports

| Settings and actual values | | Set value | Commissioning | Maintenance/ Service |
|--|---------------------------|------------------------|---------------|-------------------------|
| | Date | | | |
| | Signature | | | |
| Static pressure | <i>mbar</i> <i>kPa</i> | ≤ 57.5 ≤ 5.75 | | |
| Supply pressure (flow pressure) | | | | |
| <input type="checkbox"/> for natural gas E | <i>mbar</i> <i>kPa</i> | 17.4-25 1.74-2.5 | | |
| <input type="checkbox"/> for natural gas LL | <i>mbar</i> <i>kPa</i> | 17.4-25 1.74-2.5 | | |
| <input type="checkbox"/> for LPG | <i>mbar</i> <i>kPa</i> | 42.5-57.5 4.25-5.75 | | |
| <i>Tick gas type</i> | | | | |
| Carbon dioxide content CO₂ | | | | |
| For natural gas | | | | |
| ▪ At lower heating output | <i>% by vol.</i> | 7.5-9.5 | | |
| ▪ At upper heating output | <i>% by vol.</i> | 7.5-9.5 | | |
| For LPG | | | | |
| ▪ At lower heating output | <i>% by vol.</i> | 8.8-11.1 | | |
| ▪ At upper heating output | <i>% by vol.</i> | 8.8-11.1 | | |
| Oxygen content O₂ | | | | |
| ▪ At lower heating output | <i>% by vol.</i> | 4.0-7.6 | | |
| ▪ At upper heating output | <i>% by vol.</i> | 4.0-7.6 | | |
| Carbon monoxide content CO | | | | |
| ▪ At lower heating output | <i>ppm</i> | < 1000 | | |
| ▪ At upper heating output | <i>ppm</i> | < 1000 | | |

Specification

| | | | |
|------------------|----------------------|---|----------------|
| Rated voltage: | 230 V~ | Electronic temperature limiter setting: | 82 °C (fixed) |
| Rated frequency: | 50 Hz | Temperature limiter setting: | 100 °C (fixed) |
| Rated current: | 6.0 A | Backup fuse (power supply): | max. 16 A |
| Safety category: | I | | |
| IP rating: | IP X 4 D to EN 60529 | | |

Permissible ambient temperature

- During operation: 0 to +40 °C
- During storage and transport: -20 to +65 °C

Gas boiler, category II _{2N3P}

| | | | |
|--|-------------------|----------------|----------------|
| Rated heating output range T _V /T _R 50/30 °C | kW | 17 - 45 | 17 - 60 |
| Rated heat input range | kW | 16.1 - 42.2 | 16.1 - 56.2 |
| Power consumption in the delivered condition | W | 56 | 82 |
| Connection values Relative to the max. load with | | | |
| Natural gas E | m ³ /h | 4.47 | 5.95 |
| Natural gas LL | m ³ /h | 5.19 | 6.91 |
| LPG | kg/h | 3.30 | 4.39 |
| Product ID | CE 0085CN0050 | | |

Note

The connection values are only for documentation purposes (e.g. in the gas contract application) or to estimate a supplementary volumetric settings check. Due to the factory settings, the gas pressure must not be altered from these values. Reference: 15 °C, 1013 mbar (101.3 kPa).

Certificates

Declaration of conformity

Declaration of Conformity for the Vitodens 200-W

We, Viessmann Werke GmbH & Co KG, D-35107 Allendorf, confirm as sole responsible body that the product **Vitodens 200-W** complies with the following standards:

| | |
|--------------|-----------------|
| EN 625 | EN 60 335-1 |
| EN 677 | EN 60 335-2-102 |
| EN 806 | EN 61 000-3-2 |
| EN 15502-2-1 | EN 61 000-3-3 |
| EN 55 014 | EN 62 233 |

In accordance with the following Directives, this product is designated with **CE-0085**:

| | |
|-------------|-------------|
| 92/42/EEC | 2006/95/EC |
| 2004/108/EC | 2009/142/EC |

This product meets the requirements of the Efficiency Directive (92/42/EEC) for **condensing boilers**.

Allendorf, 1 February 2013

Viessmann Werke GmbH&Co KG



Authorised signatory Manfred Sommer

Manufacturer's certificate according to the 1st BImSchV [Germany]

We, Viessmann Werke GmbH & Co KG, D-35107 Allendorf, confirm that the product **Vitodens 200-W** complies with the NO_x limits specified by the 1st BImSchV § 6 [Germany].

Allendorf, 1 February 2013

Viessmann Werke GmbH&Co KG



Authorised signatory Manfred Sommer

Keyword index

- A**
Acknowledging a fault display..... 76
- B**
Boiler, opening..... 22
Boiler water temperature sensor 87
Boosting DHW heating..... 92
Brief scans..... 71
Burner gauze assembly..... 31, 32
Burner installation..... 33
Burner removal..... 30
- C**
Calling up fault messages..... 77
Cleaning the combustion chamber..... 33
Code 1
– Calling up..... 45
Code 2
– Calling up..... 54
Codes for commissioning..... 35
Combustion controller..... 102
Commissioning..... 22
Condensate drain..... 33
Cylinder temperature sensor 87
- D**
Date, setting..... 24
Diaphragm expansion vessel..... 34
- E**
Electronic combustion controller..... 102
Extension
– AM1..... 94
– EA1..... 95
– Internal H1..... 92
– Internal H2..... 93
Extension kit for heating circuit with mixer 89
External blocking..... 97
External demand..... 97
- F**
Fault codes..... 77
Fault history..... 76
Fault manager..... 42
Fault memory..... 76, 77
Fault messages, calling up..... 76
Faults..... 76
Faults without fault display..... 85
Filling the system..... 22
Fill water..... 22
Flue gas temperature sensor..... 88
Function description..... 91
Function testing..... 74
Fuse..... 89
- G**
Gas supply pressure..... 28
Gas train 28
Gas type..... 25
Gas type conversion..... 26
- H**
Heating circuit assignment..... 101
Heating curve..... 40
Heating curve level..... 41
Heating curve slope..... 41
Heating output, setting..... 29
Heating program changeover..... 96
Heat-up time..... 100
- I**
Ignition..... 32
Ignition electrodes..... 32
Ionisation electrode..... 32
- L**
Language selection..... 23
LON..... 42
– Fault monitoring..... 43
– Setting subscriber numbers..... 42
– Subscriber check..... 43
LON communication module..... 42
- M**
Manufacturer's certificate 114
Mixer open/closed..... 89
- O**
Operating conditions, scanning..... 70
Operating data, scanning..... 70
Outside temperature sensor..... 86
- R**
Reduced room temperature raising..... 100
Reduced set room temperature..... 41
Reducing the heat-up output..... 100
Reducing the heat-up time..... 100
Relay test..... 74
Remote control..... 101
Removing a fault display..... 76
Report..... 112
Rotational direction, mixer motor
– Checking..... 89
Rotational direction of mixer motor
– Changing..... 90
- S**
Screed drying..... 98
Screed drying function..... 98
Service level, calling up..... 70
Service menu, calling up..... 70
Set room temperature selection..... 41
Siphon..... 25, 33
Specification 113
Standard set room temperature..... 41
Static pressure..... 28
Supply pressure..... 27
System pressure..... 22
System schemes..... 35, 45

Keyword index

Keyword index (cont.)

| | | | |
|---|----|-----------------------|--------|
| T | | Vitocom 200..... | 42 |
| Tightness test, balanced flue system..... | 29 | Vitotronic 200-H..... | 42, 90 |
| Time, setting..... | 24 | | |
| V | | W | |
| Venting..... | 23 | Wiring diagram..... | 103 |
| Venting program..... | 98 | | |

Applicability

These service instructions apply for appliances with the following serial numbers (see type plate):

7510390

7510391

Viessmann Werke GmbH&Co KG
D-35107 Allendorf
Telephone: +49 6452 70-0
Fax: +49 6452 70-2780
www.viessmann.com

Viessmann Limited
Hortonwood 30, Telford
Shropshire, TF1 7YP, GB
Telephone: +44 1952 675000
Fax: +44 1952 675040
E-mail: info-uk@viessmann.com

5623 715 GB Subject to technical modifications.